




Nº 165 Service Bulletin

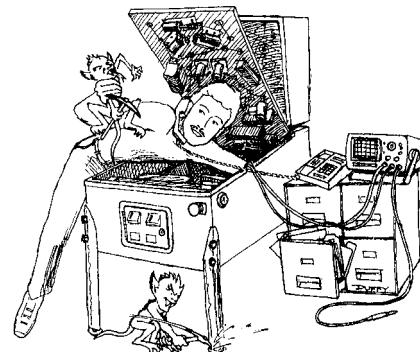

Joe Blackwell
Director, Parts Sales & Technical Support

Chas Siddiqi
Technical Support Engineer

Patrick Powers
Technical Support Engineer

Dorothy Brown
Parts Sales and Stock Room

J. Alfer
Technical Support Documentation Administrator

TO: Parts & Service Managers

DATE: September 19, 2006

SUBJ: World Poker Tour™ (WPT)
Drop Target(s) May Not Reset Properly



Symptom :

One or more drop targets **consistently** do not stay in the raised position when the 4-Bank and/or 8-Bank Drop Target Assemblies are reset or it takes multiple Coil Reset actuations until they all stay up. In addition, if the pinball is served into the Shooter Lane, it will be immediately kicked by the autoplunger.

Note: Prior to v1.11, programming assumes ball in play if the 3 or more drop targets dropped while the ball is being served into the Shooter Lane; With v1.11+, the game will not launch the ball if it sees 3 or more drop targets down, however, will spot those targets as being scored (lit).

Explanation :

The individual target(s) may not get pushed firmly against the Target Rest Ledge (black plastic strip) by the Compression (short) Spring as the strengths may vary slightly from spring to spring.

Solution :

Raise the ledge higher by 1/16" by adding #4 (5/16" O.D. X 1/8" I.D.) X 1/16" Thick Washers* (242-5017-00) **between** the Frame (515-7547-04-88) and the Target Rest Ledge (Black) Plastic Piece (545-6163-04) at each screw point.

* Recommended washer. Can use any size as long as the thickness **does not exceed** the recommended 1/16".

Please phone or eMail with any questions or comments to the below address.

