


Bicycle Girl Ramp Modification Instruction Sheet

KIT CONTENTS


- (4) Foam Pads
 - (1) Mylar
 - (1) Ramp Cover
 - (1) Instruction Sheet
-
- Lift ramp as shown to apply foam pads and to remove and replace the Mylar if necessary.

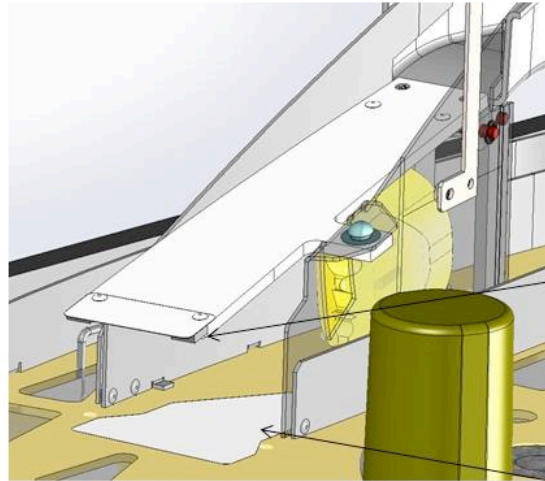

FOAM PAD
626-5029-01

MYLAR
820-8362-00

- Apply foam pads in the position as shown
- Apply the replacement Mylar in the location indicated.

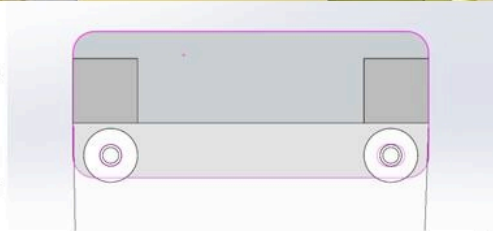

755-7519-00

Note: To replace Mylar from playfield, apply low heat from a hairdryer for easy removal.

BICYCLE GIRL RAMP ENTRANCE COVER RETROFIT

