

Optional Kits available through your Distributor:

Flipper Rebuild Kit (Left) 500-6307-10

Flipper Base Plate Kit (Left) 515-6617-01

Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.

Flipper Rebuild Kit (Right) 500-6307-00

Flipper Base Plate Kit (Right) 515-6617-00

Kit includes: Flipper Base Plate (Left) pre-threaded with securing hardware; see the Flipper Drawing for view.

Pinball Location Maintenance Standard Kit (for Tron Pinball) 502-6002-B9

Standard Kit includes : 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. Note: Quantities, sizes and contents subject to change without notice.

Pinball Location Maintenance Deluxe Kit (for Tron Pinball) 502-6003-B9

Deluxe Kit includes : Pinball Location Maintenance Standard Kit as described above plus a quantity of Flipper Rebuild Kits. Note: Quantity varies which equals the same quantity of flippers used in this game.

▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲

Plastics*Kit (for Tron Pinball) 802-5000-B9

Plastics Kit includes: Plastic Sets (830-6124-XX)

Decals*Kit (for Tron Pinball) 802-5000-B9

Decals Kit includes: Decal Set (820-6588-XX)

Mylar*Kit (for Tron Pinball) 802-5001-B9

Mylar Kit includes: Pop Bumper (820-6589-00)

***Attention:** No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.

Ball Shooter (Plunger) Assembly, 500-6146-00-04 (Items 1-6)



Nr.	BALL SHOOTER PARTS	QTY.	SPI PART Nr.
1	Housing Asm. + Bushings (Item 4)	1	535-5067-02
2	Rod Assembly (with Black Knob)	1	515-6557-00
3	Comp. Spring (Short) (Knob Side)	1	266-5010-00
4	Bushing, 3/8" I.D. (Oilite)	2	280-5010-00
5	Comp. Spring (Long) [GREEN, .035" ø]	1	266-5001-04
6	Rubber (Plunger) Tip (Black 50 Duro)	1	545-5276-00



Ordering Note: If 500-6146-00-04 is unavailable, order the individual part(s) actually required. ... Identical to 500-6146-00-07 has Comp. Spring [Orange, .038" ø] (266-5001-07) or 500-6146-00-05 has Comp. Spring [Blue, .031" ø] (266-5001-05).

Autoplunger Arm Weld Asm., 500-6091-00 (Items 1-5), Autoplunger Coil Assembly, 500-6092-02-ND (Items 6-9) and Shooter Lane Switch Assembly, 500-6096-00 (Items 10-12)

Nr.	AUTOPL. ARM WELD PARTS	QTY.	SPI PART Nr.
1	Arm Weld Assembly	1	515-6526-00
2	Autoplunger Fulcrum	1	535-7697-00
3	Nyliner, 1/4" (Thomson #411-FF)	2	545-5423-00
4	Plunger & Link Assembly	0	511-5183-00
5	Compression (Return) Spring	1	266-5020-00

Nr.	AUTOPLNGR. COIL PARTS	QTY.	SPI PART Nr.
6	Autoplunger Coil Bracket Assembly	1	515-6527-00
7	Coil Retainer Bracket	1	535-5203-03
8	Coil, 24-940 [NO DIODE]	1	090-5036-ND
9	Coil Sleeve	1	545-5031-00


Nr.	SWITCH PARTS	QTY.	SPI PART Nr.
10	Switch (for Shooter Lane)	1	180-5157-00
11	Switch Mounting Bracket	1	535-6173-00
12	Switch Body Protect Plate	14	535-6539-00

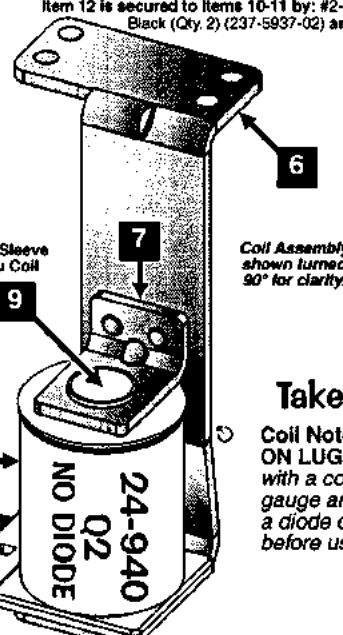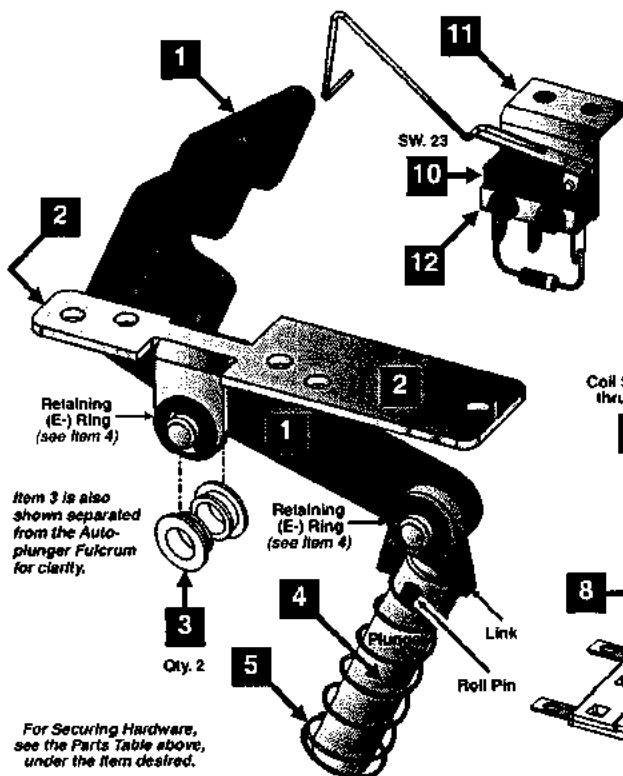

For Securing Hardware, see the Parts Table above, under the item desired.

Take Note:


Coil Note: NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn & it has a diode on it, remove it before using.

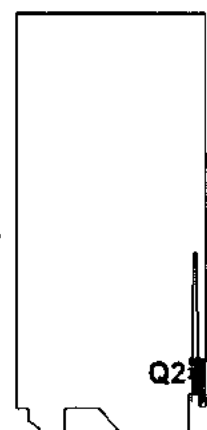

4-Ball Trough Assembly, 500-6318-24-ND (Items 1-13) and Associated Parts: See Parts Table Below.

Ordering Note: Identical to 500-6318-14 with exceptions, see note below Item 13 (Parts Table).


Nr.	4-BALL TROUGH PARTS	QTY.	SPI PART Nr.	Nr.	4-BALL TROUGH PARTS	QTY.	SPI PART Nr.
1	Ball Trough Outhole Mounting Bracket <small>Item 1 is secured below the playfield by: #8 X 1/2" SHWH AB (Zc.) (Qty. 4) (234-5101-00)</small>	1	515-6580-01	11	Trough Ball Guide Plate <small>Item 11 is secured to Item 1 by: 1/4" X 5/16" X .144" I.D. Spacer Top. (Qty. 1) (254-5014-03) and #2-56 X 1/2" HWH (Ser) UNS #4HD TR3 BO (Qty. 4) (237-5937-02)</small>	1	535-7801-00
2	Coil Mounting Bracket <small>Item 2 is secured to Item 1 by: #8-32 X 3/8" HWH Swage (Sr.) Zinc (Qty. 4) (237-5975-00)</small>	1	535-7330-01	12	Dual OPTO TRANS Board Assembly	1	515-0173-00
3	Coil Retaining Bracket <small>Item 3 is secured to Item 2 by: #6-32 X 1/4" SHWH (Ser) Zinc (Qty. 2) (237-5975-04)</small>	1	535-5203-03	13	Dual OPTO REC Board Assembly <small>Items 12 & 13 are secured by: #6-32 X 5/8" HWH Swag (Ser) Zc. (Qty. 3/par) (237-5978-04) For Individual Items use: Dual OPTO Transmitter Board (Qty. 1) (520-5173-00), Dual OPTO Receiver Board (Qty. 1) (520-5174-00), OPTO PCB Tube Spacer (Brass) (Qty. 3/par) (530-5308-02) and OPTO PCB Rubber Grommet (Qty. 3/par) (545-5518-00)</small>	1	515-0174-00
4	Coil, 24-910 [NO DIODE] <small>COIL DOES NOT REQUIRE A DIODE. SEE Ⓢ COIL NOTE BELOW FOR DETAILS.</small>	1	090-5036-ND	Ordering Note: If 500-6318-24-ND is unavailable, order the individual part(s) actually required. This assembly is identical to 500-6318-14-ND, -15 or -25 except for the quantity of Items 9 & 10 (Qty. 4/par on 5-Ball Trough) and Item 11, required when a Magnet Mech. is used in the game. -ND means no diode on Item 4, Coil, 24-910.			
5	Coil Sleeve (Short) (Formot #10-7077)	1	545-5076-01	ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.			
6	Steel & Nylon Plunger Asm. (3.57")	1	515-7309-01	Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
7	Compression (Return) Spring	1	266-5020-00	AP-A	Ball Trough Enter / Exit Scoop <small>Item AP-A secured to the playfield by: #8 X 1/2" SHWH AB (Zinc) (Qty. 4) (234-5101-00).</small>	1	535-7329-01
8	Rubber Bumper (Grommet)	1	545-5105-00	AP-B	Steel Balls (1 1/16" ⌀)	4	260-5000-00
9	Micro Switch (Roller Actuator, Lite-Force) <small>Item 9 requires: Heat Shrink Tubing 1/8" & PUH-24 (Qty. 1"/par) (605-6006-00)</small>	3	180-5119-02				
10	Switch Body Protect Plate <small>Switch has a Diode (1N4004) (112-5003-00). Can be replaced with (1N4001) (112-5001-00)</small>	3	535-6539-00				

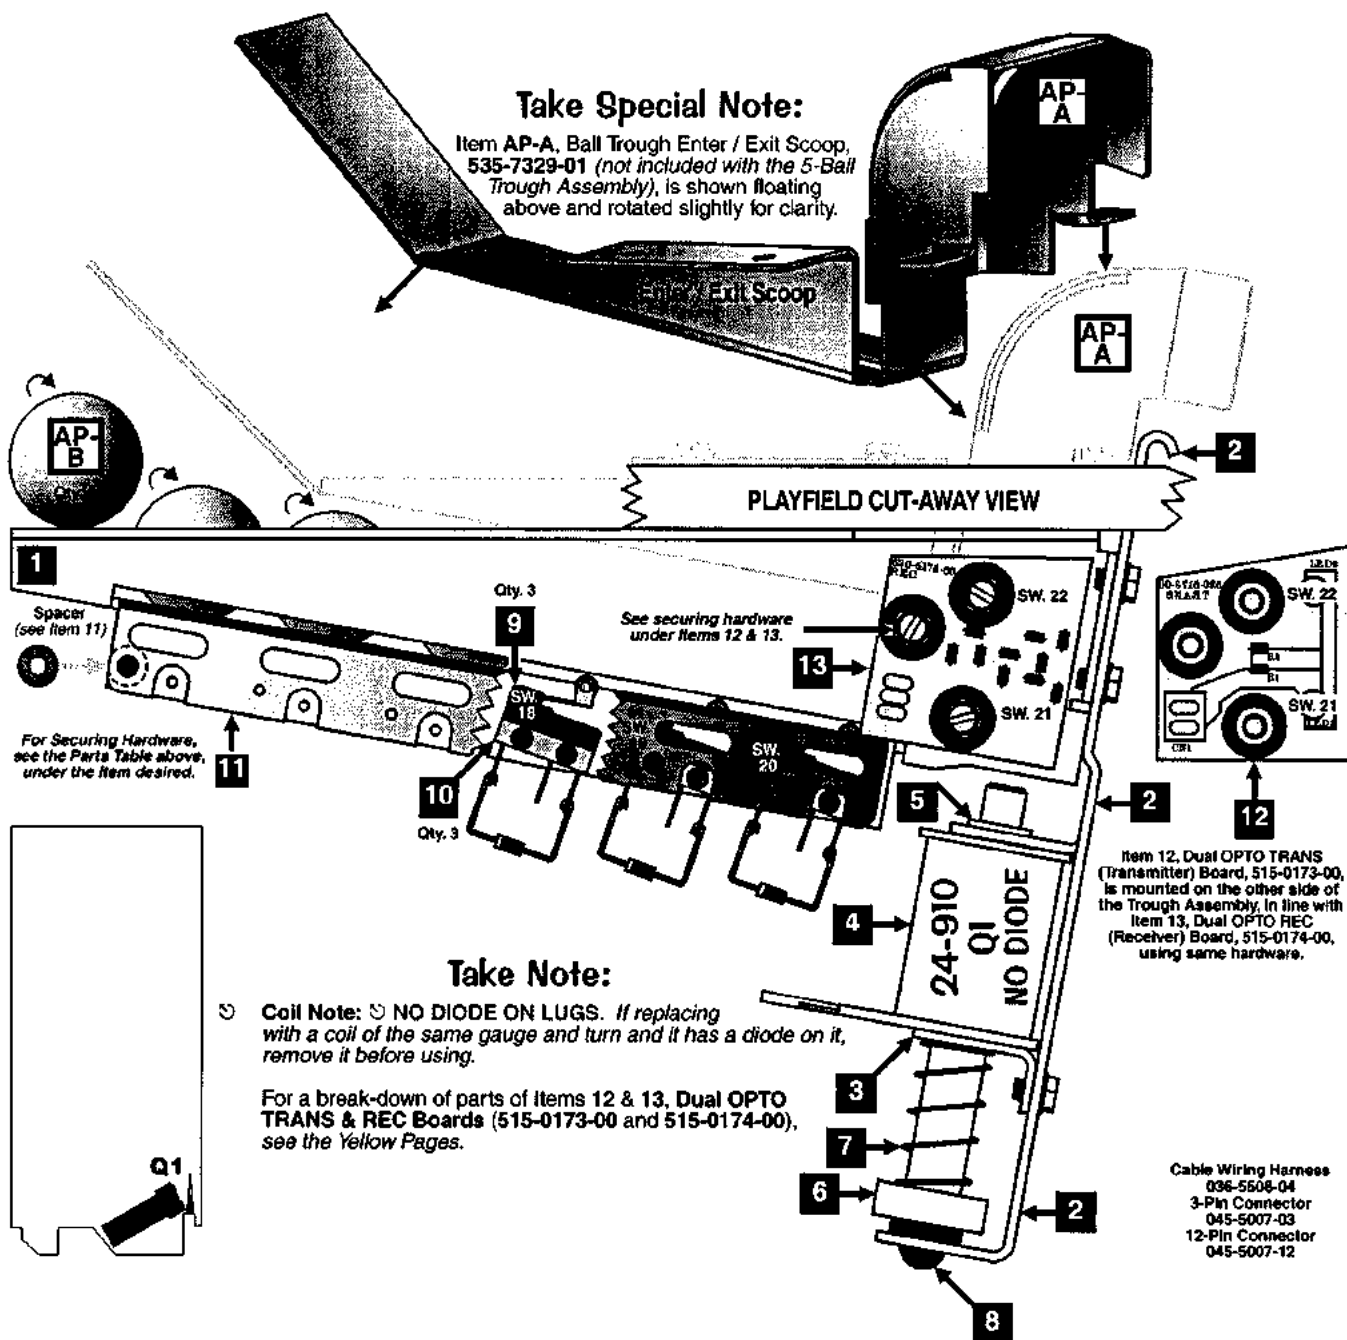

Flipper (Left) Assembly, 500-6543-15-ND (Items 1-15) **and Associated Parts: White Flipper Bat & Shaft Asm., 515-5133-08-06 (Items AP-A / AP-B)**

Nr.	FLIPPER (LEFT) PARTS	QTY.	SPI PART Nr.
1	Flipper Base Plate (LEFT)	1	See FRP1
Item 1 is secured below by: #8 X 1/2" SHWH AB (Zinc) (Qty. 8) (234-5101-00) <i>Ordering Note: Individual Part (535-7275-01) is not prethreaded, see Item FRP1.</i>			
2	Flipper Bat Bushing (White Plastic) .25" ID	1	545-5070-00
Item 2 is secured to Item 1 by: #6-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 3) (237-5976-02)			
3	Power (EOS / End-of-Stroke) Switch	1	180-5149-00
Item 3 is secured to Item 1 by: #6-32 X 5/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-04)			
4	Sw. Plate/Spring Return Brkt. (LEFT)	1	535-7354-01
5	Flipper Return Spring	1	265-5035-00
6	Coil Stop Bracket Sub-Assembly	1	515-6308-01
Item 6 is secured to Item 1 by: #10-32 X 3/8" SHWH Swage (Ser.) Zinc (Qty. 2) (237-5985-00) and #10 Split Lock Washer (Qty. 2) (244-5003-00)			
7	Spring Washer (17/32" ID X 3/4" X 1")	1	269-5002-00
8	Coil Support Bracket	1	535-7356-00
Item 8 is secured to Item 1 by: #8-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5975-00)			
9	Coil, 23-1500 (NO DIODE) BLUE	1	090-5062-ND
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE BELOW FOR DETAILS.			
10	Coil Sleeve	1	545-5388-00
11	Deflector Pad (Bumper)	1	545-5428-00
12	Flipper Plunger & Link Sub-Assy.	1	515-6304-03
For individual items use: Flipper Plunger (530-5349-01) and Plunger "Flipper" Link (545-5611-01) and is secured to the Plunger by: Bushing .16" ID X .281" OD X .18" (Qty. 1) (530-5532-00) and Spiral Pin # 5/32" X 3/4" Lg. (Qty. 1) (251-5015-02)			
13	Crank Bar (Pawl)	1	530-5070-02
Item 13 requires: Bushing .192" ID X .312" OD X .195" (Qty. 1) (530-5139-00)			
14®	Switch Actuator (LEFT) Sub-Assy.	1	515-7257-01
For individual items use: Actuator & Spring Bracket (LEFT) (535-9038-01) and Switch Actuator (White Plastic) (545-5612-00) and is secured to the Bracket by: Rivet, 1/8" x 1/4" Lg. (Qty. 1) (249-5003-00)			
15	Set Screw: #10-32 X 3/4" Socket Hd.	2	237-6144-00
Item 15 requires: #10-32 Nylon Stop Nut (Qty. 1) Flipper Link Side Only (240-5203-00) and #10 Split Lock Washer (Qty. 1) Switch Actuator Side Only (244-5003-00) Tool required for Item 15: 5/32" or 4mm Allen Wrench			

Item 14® is also shown separated from Item 13, Crank Bar, for clarity.

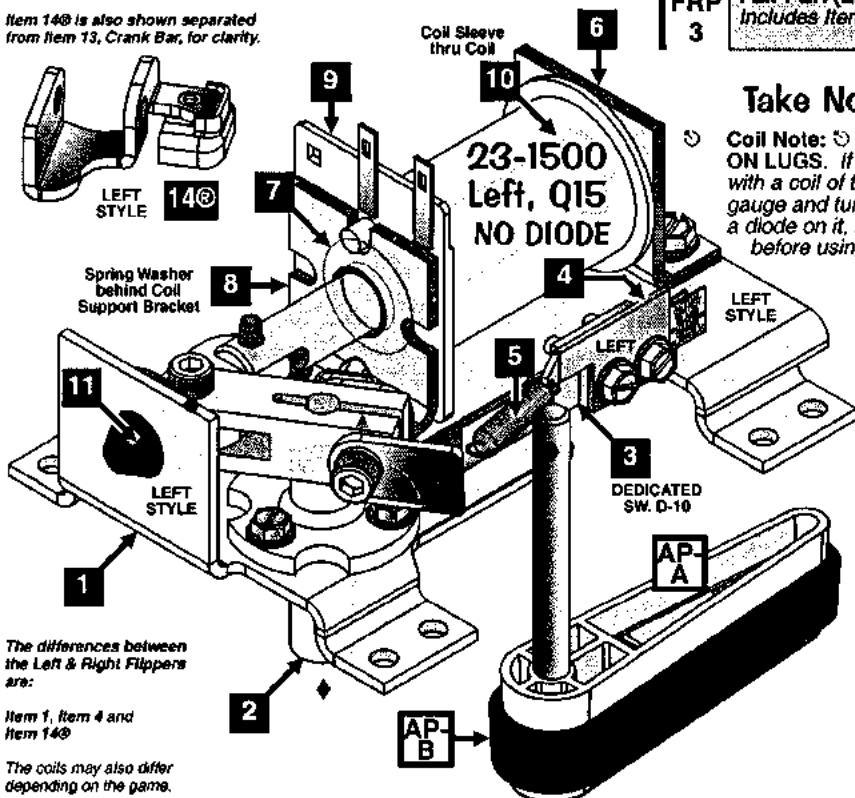

The differences between the Left & Right Flippers are:

Item 1, Item 4 and Item 14®


The coils may also differ depending on the game.

ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.

Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
AP-A	Yellow Flipper Bat & Shaft Asm. (Non-Knurled End) <u>without Rubber Ring</u>	1	515-5133-06-06
AP-B	Large FlipperBlack Rubber Ring	3	545-5277-00

Flipper Rebuild Parts for Easier Installation, Save \$:

FRP 1 FLIPPER BASE PLATE KIT (LEFT):
Includes Item 1 pre-threaded >< Securing Hardware for Items 2, 3, 6 & 8. **515-6617-01**

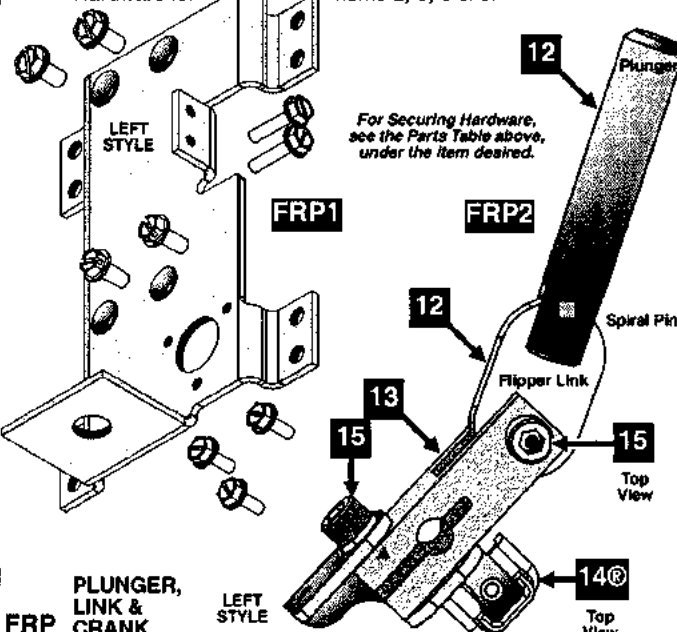


FRP 2 PLUNGER, LINK & CRANK (LEFT STYLE) ASSEMBLY: Includes Items 12, 13, 14 & 15 (comes assembled). **515-7203-01**

FRP 3 FLIPPER (LEFT) REBUILD KIT:
Includes Items 6, 10 AND above FRP2 **500-6307-10**

Take Note:

⌚ **Coil Note:** ⌚ NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn & it has a diode on it, remove it before using.

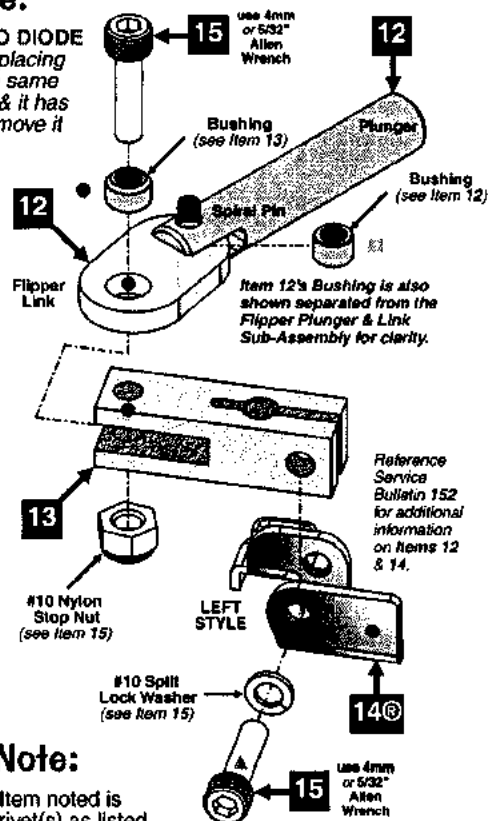


Take Note:

® "R" indicates Item noted is secured with rivet(s) as listed.

Flipper (Right) Assembly, 500-6543-05-ND (Items 1-15) **and Associated Parts: White Flipper Bat & Shaft Asm., 515-5133-08-06 (Items AP-A / AP-B)**

Nr.	FLIPPER (RIGHT) PARTS	QTY.	SPI PART Nr.
1	Flipper Base Plate (RIGHT)	1	See FRP1
Item 1 is secured below by: #8 X 1/2" SHWH AB (Zinc) (Qty. 8) (234-5101-00) <i>Ordering Note: Individual Part (535-7275-00) is not pre-threaded, see item FRP1.</i>			
2	Flipper Bat Bushing (White Plastic) 25" ID.	1	545-5070-00
Item 2 is secured to item 1 by: #6-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 3) (237-5976-02)			
3	Power (EOS / End-of-Stroke) Switch	1	180-5149-00
Item 3 is secured to item 1 by: #6-32 X 5/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-04)			
4	Sw. Plate/Spring Return Brkt. (RIGHT)	1	535-7354-00
5	Flipper Return Spring	1	265-5035-00
6	Coil Stop Bracket Sub-Assembly	1	515-6308-01
Item 6 is secured to item 1 by: #10-32 X 3/8" SHWH Swage (Ser.) Zinc (Qty. 2) (237-5965-00) and #10 Split Lock Washer (Qty. 2) (244-5003-00)			
7	Spring Washer (17/32" ID X 3/4" X 1")	1	269-5002-00
8	Coil Support Bracket	1	535-7356-00
Item 8 is secured to item 1 by: #6-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-04)			
9	Coil, 22-1080 [NO DIODE] BLUE	1	090-5032-ND
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE PREV. PAGE FOR DETAILS.			
10	Coil Sleeve	1	545-5388-00
11	Deflector Pad (Bumper)	1	545-5428-00
12	Flipper Plunger & Link Sub-Assy.	1	515-6304-03
For Individual Items use: Flipper Plunger (530-6349-01) and Plunger "Flipper" Link (545-5611-01) and is secured to the Plunger by: Bushing, 16" ID X .281" OD X .187" (Qty. 1) (530-5532-00) and Spiral Pin # 5/32" X 3/4" Lg. (Qty. 1) (251-5015-02)			
13	Crank Bar (Pawl)	1	530-5070-02
Item 13 requires: Bushing, .192" ID X .312" OD X .185" (Qty. 1) (530-5139-00)			
14®	Switch Actuator (RIGHT) Sub-Assy.	1	515-7257-00
For Individual Items use: Actuator & Spring Bracket (LEFT) (535-9038-01) and Switch Actuator (White Plastic) (545-5612-00) and is secured to the Bracket by: Rivet, 1/8" X 1/4" Lg. (Qty. 1) (249-6003-00)			
15	Set Screw: #10-32 X 3/4" Socket Hd.	2	237-6144-00
Item 15 requires: #10-32 Nylon Stop Nut (Qty. 1) Flipper Link Side Only (240-5203-00) and #10 Split Lock Washer (Qty. 1) Switch Actuator Side Only (244-5003-00) Tool required for item 15: 5/32" or 4mm Allen Wrench			

Item 14® is also shown separated from item 13, Crank Bar, for clarity.

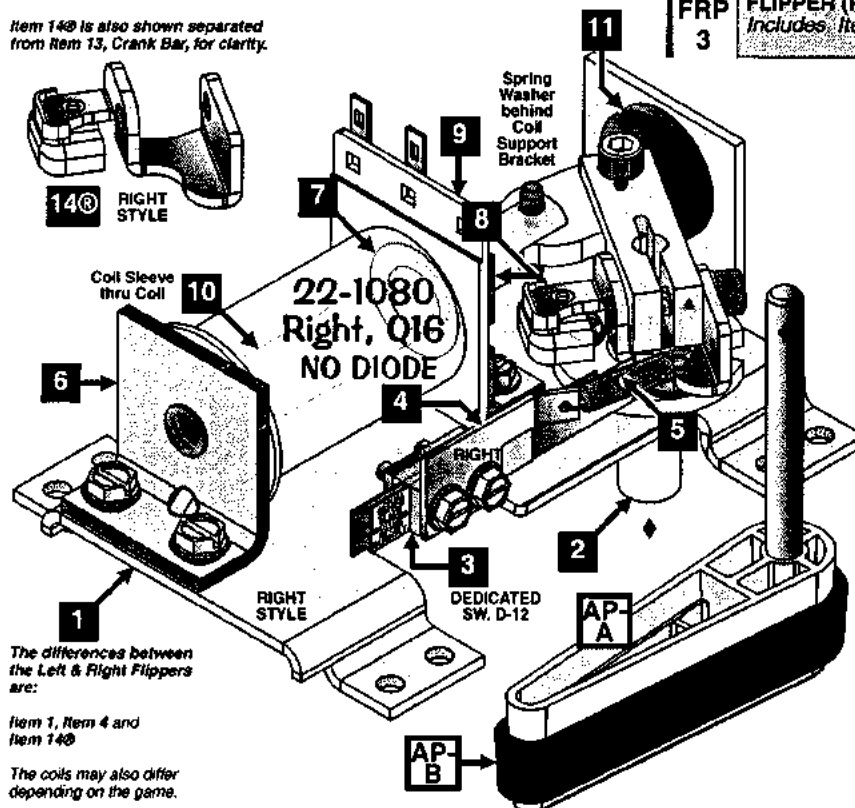

The differences between the Left & Right Flippers are:

Item 1, Item 4 and Item 14®


The coils may also differ depending on the game.

ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.

Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
AP-A	YELLOW Flipper Bat & Shaft Asm. (Non-Knotted End) <u>without Rubber Ring</u>	1	515-5133-06-06
AP-B	Large FlipperBlack Rubber Ring	3	545-5277-00


Flipper Rebuild Parts for Easier Installation, Save \$:

FRP1 FLIPPER BASE PLATE KIT (RIGHT):
Includes Item 1 pre-threaded >+< Securing Hardware for Items 2, 3, 6 & 8. **515-6617-00**

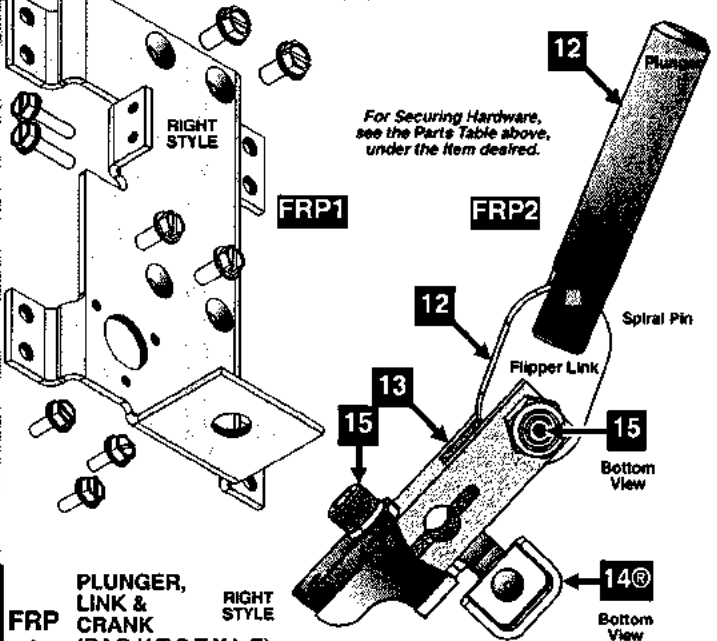

FRP2 PLUNGER, LINK & CRANK (RIGHT STYLE) ASSEMBLY: Includes Items 12, 13, 14 & 15 (comes assembled). **515-7203-00**

FRP3 FLIPPER (RIGHT) REBUILD KIT: Includes Items 6, 10 AND above FRP2 **500-6307-00**

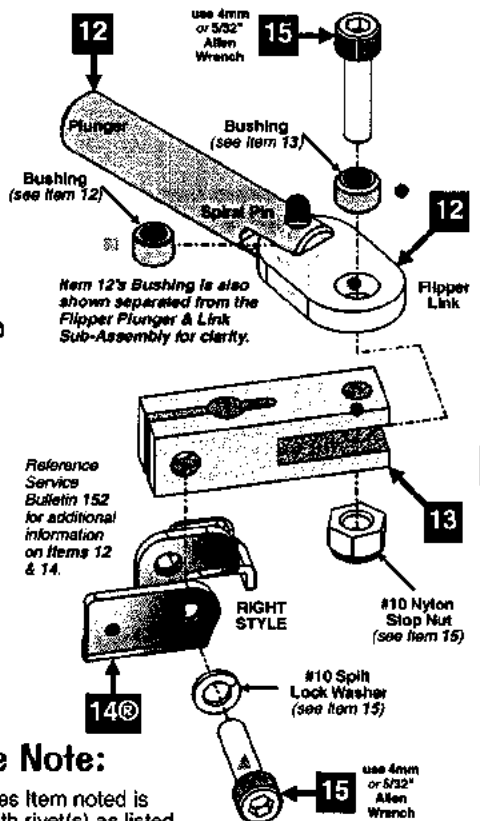

Assemblies & Ramps


Take Note:

® "R" indicates item noted is secured with rivet(s) as listed.

Flipper (Upper Left) Assembly, 500-6543-16-ND (Items 1-15) **and Assoc. Parts: Yellow Mini-Flipper Bat & Shaft Asm., 515-6275-06 (Items AP-A / AP-B)**

Nr.	FLIPPER (LEFT) PARTS	QTY.	SPI PART Nr.
1	Flipper Base Plate (LEFT)	1	See FRP1
Item 1 is secured below by: #8 X 1/2" SHWH AB (Zinc) (Qty. 8) (234-5101-00) <i>Ordering Note: Individual Part (535-7275-01) is not prethreaded, see Item FRP1</i>			
2	Flipper Bat Bushing (White Plastic) 25" ø I.D.	1	545-5070-00
Item 2 is secured to Item 1 by: #6-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 3) (237-5976-02)			
3	Power (EOS / End-of-Stroke) Switch	1	180-5149-00
Item 3 is secured to Item 1 by: #6-32 X 5/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-04)			
4	Sw. Plate/Spring Return Brkt. (LEFT)	1	535-7354-01
5	Flipper Return Spring	1	265-5035-00
6	Coil Stop Bracket Sub-Assembly	1	515-6308-01
Item 6 is secured to Item 1 by: #10-32 X 3/8" SHWH Swage (Ser.) Zinc (Qty. 2) (237-5965-00) and #10 Split Lock Washer (Qty. 2) (244-5003-00)			
7	Spring Washer (17/32" ID X 3/4" X 1")	1	269-5002-00
8	Coil Support Bracket	1	535-7356-00
Item 8 is secured to Item 1 by: #8-32 X 3/8" HWH Swage (Ser.) Zc. (Qty. 2) (237-5976-00)			
9	Coil, 23-1500 (NO DIODE) BLUE	1	090-5062-ND
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE BELOW FOR DETAILS.			
10	Coil Sleeve	1	545-5388-00
11	Deflector Pad (Bumper)	1	545-5428-00
12	Flipper Plunger & Link Sub-Assy.	1	515-6304-03
For Individual Items use: Flipper Plunger (530-5349-01) and Plunger "Flipper" Link (545-5611-01) and is secured to the Plunger by: Bushing, .16" ø ID X .281" ø OD X .187" (Qty. 1) (530-5532-00) and Spiral Pin ø 5/32" X 3/4" Lg. (Qty. 1) (251-5015-02)			
13	Crank Bar (Pawl)	1	530-5070-02
Item 13 requires: Bushing, .192" ø ID X .312" ø OD X .195" (Qty. 1) (530-5139-00)			
14®	Switch Actuator (LEFT) Sub-Assy.	1	515-7257-01
For Individual Items use: Actuator & Spring Bracket (LEFT) (535-9038-01) and Switch Actuator (White Plastic) (545-5612-00) and is secured to the Bracket by: Rivet, 1/8" ø X 1/4" Lg. (Qty. 1) (249-5003-00)			
15	Set Screw: #10-32 X 3/4" Socket Hd.	2	237-6144-00
Item 15 requires: #10-32 Nylon Stop Nut (Qty. 1) Flipper Link Side Only (240-5203-00) and #10 Split Lock Washer (Qty. 1) Switch Actuator Side Only (244-5003-00) Tool required for Item 15: 5/32" or 4mm Allen Wrench			

Item 14® is also shown separated from Item 13, Crank Bar, for clarity.

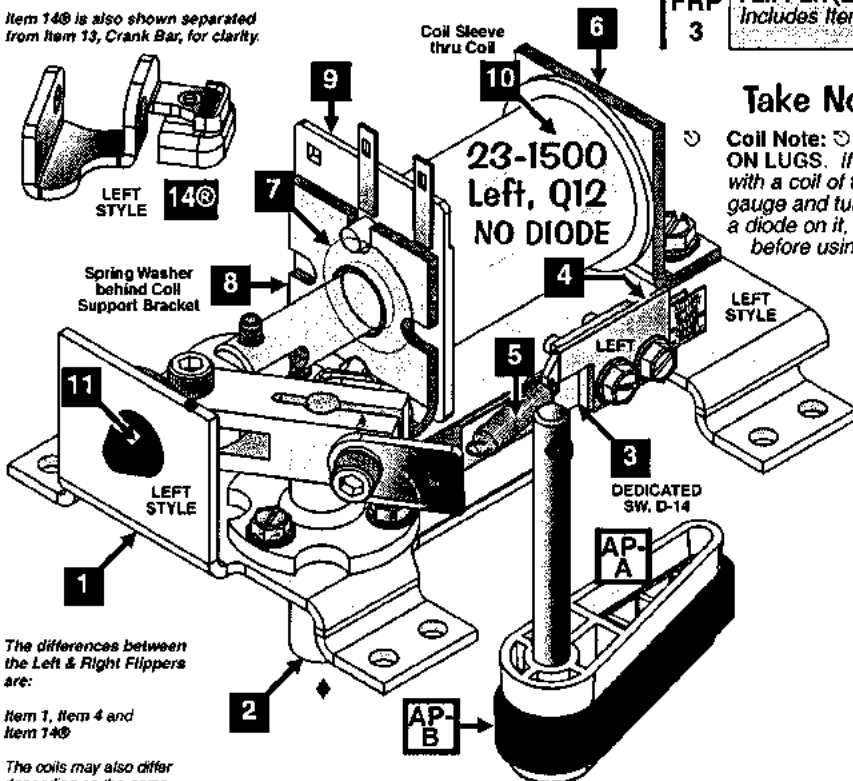

The differences between the Left & Right Flippers are:

Item 1, Item 4 and Item 14®


The coils may also differ depending on the game.

ASSOCIATED PARTS ARE NOT INCLUDED WITH THE ABOVE ASSEMBLY.

Nr.	ASSOCIATED PART(S)	QTY.	SPI PART Nr.
AP-A	YEL. Mini-Flipper Bat & Shaft Asm. (Non-Knurlled End) <u>Without Rubber Ring</u>	1	515-6275-06
AP-B	Mini-Flipper BLACK Rubber Ring	1	545-5207-00

Flipper Rebuild Parts for Easier Installation, Save \$:

FRP 1 FLIPPER BASE PLATE KIT (LEFT):
Includes Item 1 pre-threaded >+< Securing Hardware for Items 2, 3, 6 & 8. **515-6617-01**

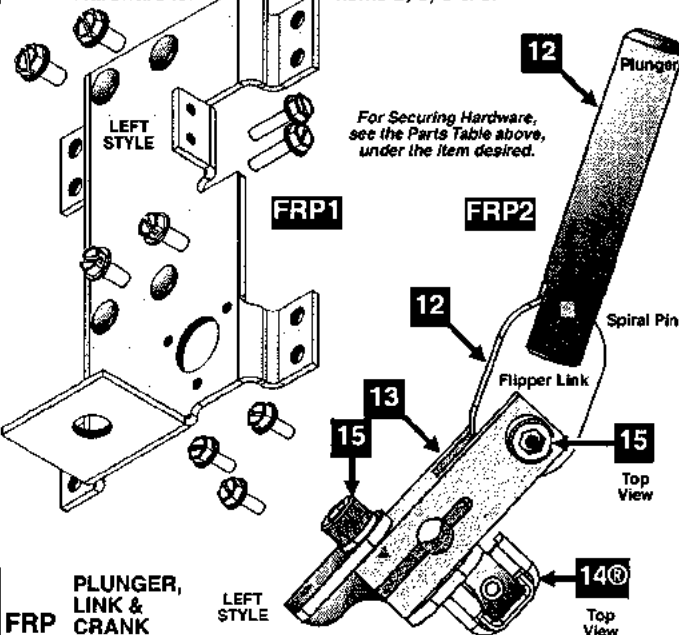


FRP 2 PLUNGER, LINK & CRANK (LEFT STYLE) ASSEMBLY: Includes Items 12, 13, 14 & 15 (comes assembled). **515-7203-01**

FRP 3 FLIPPER (LEFT) REBUILD KIT: Includes Items 6, 10 AND above FRP2 **500-6307-10**

Take Note:

Coil Note: NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn & it has a diode on it, remove it before using.

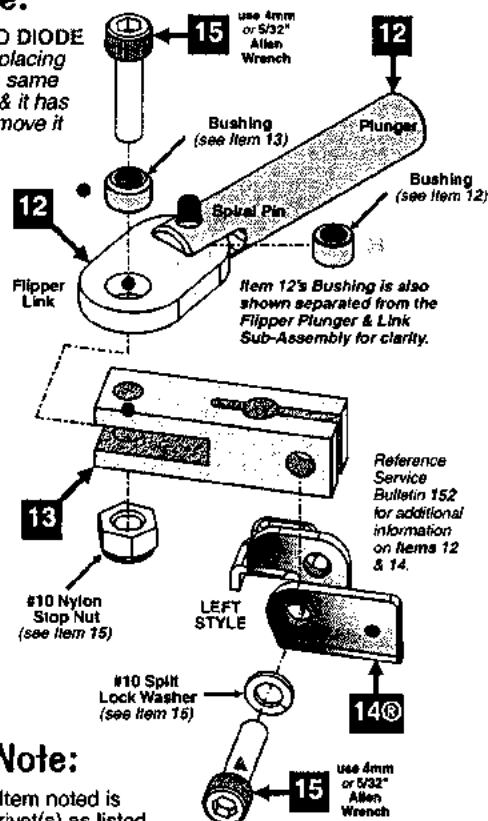

Take Note:



® "R" indicates Item noted is secured with rivet(s) as listed.

Slingshot (Left & Right) Assemblies, 500-5849-00-ND (Qty. 2) (Items 1-9)

Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.	Nr.	SLINGSHOT PARTS	QTY.	SPI PART Nr.
1	Slingshot Bracket Assembly	1/per	515-5339-01	6	Compression (Return) Spring	1/per	266-5020-00
Item 1 is secured below the playfield by: #8 X 1/2" SHWH AB (Zc.) (Qty. 3) (234-5191-00)				7	Slingshot Stack (Blade) Switch	2/per	180-5054-00
2	Coil Retaining Bracket	1/per	535-5203-03	Only 1 of the 2 Switches has a Diode (1N4004) (112-5003-00). See Note Below on Drawing. Can be replaced with (1N4001) (112-5001-00).			
Item 2 is secured to Item 1 by: #6-32 X 3/8" PPH MS (Sams) (Qty. 2) (232-5301-00)				8	Switch Body Protect Plate	2/per	535-5045-00
3	Coil, 24-910 [NO DIODE]	1/per	090-5044-ND	Items 7 & 8 are secured to Item 1 by: #6-32 X 5/8" HWH Swage (Qty. 4) (237-5976-04)			
COIL DOES NOT REQUIRE A DIODE. SEE COIL NOTE BELOW FOR DETAILS.				9@	Riveted Arm & Tip Assembly	1/per	515-5340-01
4	Coil Sleeve	1/per	545-5031-00	For Individual Parts use (requires drilling out rivet & re-riveting): Arm (515-5341-01), Kicker Tip (545-5216-01) and Rivet: 1/8" x 1/4" Lg. (249-5003-00). The Riv. Arm is secured to Item 1 by: Retaining Ring, 1/4" x 5/8" (Qty. 1) (270-5002-00)			
5	Plunger & Link Assembly	1/per	515-5338-00	Ordering Note: If 515-5340-01 is unavailable, order the individual part(s) actually required.			
For Individual Items use: Plunger 2" Lg. (530-5025-01), Plunger Link (545-5293-00) and Riv. Pin 1/8" x 5/8" Lg. (251-5008-00). The Plunger Link is secured to the Riveted Arm by: Retaining Ring, 1/4" x 5/8" (Qty. 1) (270-5002-00)				Ordering Note: If 500-5849-00-ND is unavailable, order the individual part(s) actually required. This assembly is identical to 500-5849-02-ND with the exception of Item 3, which uses a Coil, 27-1500 [NO DIODE] (090-5004-ND) instead.			
Ordering Note: If 515-5338-00 is unavailable, order the individual part(s) actually required.							

Take Note:

- ⊖ Coil Note: ⊖ NO DIODE ON LUGS. If replacing with a coil of the same gauge and turn and it has a diode on it, remove it before using.
- Ⓜ "R" indicates Item noted is secured with rivet(s) as listed.

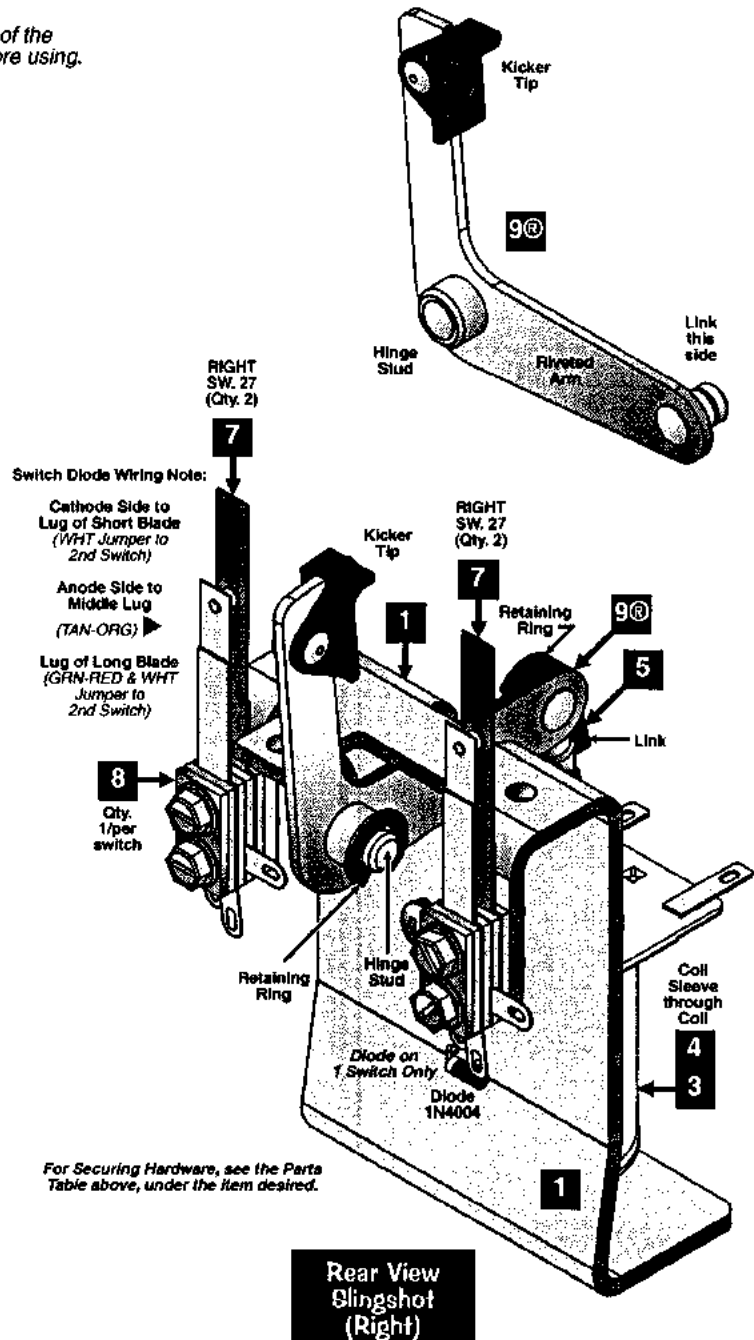
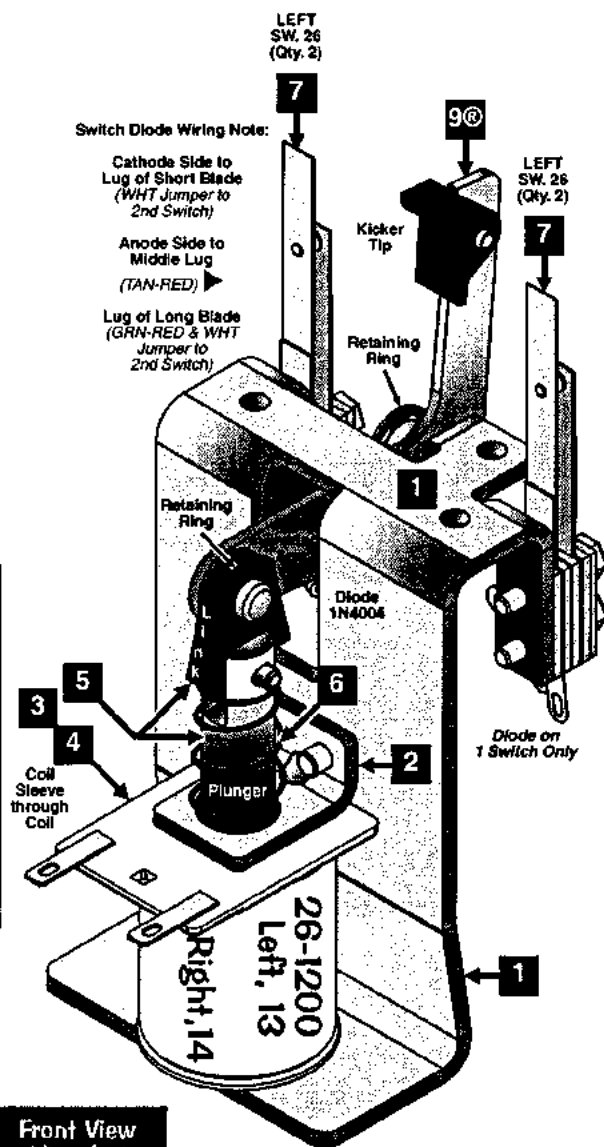


For Securing Hardware, see the Parts Table above, under the item desired.

3-Bank Target Assembly, Individual Parts Only (Items 7-14) **See prev. page **


ITEM #	PART #	QTY.	DESCRIPTION
7	545-6278-00	1	SLIDE FRAME
8	515-7497-06-01	2	1" SQ. T & SW ASM -RT SIDE LUGS - YEL
9	515-7497-06-00	1	1" SQ. T & SW ASM -LT SIDE LUGS - YEL
10	545-6277-00	1	SLIDE, MOLDED ** DOES NOT INCLUDE ITEM 11 **
SH-8/9	240-5005-00	6	6-32 NYLOK STOP NUT
SH-8/9	232-5206-00	6	SCREW, #6-32 X 1" PPH SEMS
11	626-5029-00	3	FOAM PAD
12	535-5045-00	3	SWITCH PLATE
13	830-6059-32	1	BUTY #32, MOTOR 3-BANK (SOLD SEPARATELY ** NOT IN KIT)
14	535-9852-00	2	GIB (BRACKET)
SH-14	240-5005-00	4	6-32 NYLOK STOP NUT
SH-14	237-5976-05	4	SCREW, #6-32 X 3/4 INWH SWAGED (ZINC)
SH-14	242-5001-00	4	#6 WASHER

ASM: DEF ONLY (ITEMS 1-6 & 7-14) 545-6278-00
 ASM: DEF ONLY (ITEMS 7-14) 545-6277-00
 ASM: DEF ONLY (ITEMS 1-10) 545-6277-00

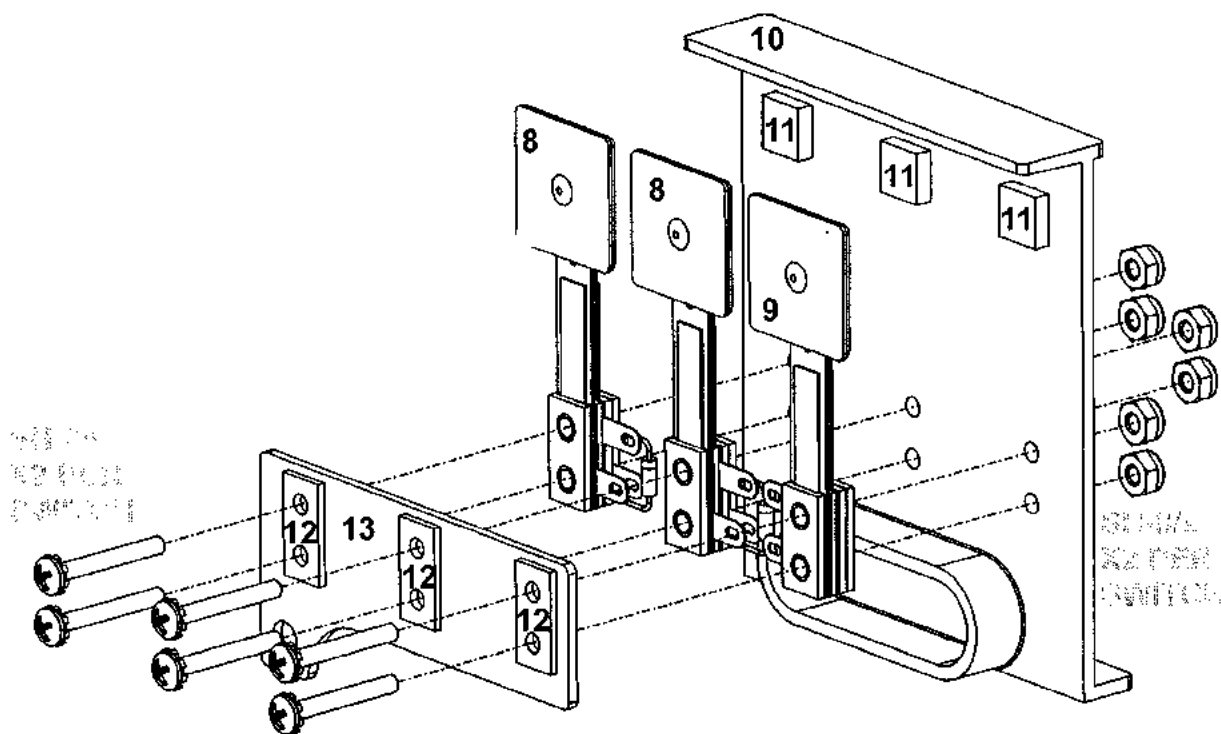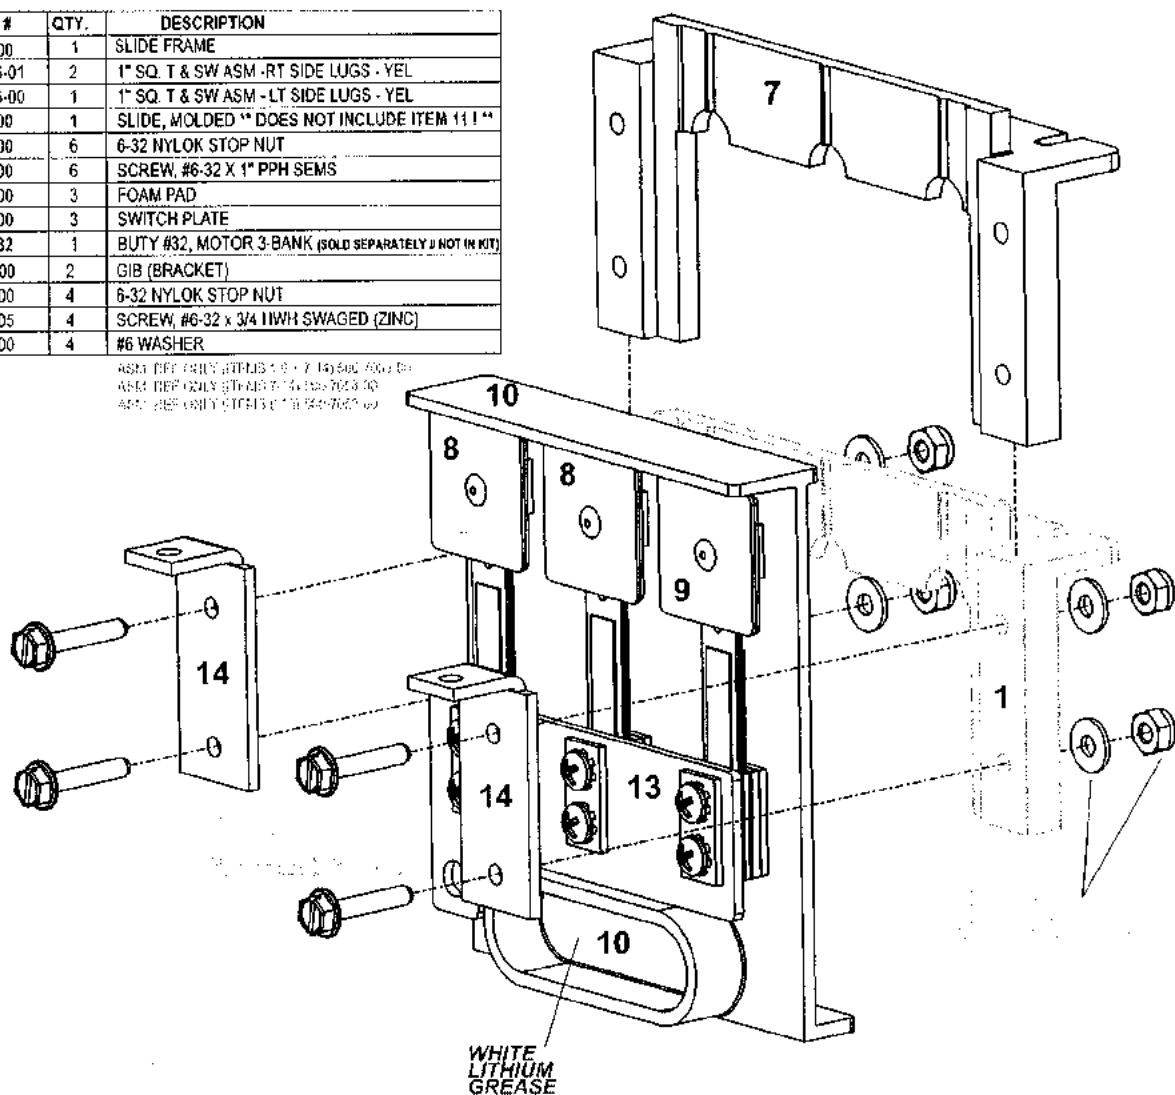


Drawings for Major Assemblies & Ramps

ITEM #	QTY	PART #	DESCRIPTION
1	1	511-6924-01	FASTENED ASSY - PANEL 'F' - VIDEO GAME - TRON PREMIUM
2	1	830-6138-0E	PANEL 'E' - VIDEO GAME - TRON PREMIUM
3	1	830-6138-0G	PANEL 'G' - VIDEO GAME - TRON PREMIUM
4	1	830-6138-0H	PANEL 'H' - VIDEO GAME - TRON PREMIUM
5	1	830-6138-0C	PANEL 'C' - VIDEO GAME - TRON PREMIUM
6	1	830-6138-0D	PANEL 'D' - VIDEO GAME - TRON PREMIUM

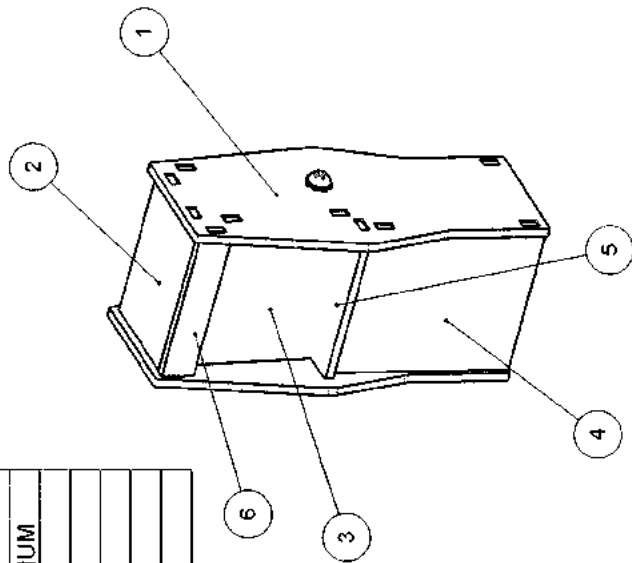

ASSEMBLY NOTES:

1. APPLY GLUE TO EACH TAB ON EACH WALL COMPONENT.
2. ASSEMBLE BY SLIPPING EACH WALL INTO POSITION.
3. LOCK TABS AND APPLY PRESSURE TIL DRY.


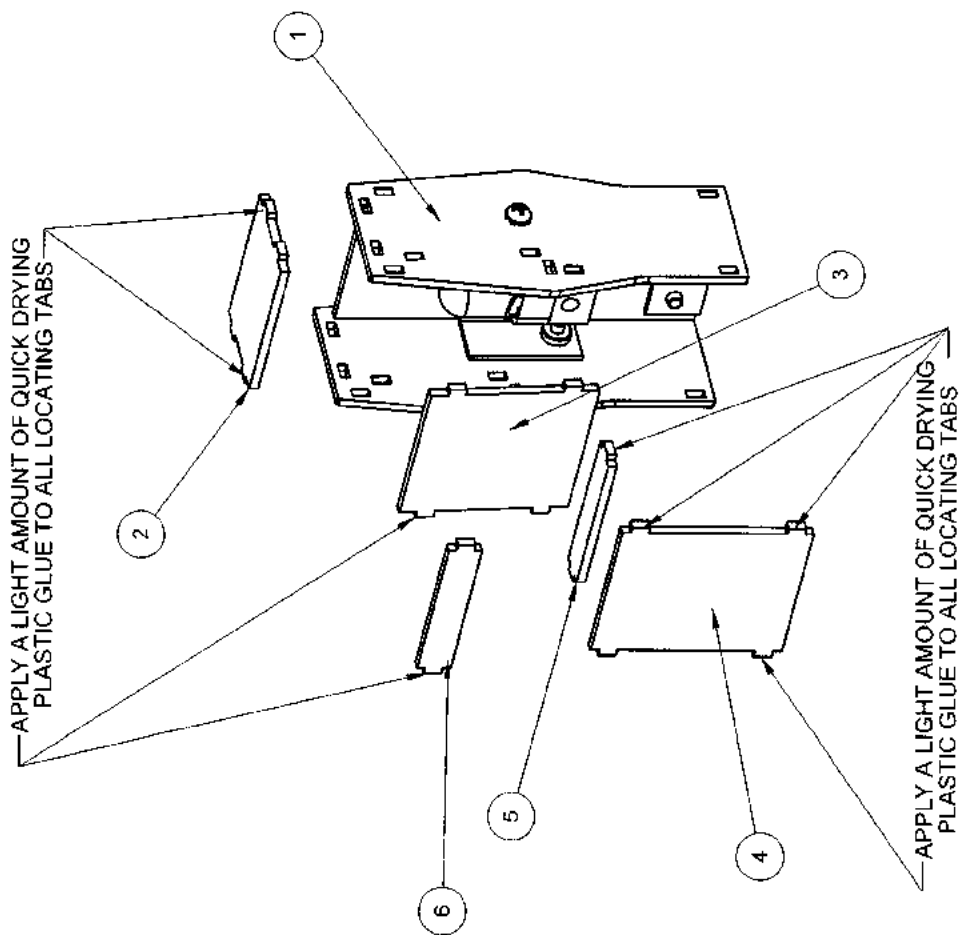


GLUED ASSY - VIDEO GAME - TRON PREMIUM


500-7200-01

b12

ITEM #	QTY	PART #	DESCRIPTION
1	1	510-5140-01	RIVETED ASSY - PANEL 'F' - VIDEO GAME - TRON PREMIUM
2	1	240-5303-00	4-40 NYLON LOCK NUT
3	1	511-6923-00	ASSY, CABLE 161 BULB FLASH
4	3	237-5882-00	SCREW, #4-40 X 5/16 PRH SEMS
5	1	830-6138-0A	PANEL 'A' - VIDEO GAME - TRON PREMIUM
6	1	830-6138-0B	PANEL 'B' - VIDEO GAME - TRON PREMIUM

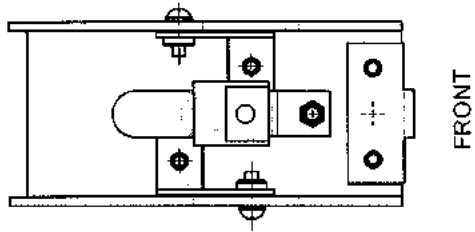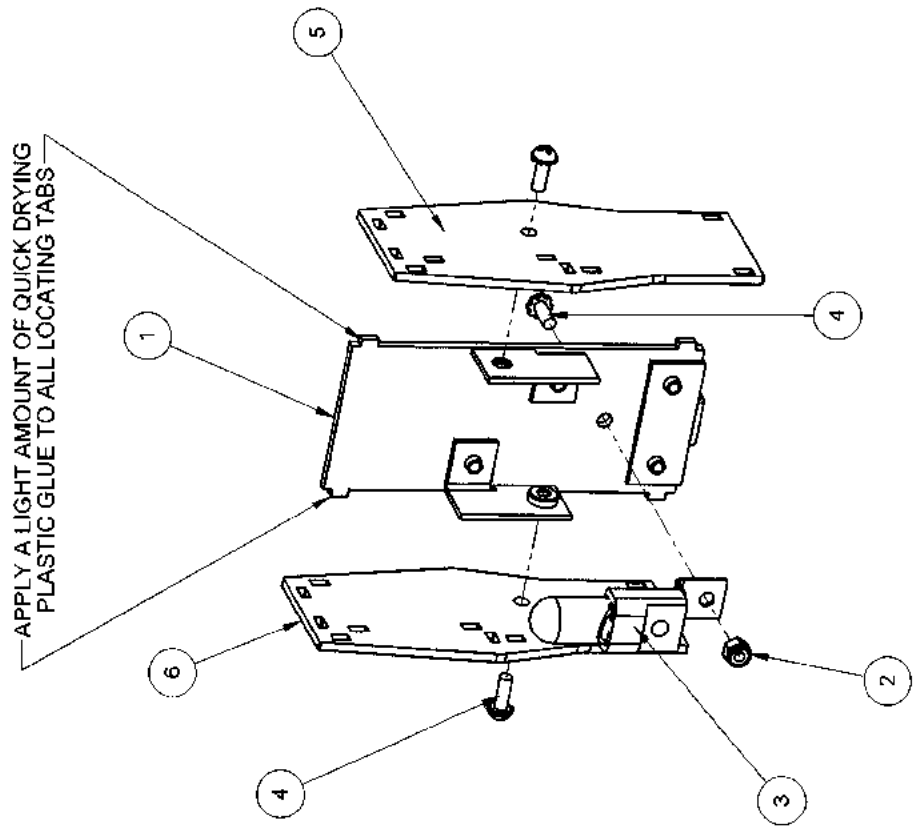

ITEM #	QTY	PART #	DESCRIPTION
1	1	830-6138-0F	PANEL 'F' - VIDEO GAME - TRON PREMIUM
2	2	535-0440-00	TONGUE BRKT, RS
3	4	249-5001-00	RIVET - 1/8 X 3/16
4	1	535-0446-00	BRKT, PLASTIC, RS

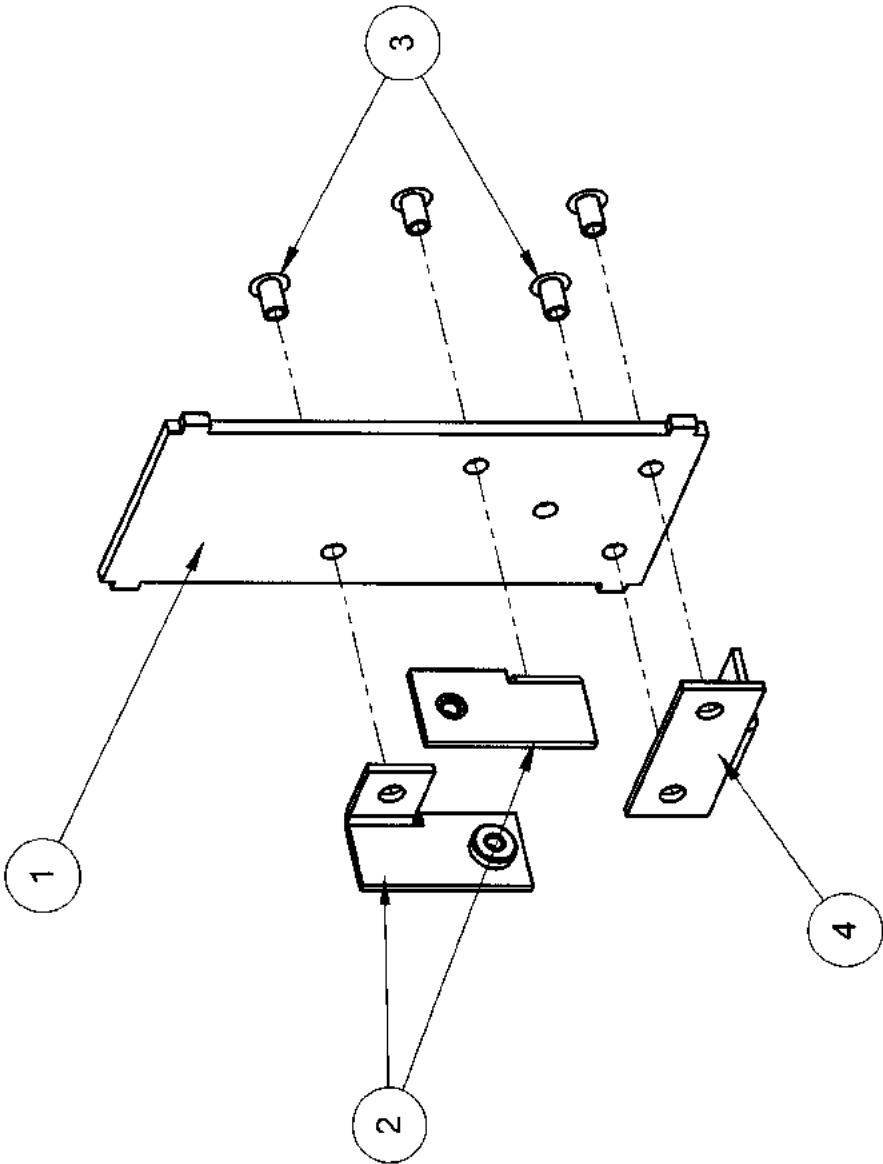

RIVETED ASSY - PANEL 'F' - VIDEO GAME - TRON PREMIUM

510-5140-01


b13

5

ASSEMBLY, POWER SCOOP W/ CABLE 500-5809-01


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-6022-00	POWER SCOOP WELDING ASSY	1
2	535-6173-00	MICRO-SWITCH BRACKET	1
3	232-5209-00	SCREW, 6-32 X 3/16" PPH SEMS	2
4	180-5057-00	SWITCH	1
5	535-6539-00	SWITCH BODY PROTECT PLATE	1
6	237-5806-00	SCREW, 2-56 X 1/2" PPH MS ZINC	2
7	244-5001-00	#2 SPRING LOCK WASHER	2
8	240-5301-00	2-56 HEX NUT	2
9	112-5003-00	DIODE - 1N4004	1
99*	036-5544-01	3" CABLE GENERIC SWITCH	1

* ITEM NOT SHOWN

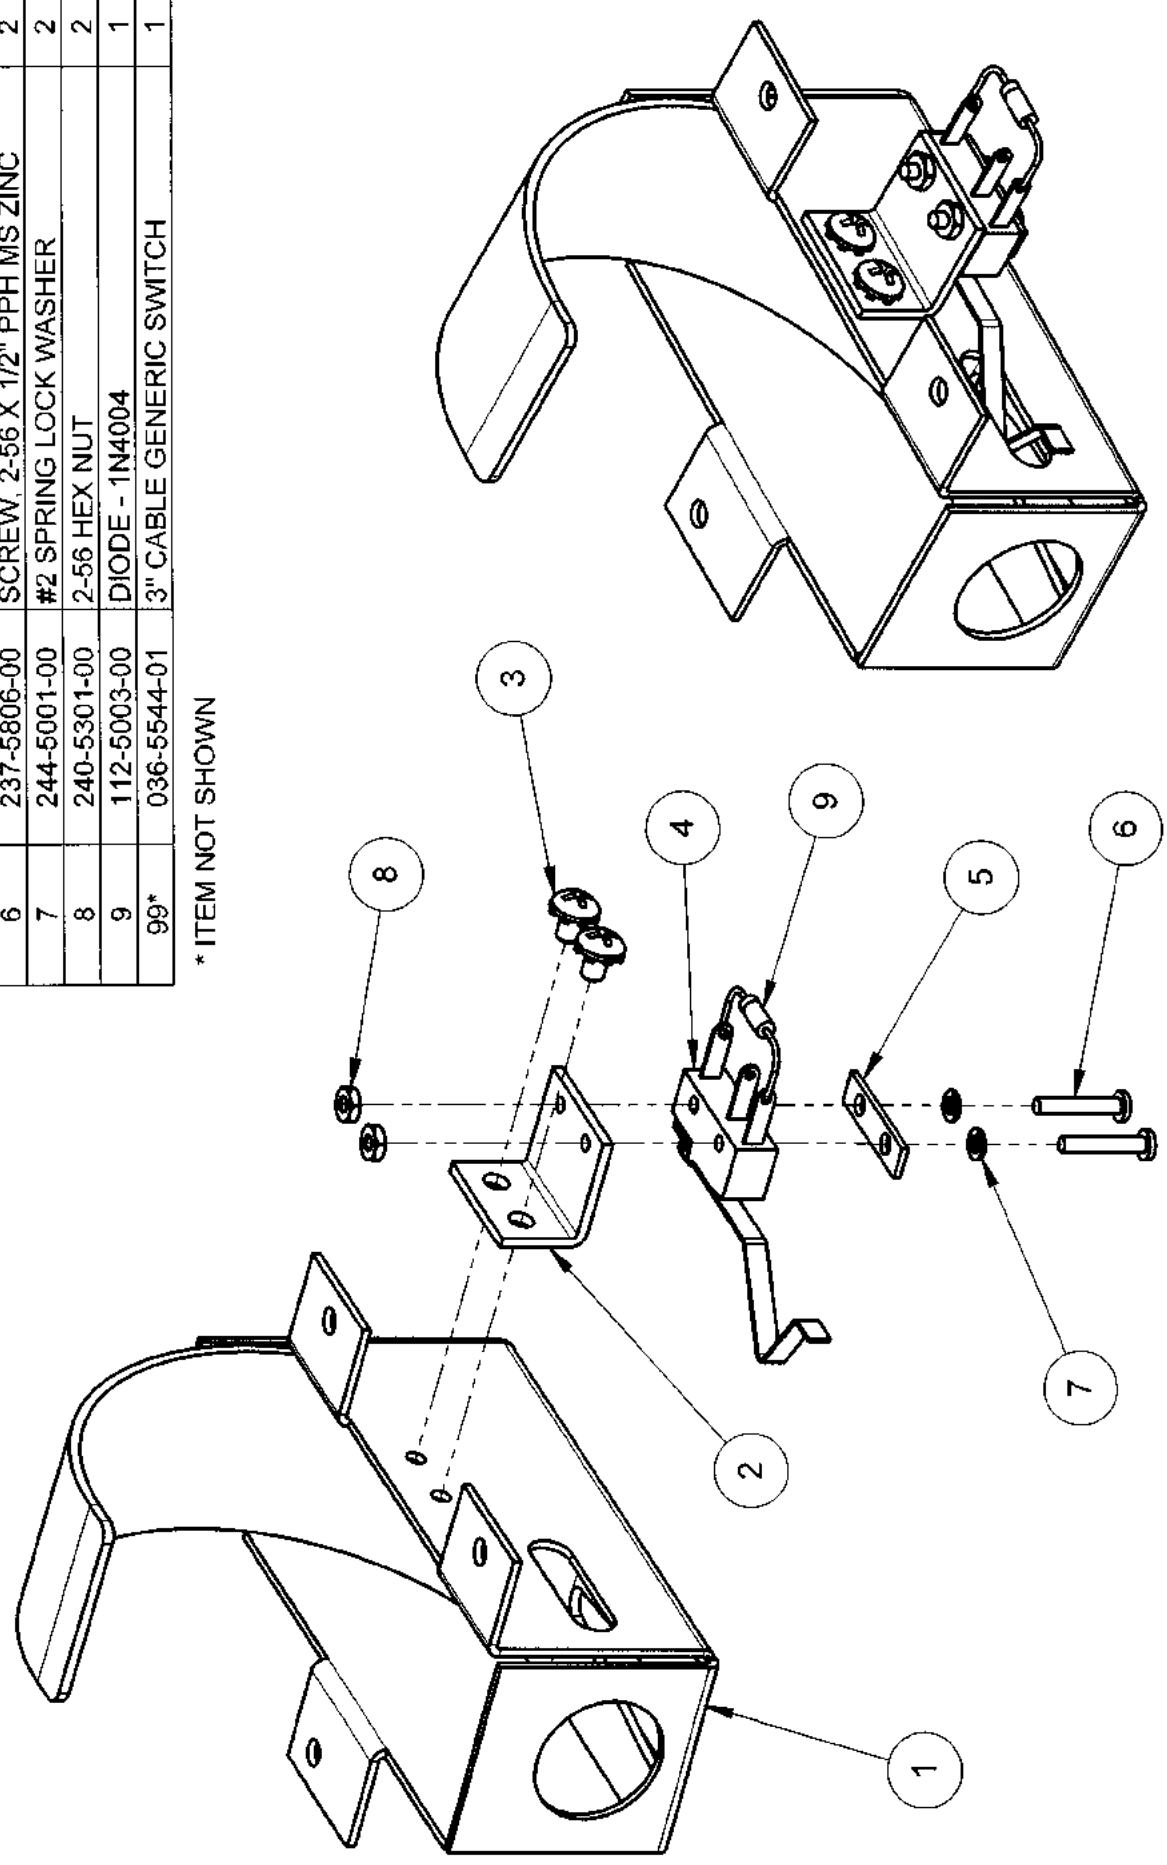

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	535-8575-00	KICK BIG MTG. BRKT.	1
2	090-5001-ND	COIL - 23-800, NO DIODE	1
3	545-5076-01	COIL SLEEVE	1
4	269-5002-00	SPRING WASHER	1
5	266-5020-00	COMPRESSION SPRING-CONICAL	1
6	545-5105-00	RUBBER BUMPER	1
7	515-7318-00	PLUNGER ASSEMBLY	1
8	535-5203-03	COIL RETAINING BRACKET	1
9	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	2

ASSEMBLY, BIG KICKER
500-6398-01



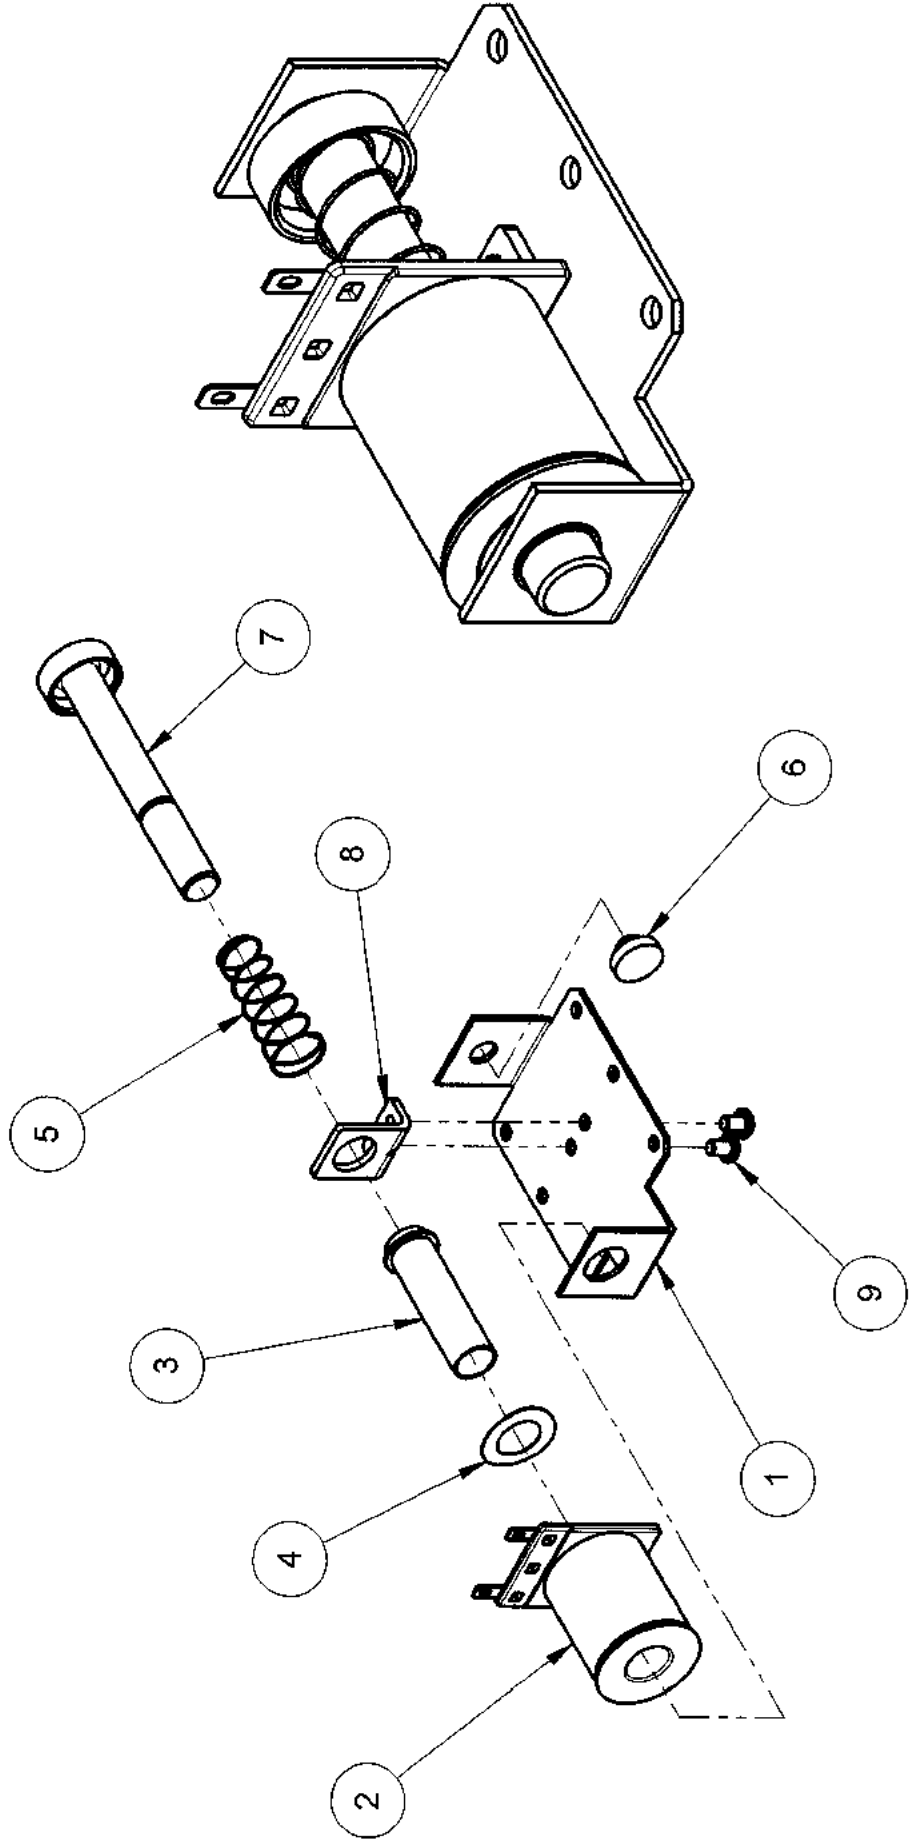


616


ASSEMBLY, 4-BANK DT, TRON PREMIUM
500-7204-00


ITEM #	PART NUMBER	DESCRIPTION	QTY.
1	545-6163-04	LEDGE, 4-BANK DROP TARGET	1
2	242-5091-00	WASHER, 1/2 X 17/64 X .03 - DT	12
3	266-5089-00	SPRING COMPRESSION - DT	4
4	545-6305-00	TARGET - ROLLOVER - BLACK	4
5	237-5501-00	SCREW, 6-32 X 3/8" PPH MS ZINC	8
6	240-5102-00	8-32 NYLON LOCK NUT	4
7	269-5002-00	SPRING WASHER	1
8	270-5002-00	RETAINING RING - 1/4"	8
9	266-5020-00	COMPRESSION SPRING-CONICAL	1
10	265-5003-02	TARGET RESET SPRING	4
11	535-9959-00	STOP BRKT	1
12	237-5602-00	SCREW, 8-32 X 1/2 PPH MS, ZINC	2
13	237-6169-00	SCREW, 4-40 X 1/4 PPH MS	5
14	530-5757-00	PLUNGER - D.T. ASSY.	1
15	545-5076-01	COIL SLEEVE	1
16	520-5252-14	OPTO PCB, RT ANG CONN, 4-BANK DT	1
17	090-5034-ND	COIL 25-1240 - NO DIODE	1
18	515-7771-00	DT FRAME ASSY, 4-BANK, TRON PREM.	1
19	535-9996-04	LIFT BRACKET - 4 BANK	1
20	535-9995-01	COIL BRACKET	1
21	237-5985-00	10-32 X 3/8 SHWH SWAGE SCREW	1
22	545-6798-00	SHIM - FICHE PAPER - D.T. SINGLE	1
23	545-6798-01	SHIM - FICHE PAPER - D.T. DOUBLE	1
98*	036-5542-00	DROP TARGET CABLE	1
99*	605-5006-00	1/8" PVC TUBING	.1FT

* ITEM NOT SHOWN

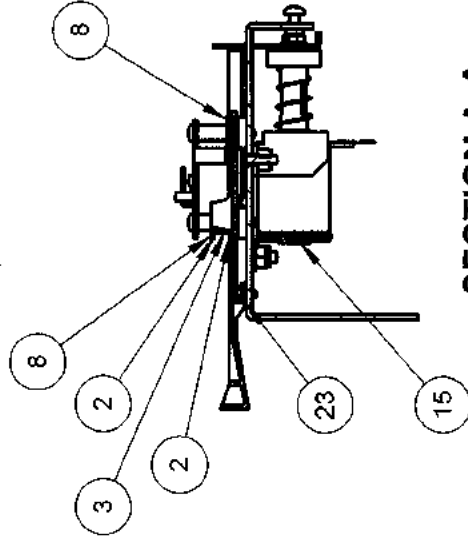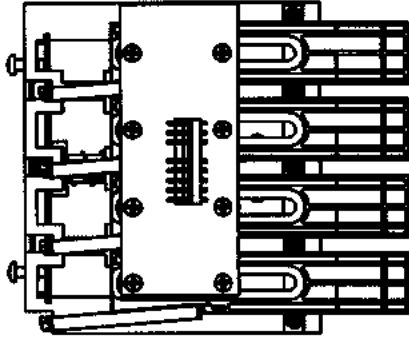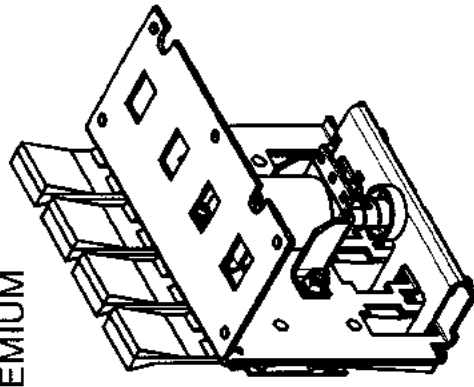

SECTION A-A

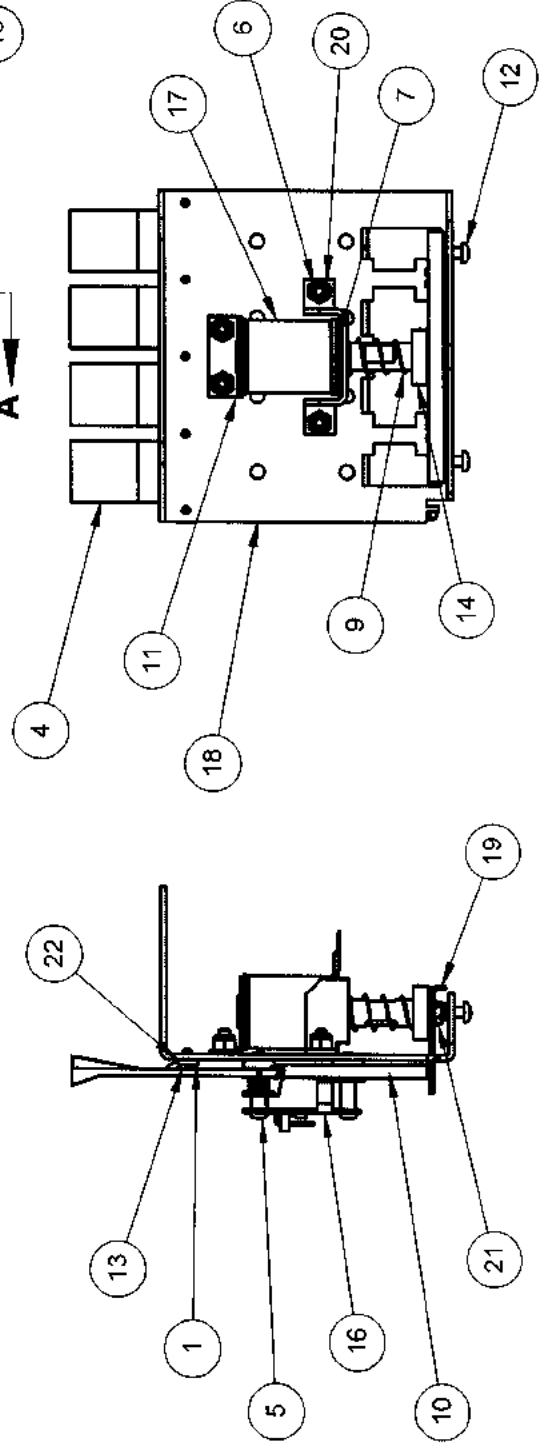

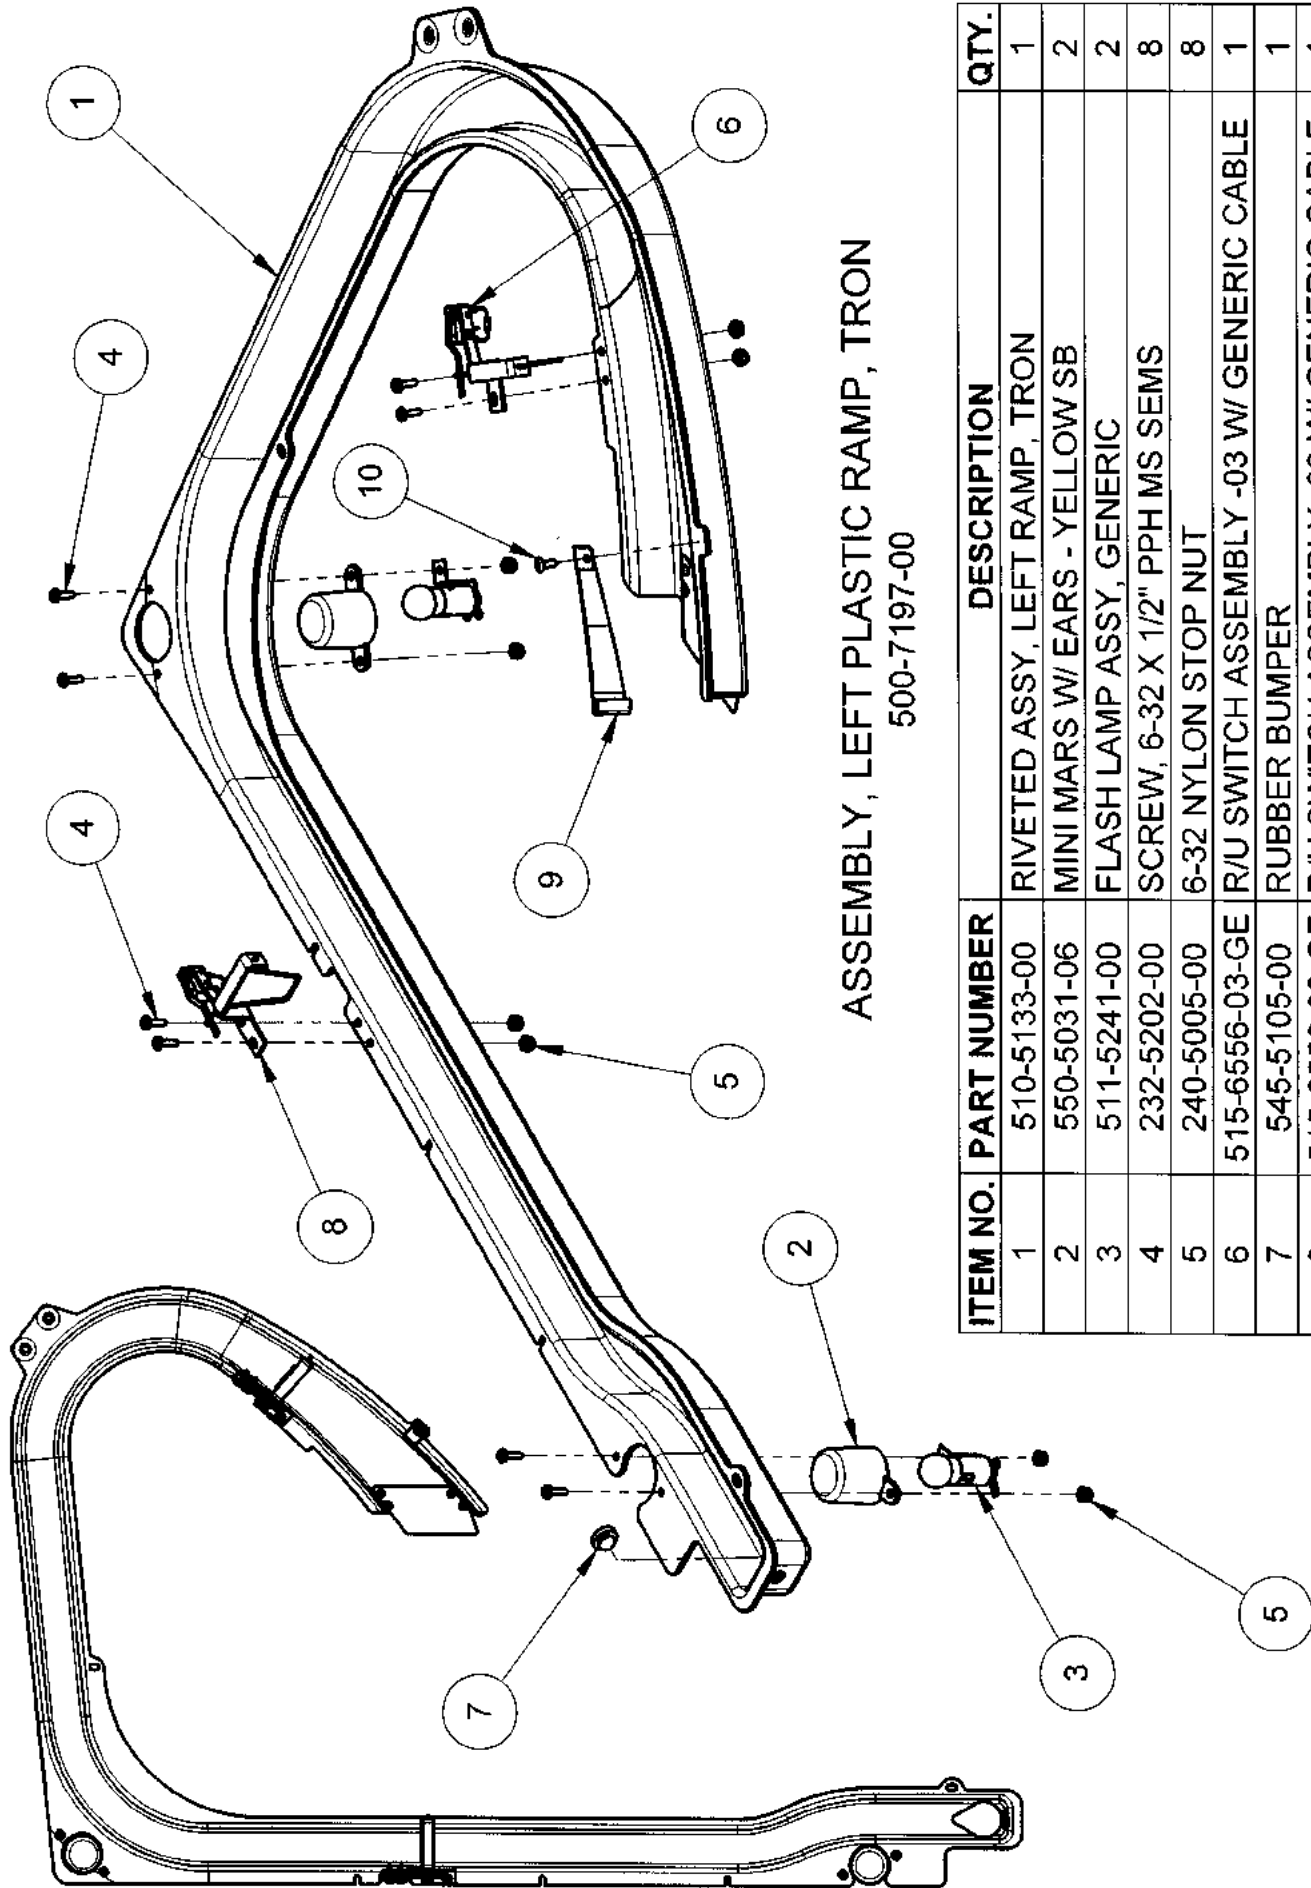


ASSEMBLY, LEFT PLASTIC RAMP, TRON
500-7197-00

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	510-5133-00	RIVETED ASSY, LEFT RAMP, TRON	1
2	550-5031-06	MINI MARS W/ EARS - YELLOW SB	2
3	511-5241-00	FLASH LAMP ASSY, GENERIC	2
4	232-5202-00	SCREW, 6-32 X 1/2" PPH MS SEMS	8
5	240-5005-00	6-32 NYLON STOP NUT	8
6	515-6556-03-GE	R/U SWITCH ASSEMBLY -03 W/ GENERIC CABLE	1
7	545-5105-00	RUBBER BUMPER	1
8	515-6556-02-GE	R/U SWITCH ASSEMBLY -02 W/ GENERIC CABLE	1
9	535-0457-00	LEFT RAMP PROTECTOR, RIGHT WALL, TRON	1
10	237-5809-00	SCREW, #6 X 1/2" PTH A	1


ITEM #	QTY	PART #	DESCRIPTION
1	1	510-5133-01	RIVETED ASSY, LEFT RAMP, TRON PREMIUM
2	2	550-5031-06	MINI MARS W/ EARS - YELLOW SB
3	2	511-5241-00	SOCKET#89 BULB ASSY - HEAVY FILAMENT
4	8	232-5202-00	SCREW, 6-32 X 1/2" PPH MS SEMS
5	8	240-5005-00	6-32 NYLOK STOP NUT
6	1	515-6556-03-GE	R/U SWITCH ASSEMBLY -03 W/ GENERIC CABLE
7	1	545-5105-00	RUBBER BUMPER
8	1	515-6556-02-GE	R/U SWITCH ASSEMBLY -02 W/ GENERIC CABLE
9	1	535-0457-00	LEFT RAMP PROTECTOR, RIGHT WALL, TRON
10	1	237-5809-00	SCREW, #6 X 1/2" PTH A
11	1	606-5000-42	FIBER OPTIC TUBING - 11 FT
12	24	040-5001-08	3" CABLE TIE

5/8

ASSEMBLY, LEFT PLASTIC RAMP, TRON PREMIUM 500-7197-01

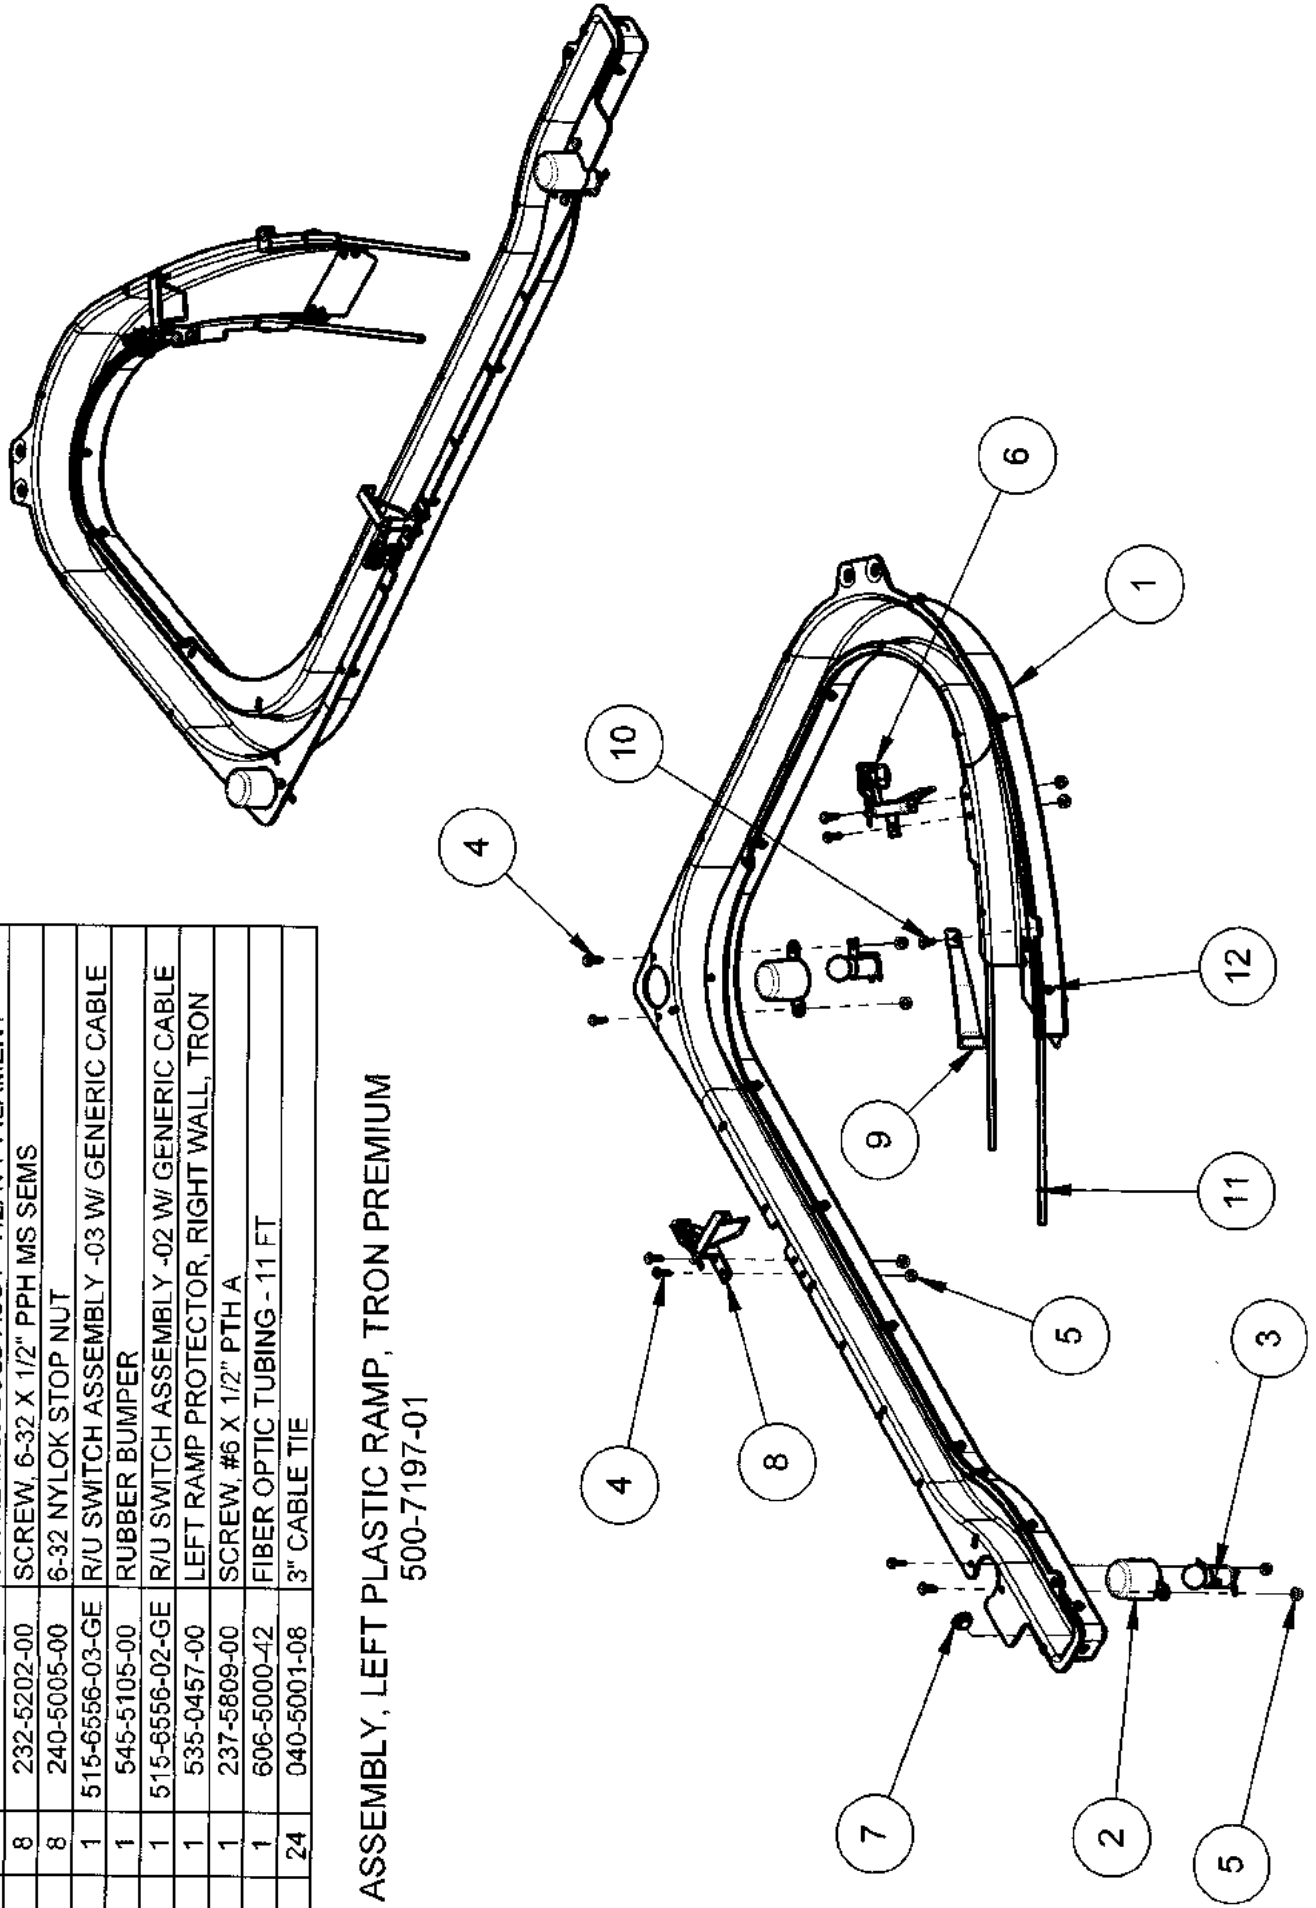


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	545-6833-01	PLASTIC RAMP, LEFT, TRON PREMIUM	1
2	535-0448-00	FLAP, LEFT PLASTIC RAMP, TRON	1
3	249-5003-00	RIVET - 1/8 X 1/4	2
4	246-5000-00	#6 LOCK WASHER, EXT TOOTH	2

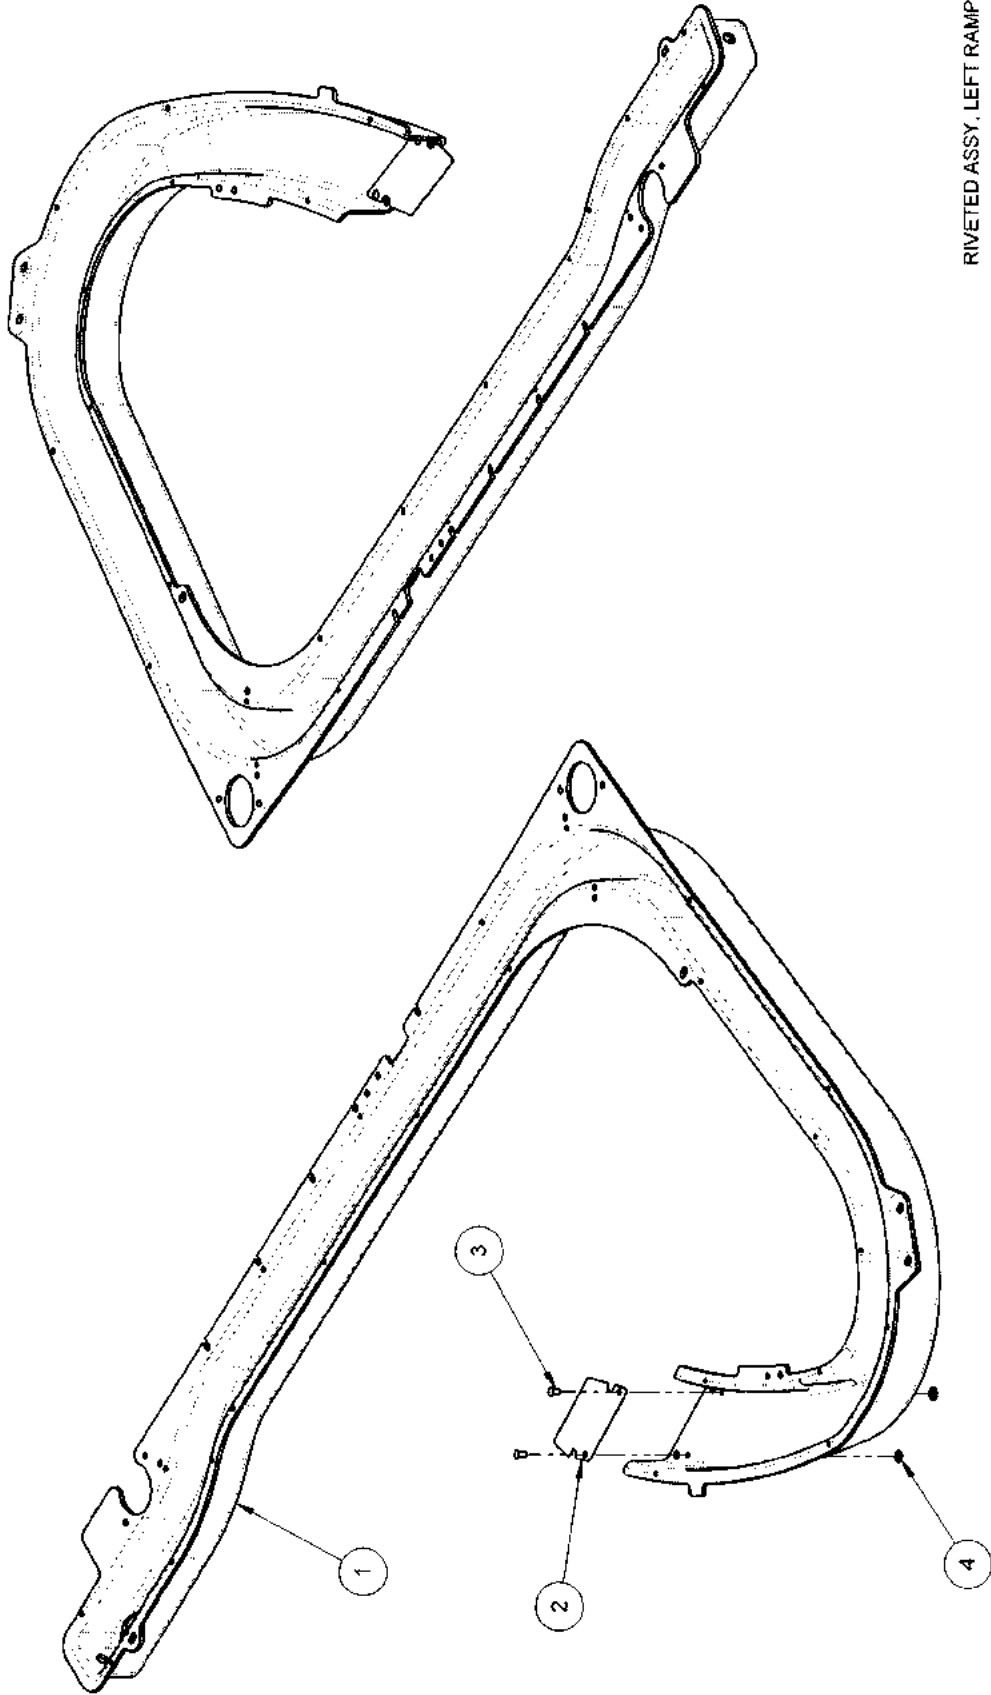

RIVETED ASSY, LEFT RAMP, TRON PREMIUM
510-5133-01


ITEM #	QTY	PART #	DESCRIPTION
1	1	545-6834-00	RIGHT RAMP - TRON
2	1	535-0449-00	RAMP FLAP - RIGHT RAMP - TRON
3	2	249-5001-00	RIVET - 1/8 X 3/16
4	2	246-5000-00	#6 LOCK WASHER, EXT TOOTH

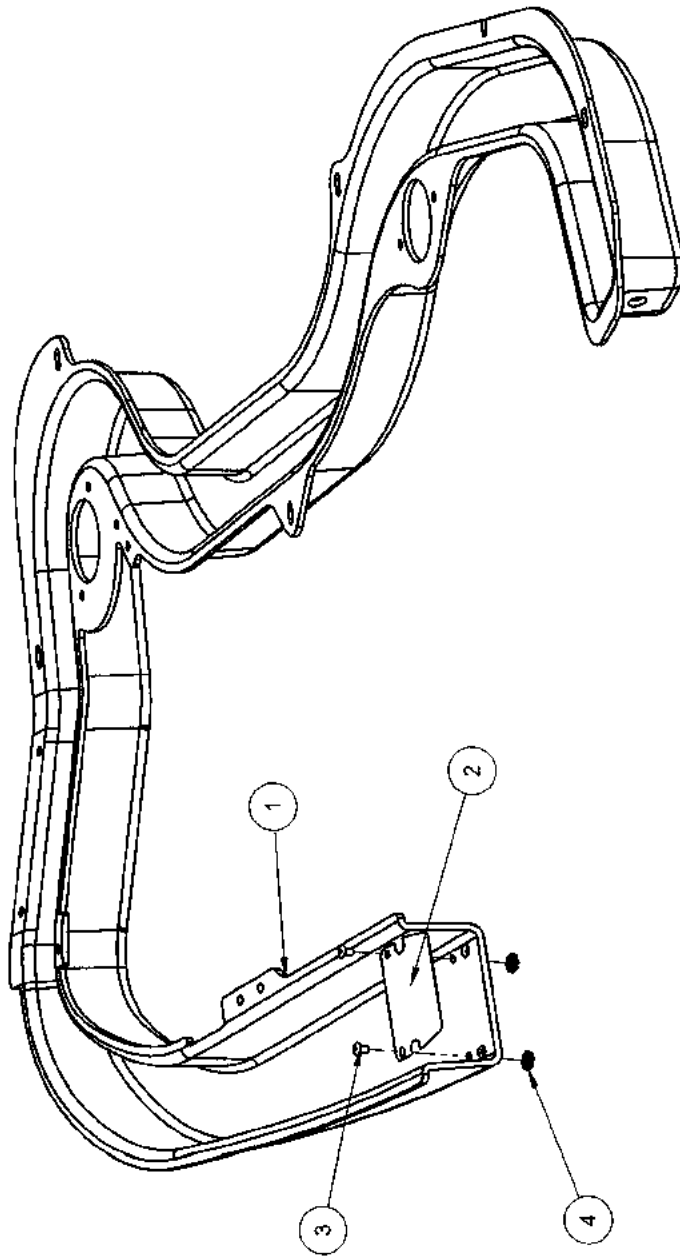

RIVETED ASSEMBLY - RIGHT RAMP - TRON

510-5134-00


ITEM #	QTY	PART #	DESCRIPTION
1	1	510-5134-01	RIVETED ASSEMBLY - RIGHT RAMP - TRON PREMIUM
2	11	240-5005-00	6-32 NYLOK STOP NUT
3	2	550-5031-05	MINI MARS W/ EARS - BLUE SB
4	1	545-5105-00	RUBBER BUMPER
5	1	515-6556-01-GE	R/U SWITCH ASSEMBLY -01 W/ GENERIC CABLE
6	1	515-6556-02-GE	R/U SWITCH ASSEMBLY -02 W/ GENERIC CABLE
7	2	511-5241-05	ASSEMBLY, FLASH LAMP BLUE
8	11	232-5202-00	SCREW, 6-32 X 1/2" PPH MS SEMS
9	1	511-6689-25	BUTY ASSEMBLY #25 - TRON PREMIUM
10	1	606-5000-35	FIBER OPTIC TUBING - 10 FT
11	21	040-5001-08	3" CABLE TIE

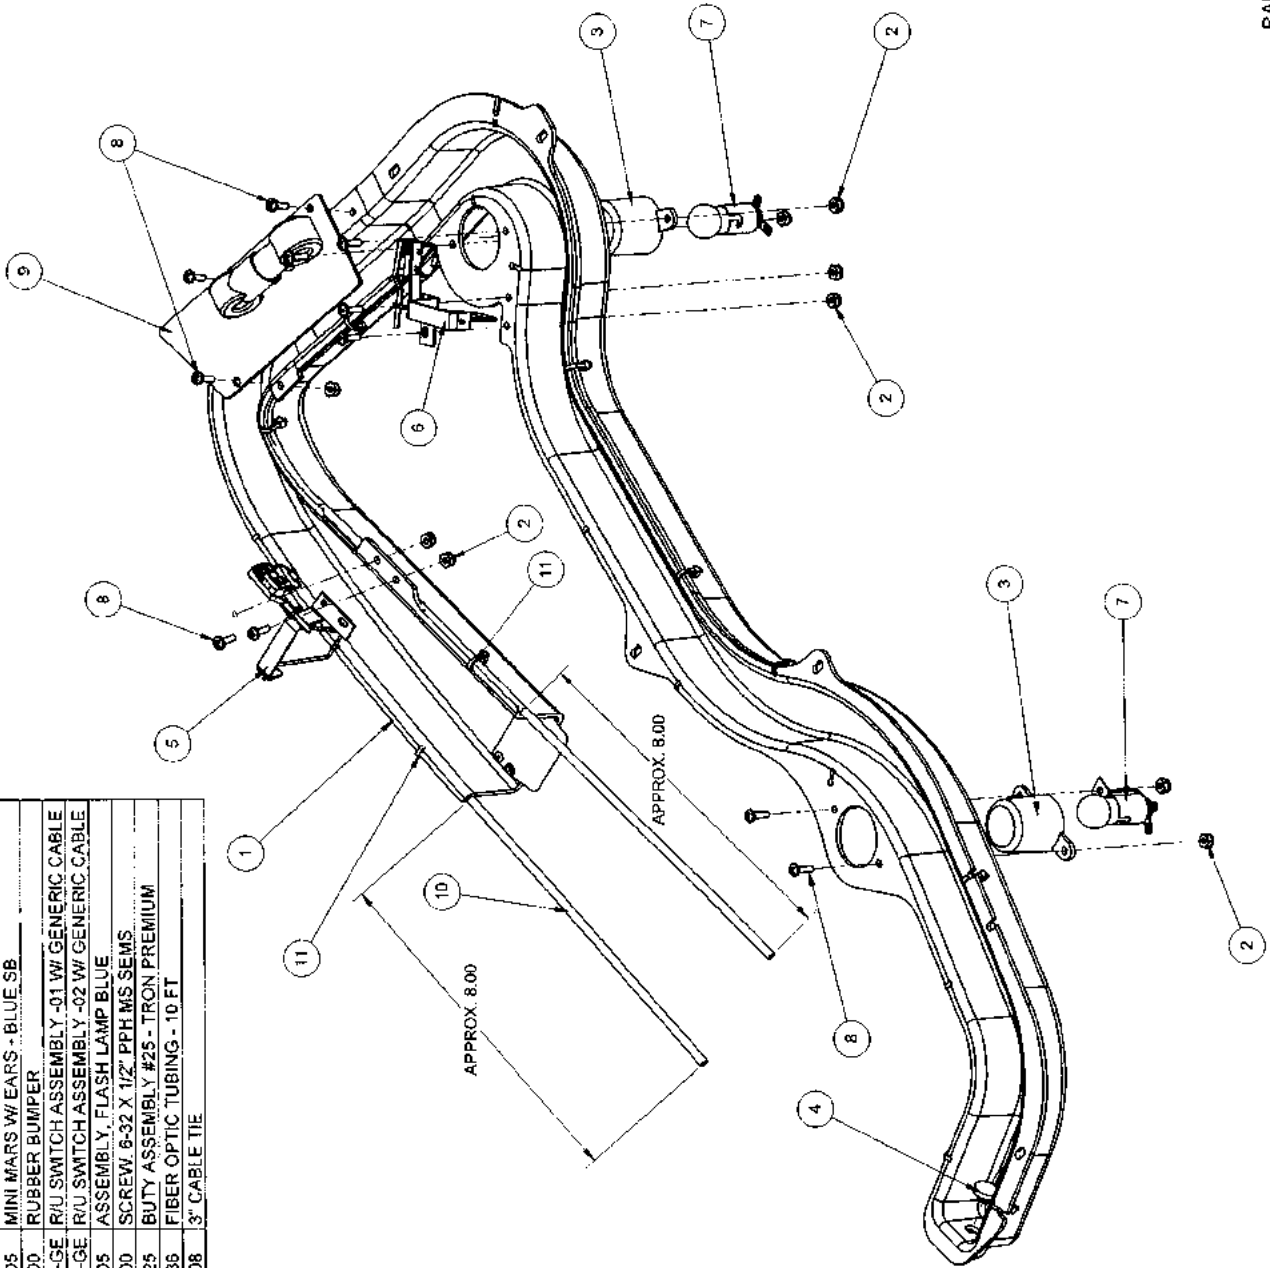

RAMP ASSEMBLY - RIGHT - TRON PREMIUM

b22

ITEM #	QTY	PART #	DESCRIPTION
1	1	545-6834-01	RIGHT RAMP - TRON PREMIUM
2	1	535-0449-00	RAMP FLAP - RIGHT RAMP - TRON
3	2	249-5001-00	RIVET - 1/8 X 3/16
4	2	246-5000-00	#6 LOCK WASHER, EXT TOOTH

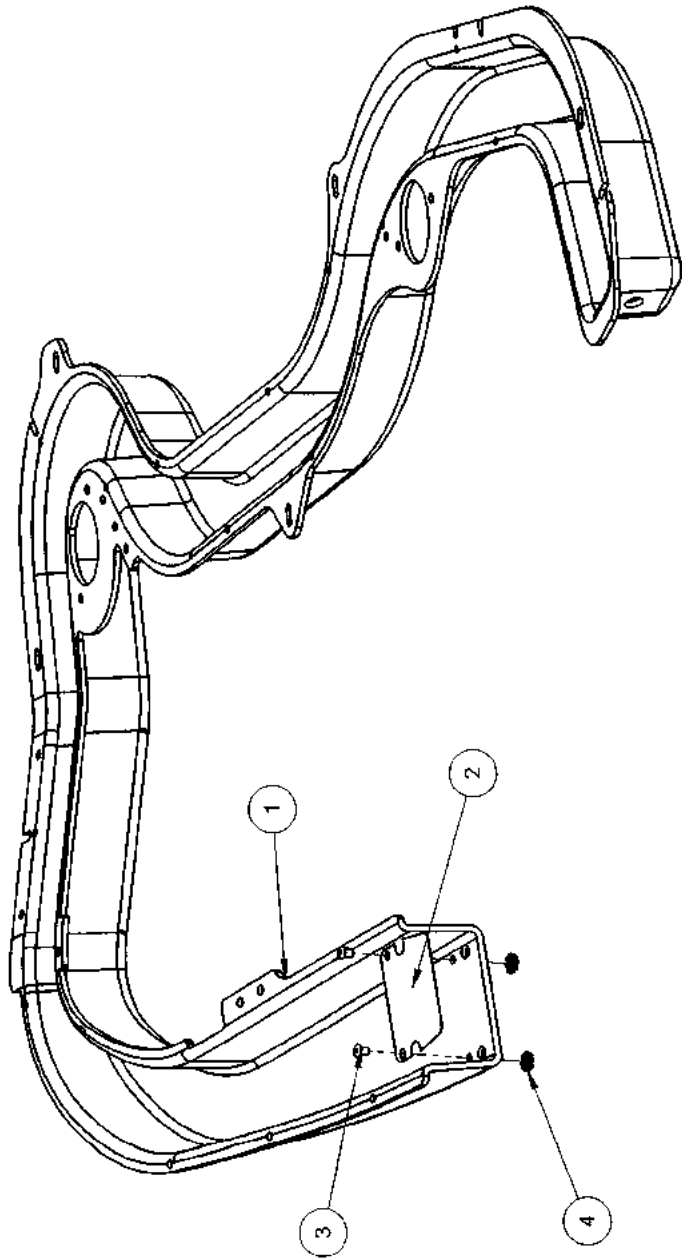


RIVETED ASSEMBLY - RIGHT RAMP - TRON PREMIUM

510-5134-01


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	545-6835-00	SPINNING DISK, PLASTIC, TRON	1
2	530-6572-00	HUB, SPINNING DISK, TRON	1
3	545-6836-00	ADHESIVE PAD - SPINNING DISK	1
4	545-6836-01	ADHESIVE PAD - SPINNING DISK	1
5	237-6023-01	SCREW, 8-32 X 5/8 PFH MS	3
6	240-5102-00	8-32 NYLON LOCK NUT	3

ASSEMBLY, SPINNING DISK/HUB, TRON
511-6925-00

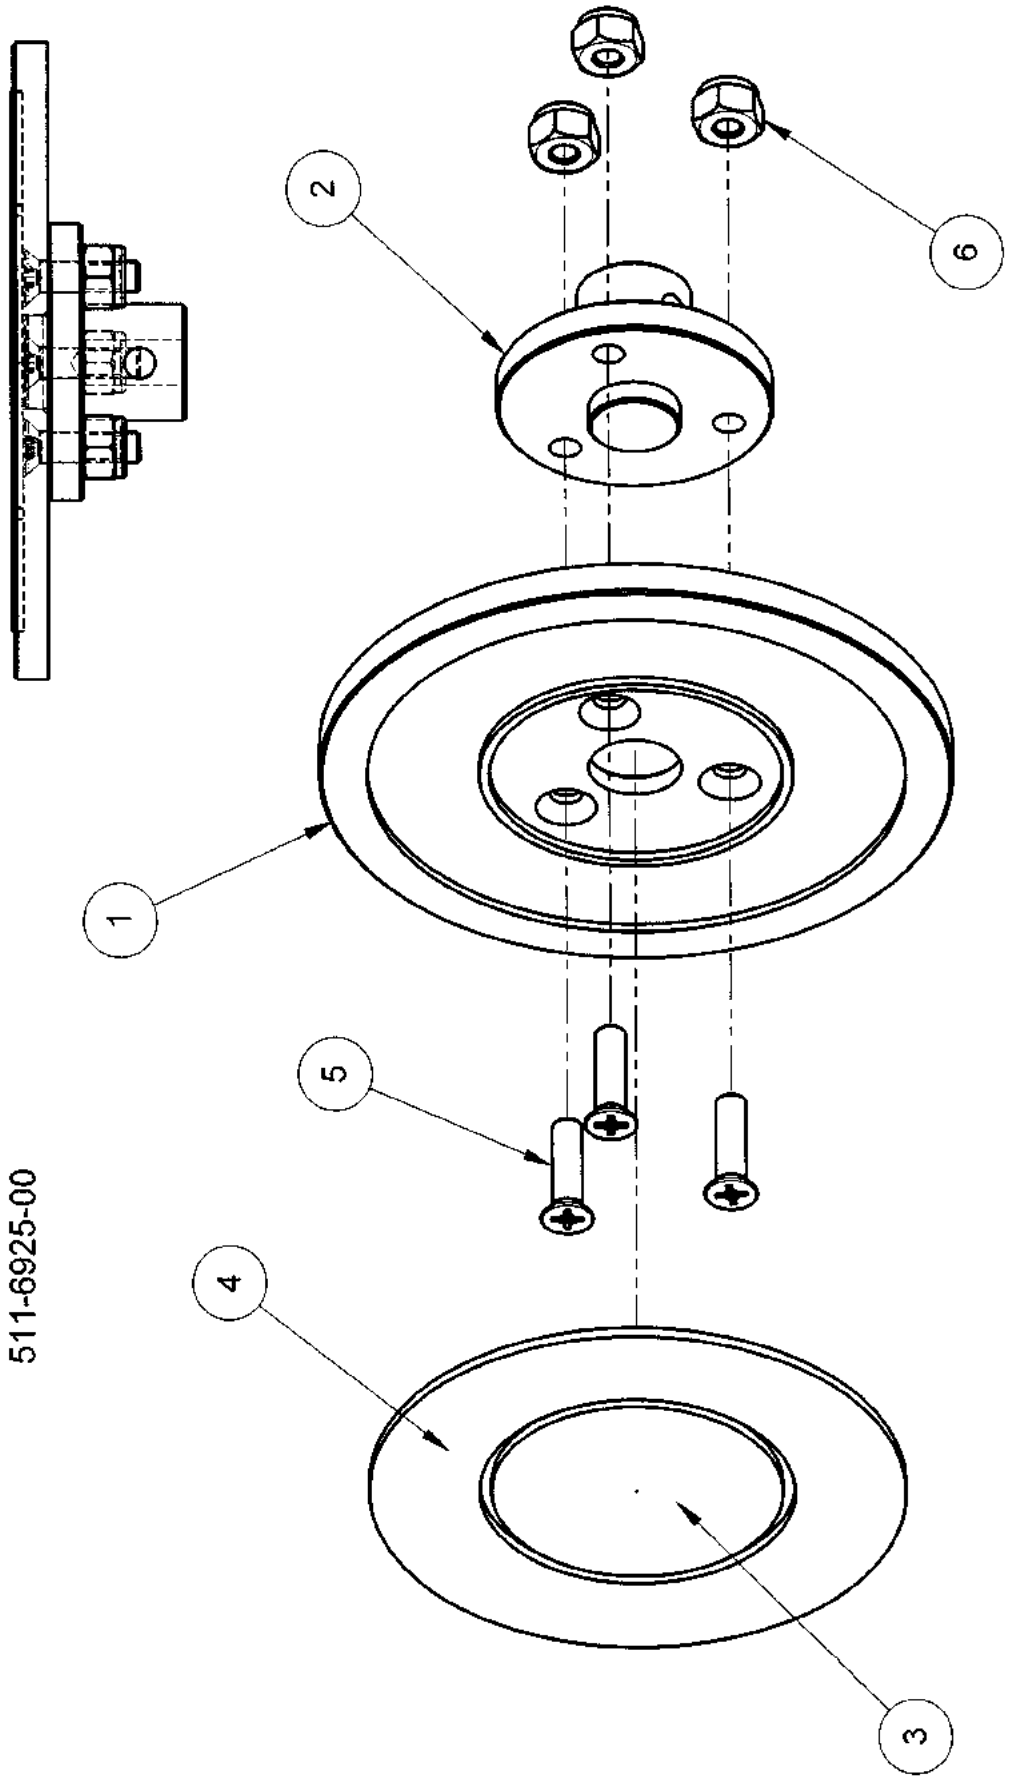


ITEM #	PART NUMBER	DESCRIPTION	QTY.
1	535-0453-00	MOUNTING BRACKET, SPINNING DISK, TRON	1
2	515-7769-00	MOTOR BRACKET, SPINNING DISK	1
3	511-5190-00	MOTOR ASSEMBLY, TRON DISK	1
4	237-6014-00	M5 X 0.8 X 8 PH SELF LOCKING SCREW	4
5	242-5028-00	WASHER NYLON .265 X .688 X .063	1
6	511-6925-00	ASSEMBLY, SPINNING DISK/HUB, TRON	1
7	237-6092-00	SET SCREW, 10-32 X 5/16, SOCKET CUP PT	1
8	237-5995-00	#10-32 x 1/2 HWH NO SLOT SERR ZI	2
9	242-5003-00	#10 FLAT WASHER - 1/2" O.D. X .062 THICK	2

ASSEMBLY, SPINNING DISK, TRON 500-7201-00

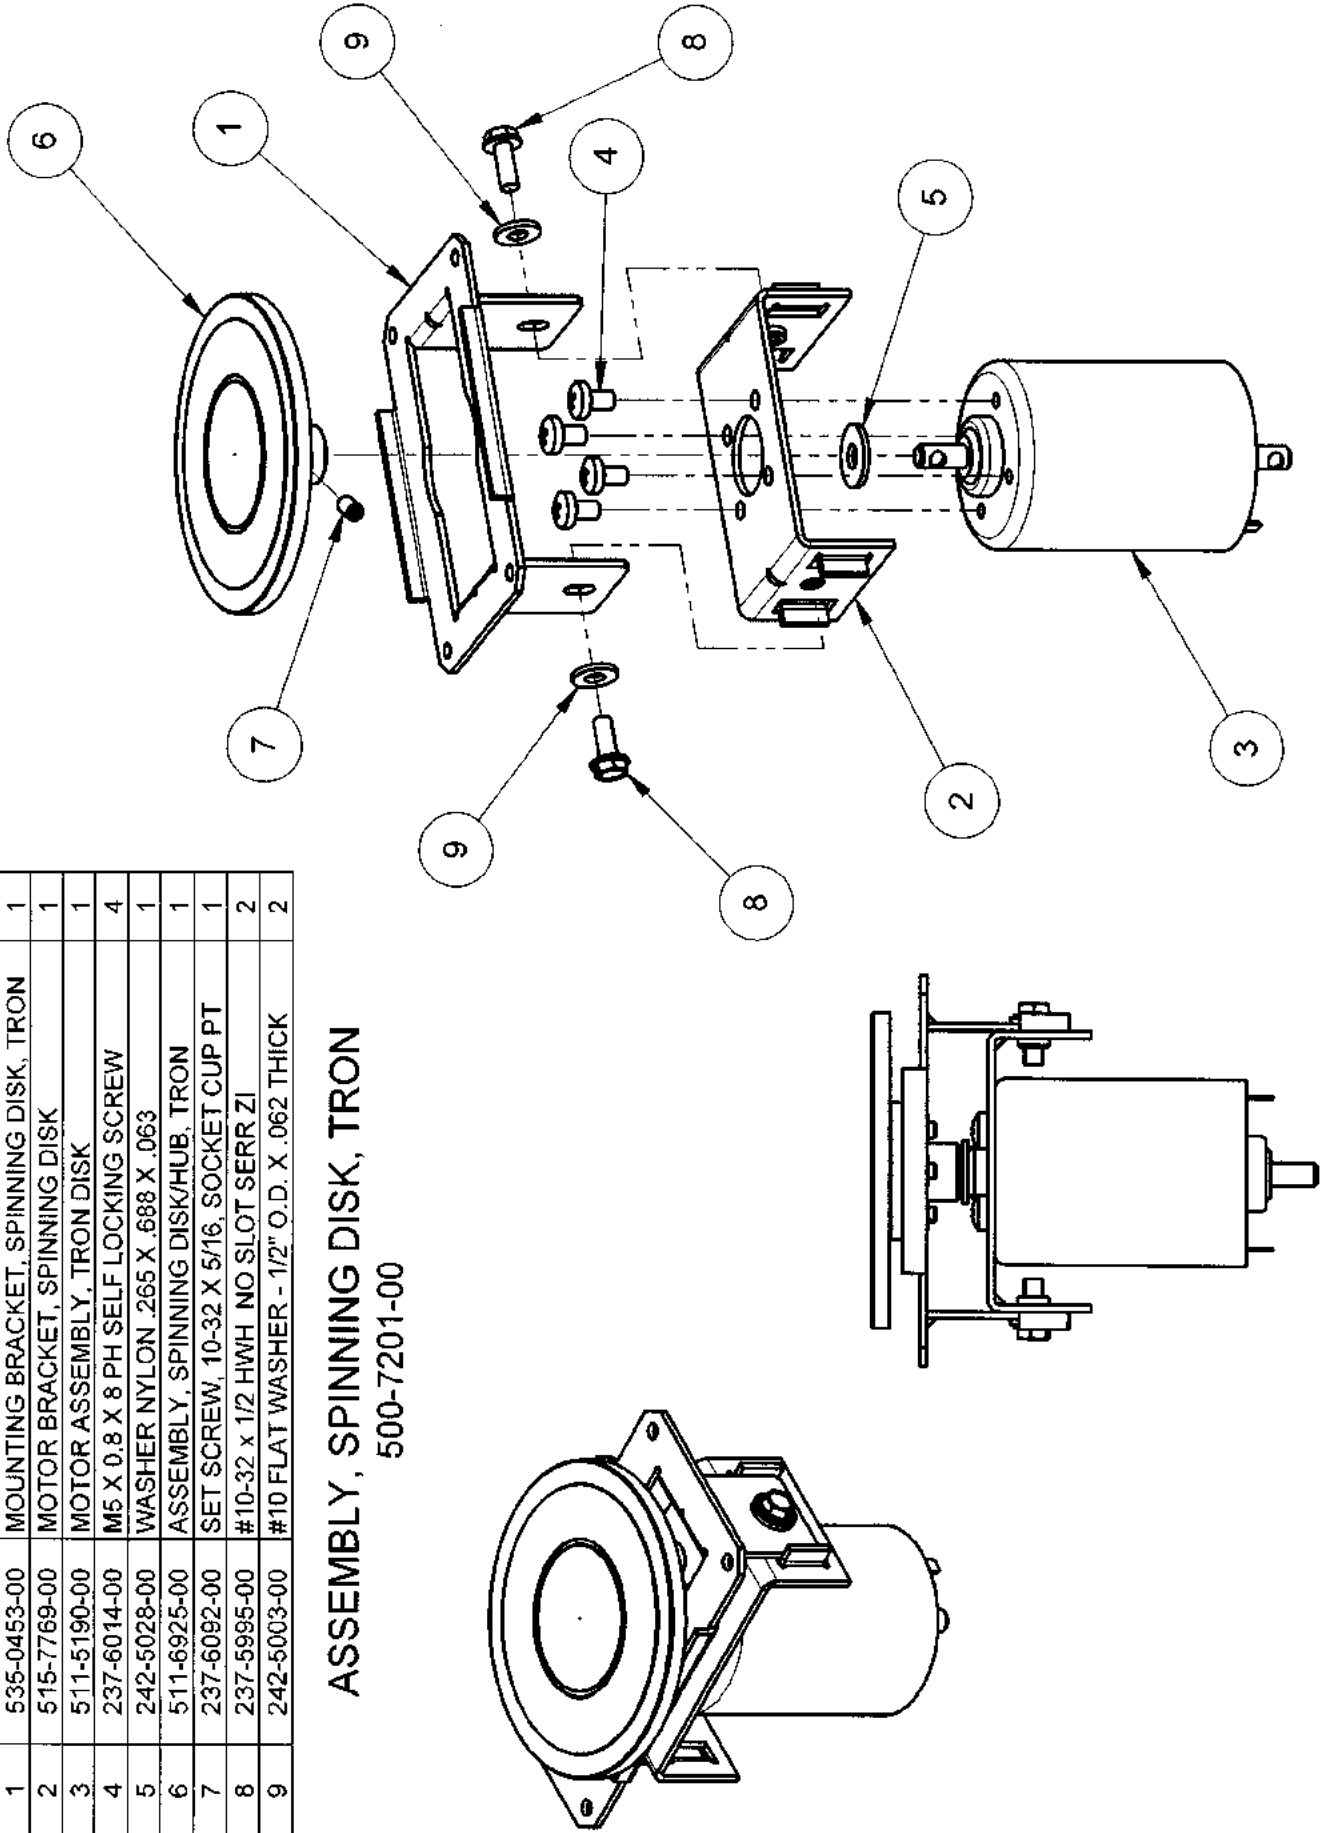


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	545-7275-00	MOUNT PLATE, PLASTIC, RECOGNIZER	1
2	880-5125-01	RECOGNIZER TOY, MODIFIED	1
3	237-5833-00	SCREW, #4 X 5/8" PFH - BLACK	2

ASSEMBLY, RECOGNIZER / PLATE, TRON
511-6933-00

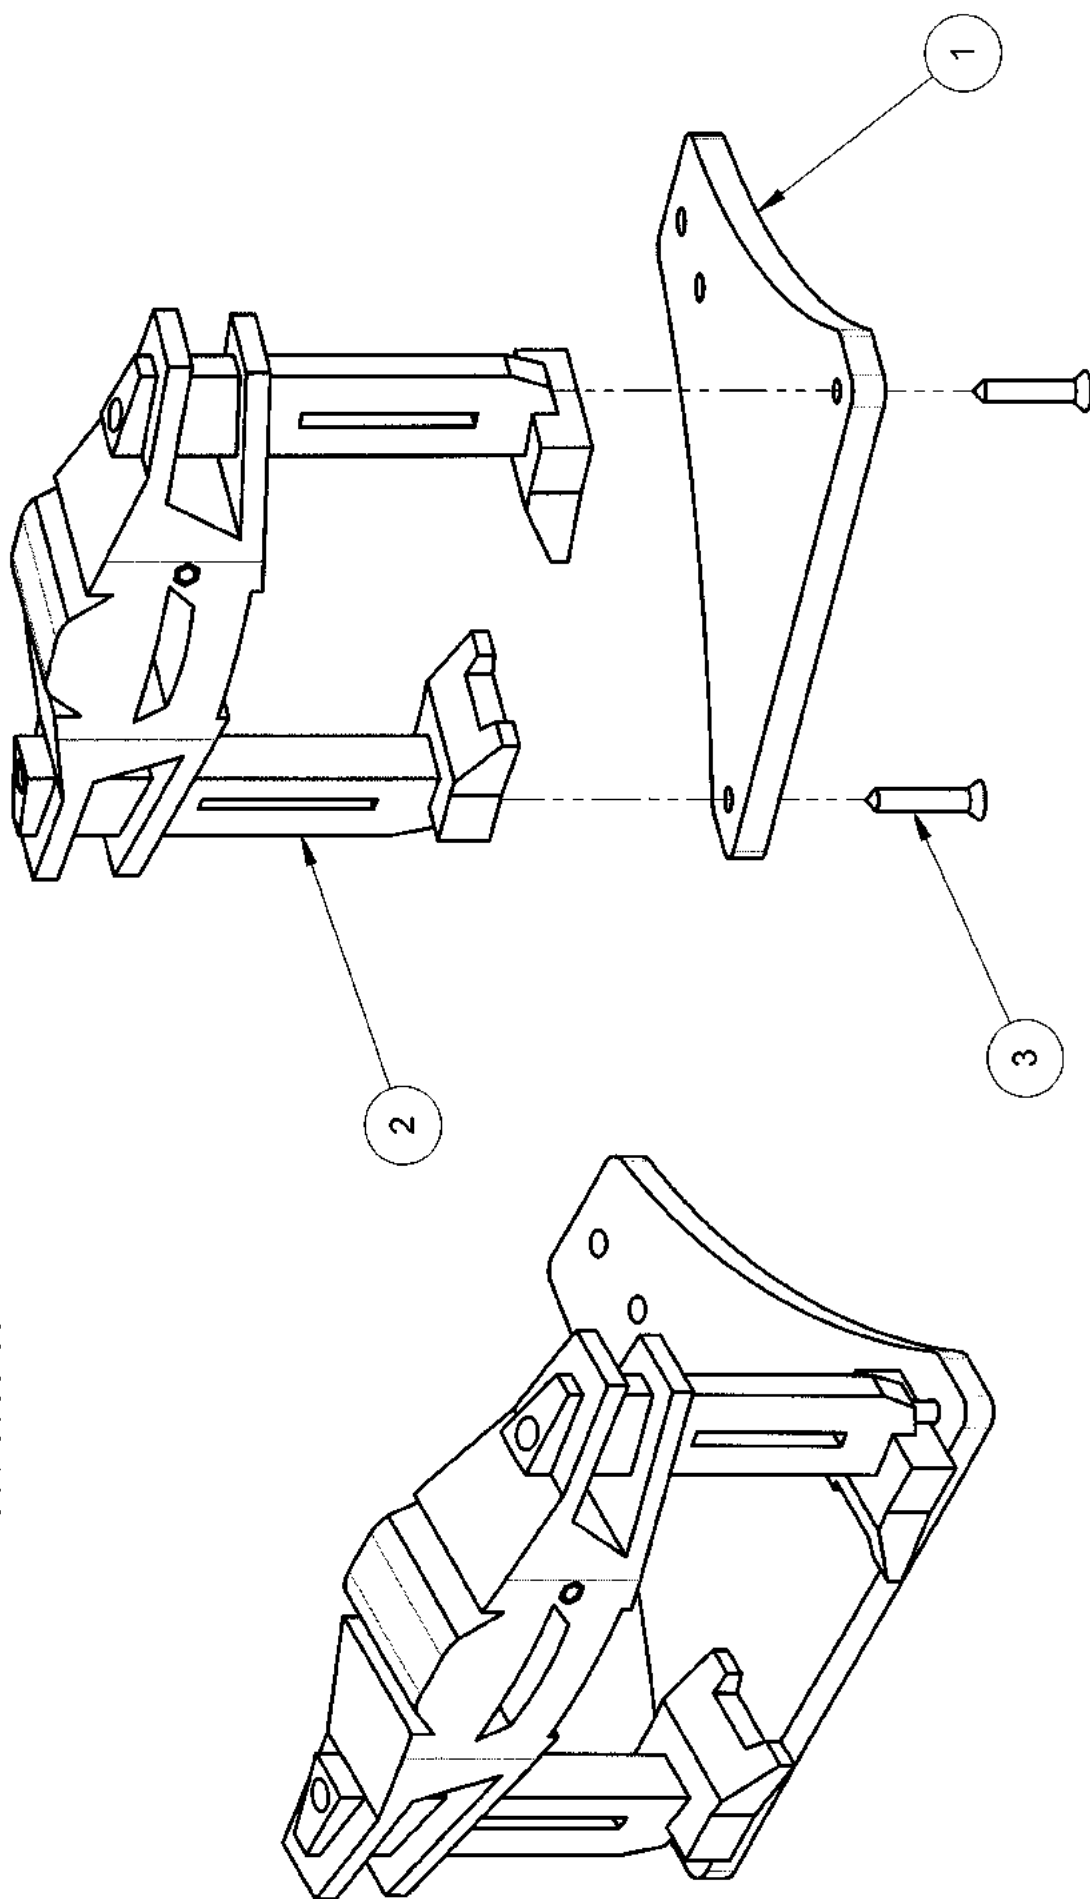

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9596-00	RECOG ARM ASSY, TRON PREMIUM	1
2	545-7274-00	GLIDE STRIP, RECOG ARM, TRON	1
3	237-5976-01	SCREW, 6-32 X 1/4 HWH SWAGE	2



ASSEMBLY, RECOGNIZER ARM, TRON PREMIUM
511-6930-00

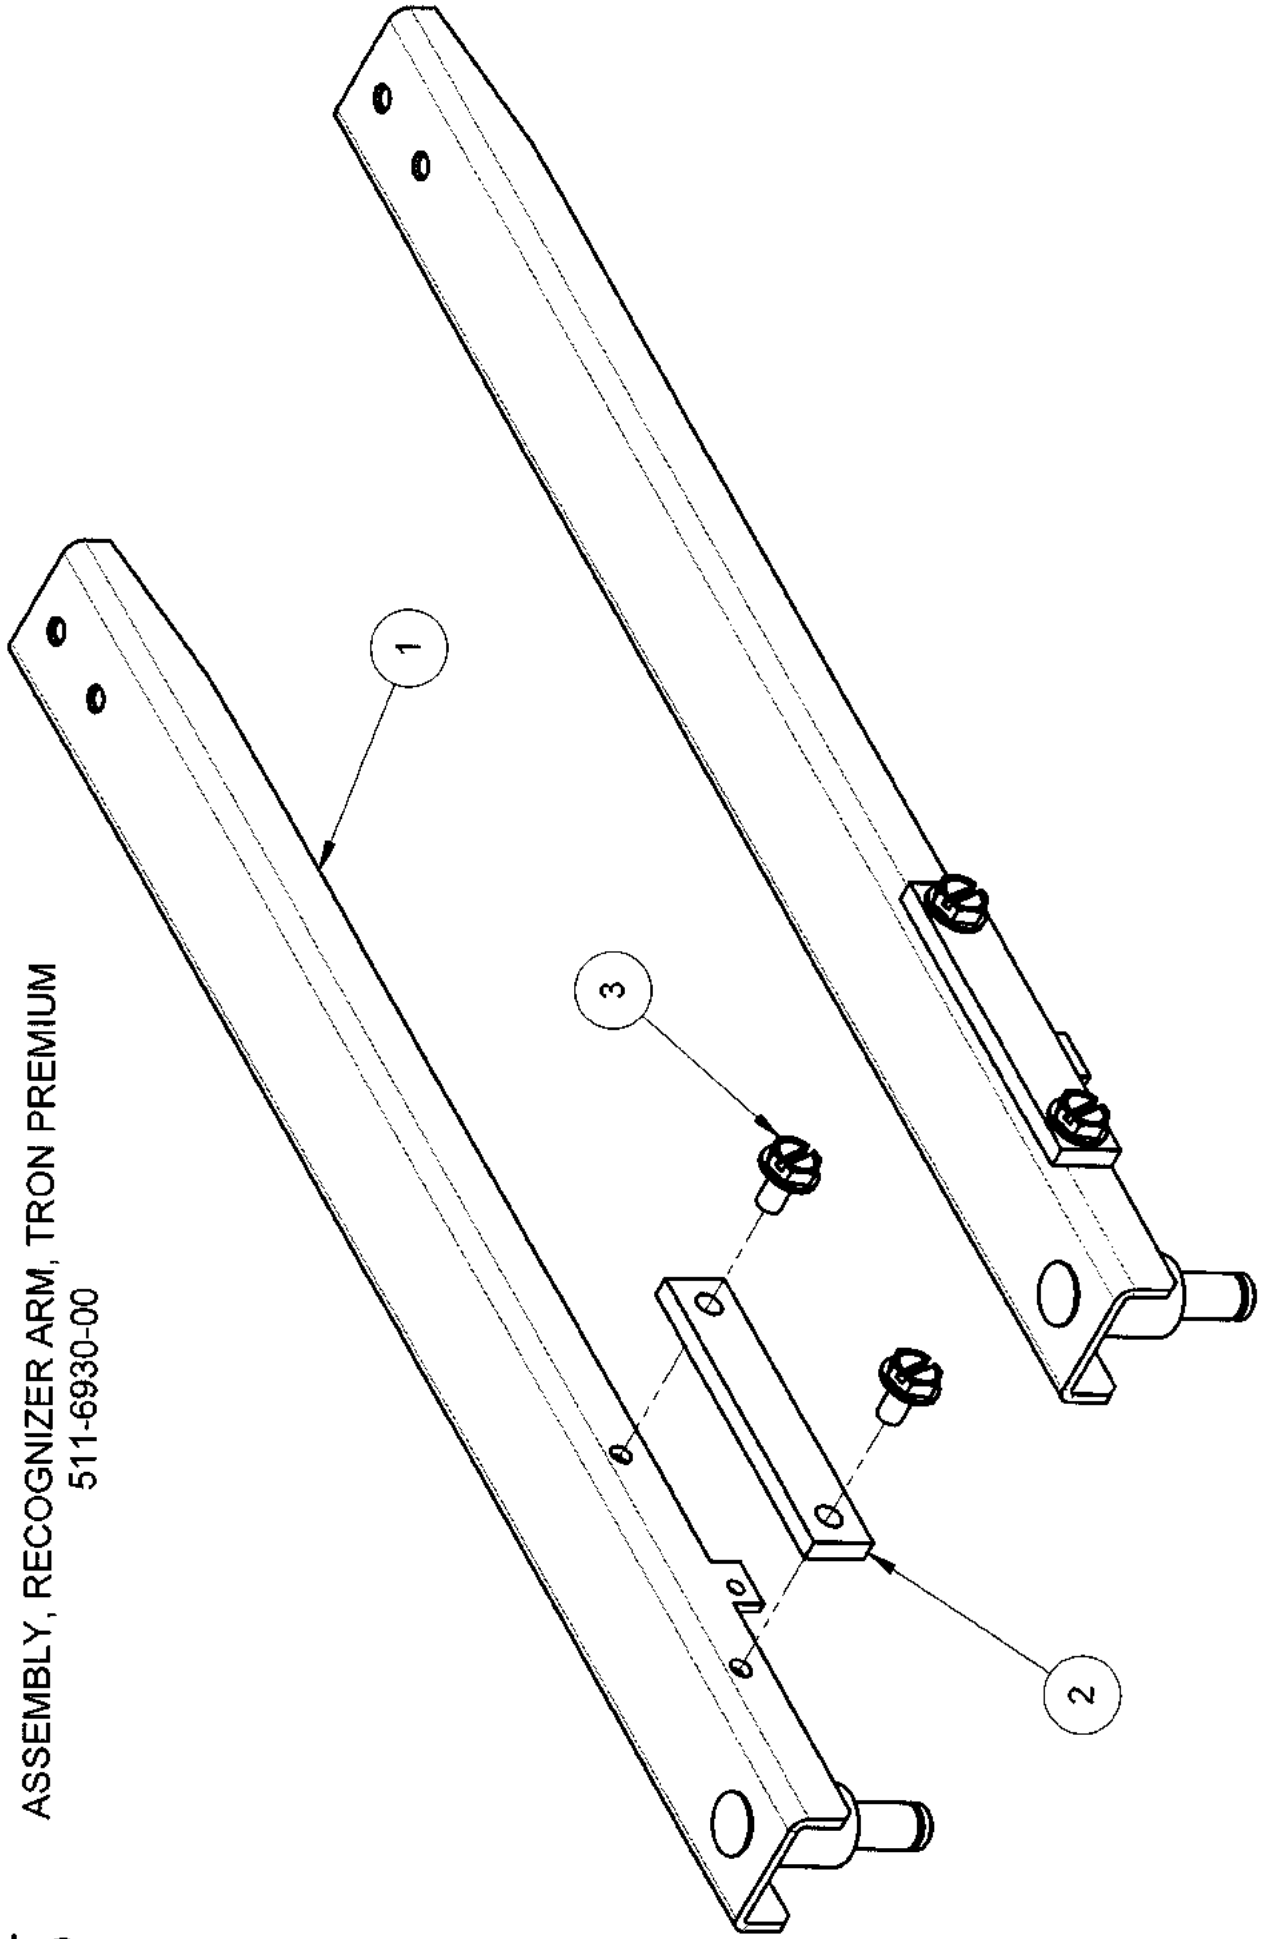

526


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	515-9595-00	MOTOR BRKT, RECOG, TRON PREMIUM	1
2	511-5063-00	MOTOR & CONN ASSY - SYNCH 24 VAC	1
3	232-5201-00	SCREW, 6-32 X 3/8" PPH MS SEMS	2
4	515-8640-00	CAM, RECOG MOTOR, TRON PREMIUM	1
5	237-6130-00	8-32 X 1/4 SET SCREW CUP PT	1
6	242-5072-01	NYLON WASHER .252 ID X .472 OD	1
7	232-5200-00	SCREW, 6-32 X 1/4" PPH SEMS	4
8	254-5008-12	HEX SPACER - 3/8"	2
9	535-0472-00	CAM, RECOG SWITCH, TRON PREMIUM	1
10	232-5204-00	SCREW, 6-32 X 3/4" PPH SEMS	2
11	240-5005-00	6-32 NYLON STOP NUT	2

MOTOR ASSY, RECOGNIZER, TRON PREMIUM
511-6929-00

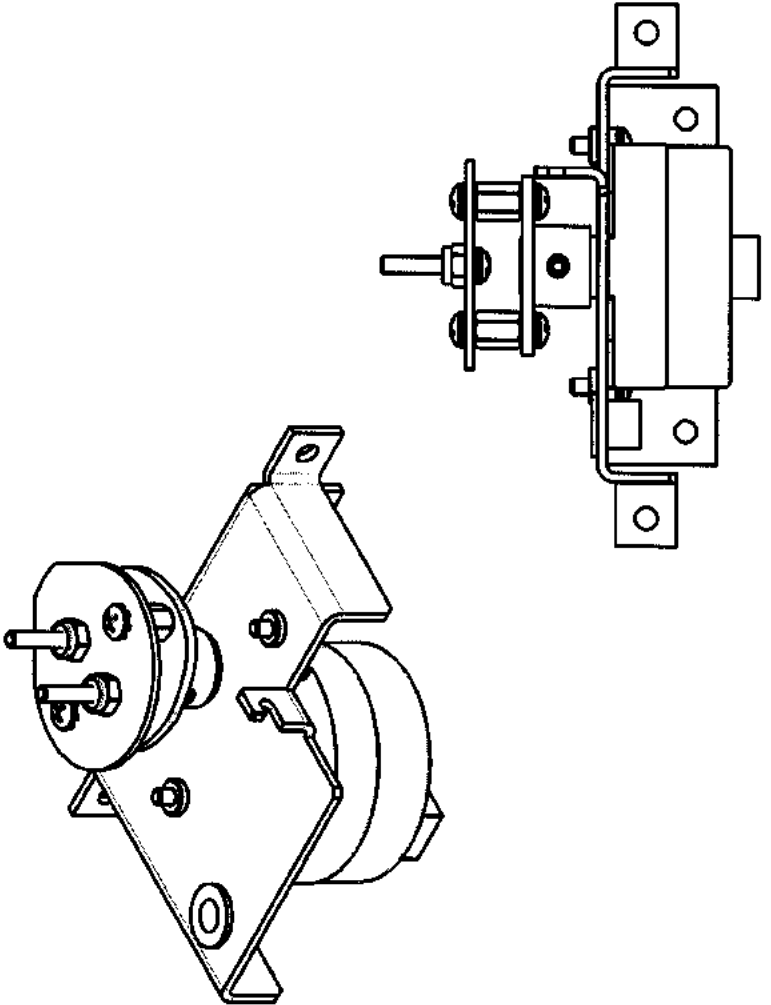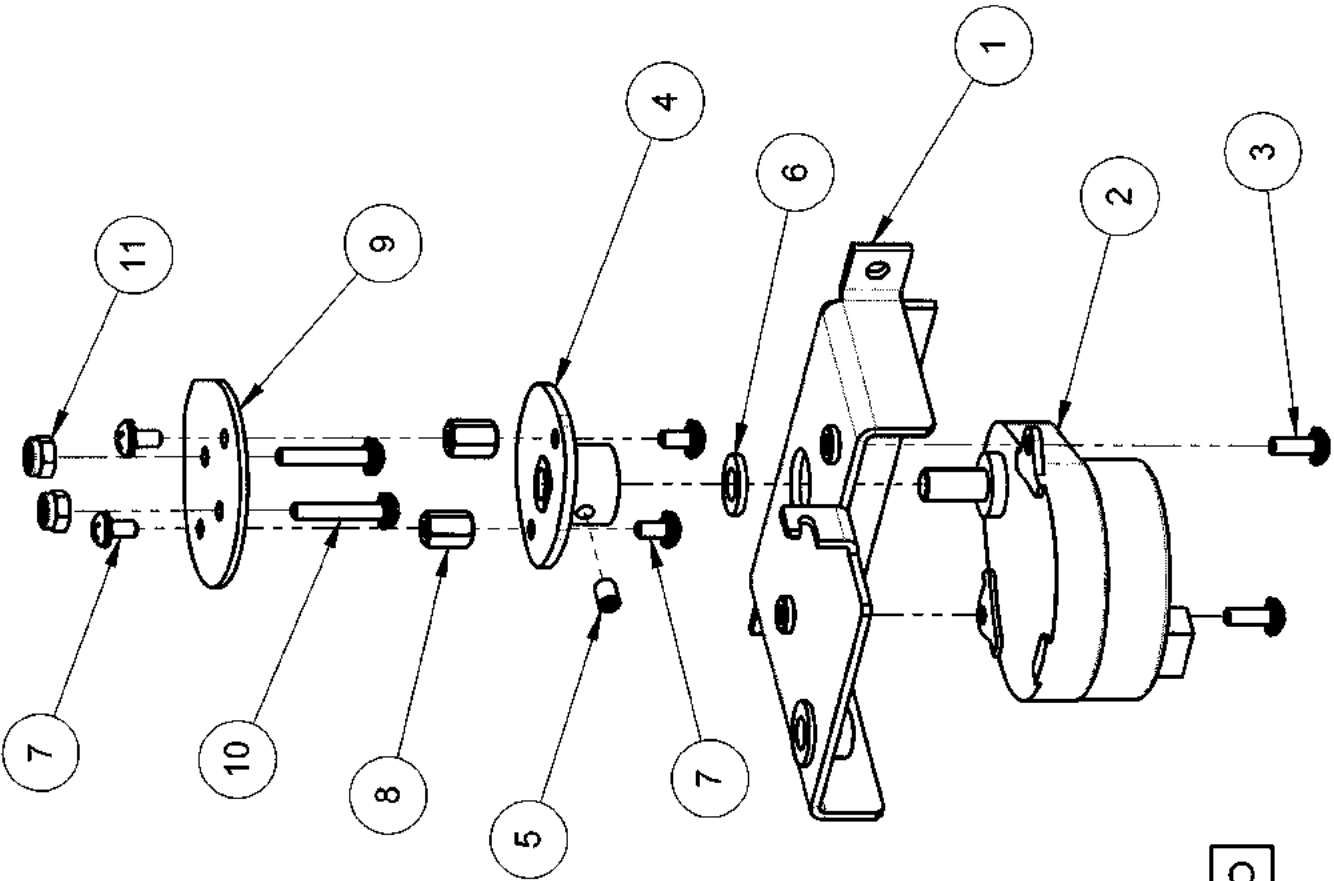

ASSEMBLY, RECOGNIZER MOTOR/ARM, TRON
500-2454-00

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	511-6929-00	MOTOR ASSY, RECOG, TRON PREM.	1
2	511-6930-00	ASSEMBLY, RECOG ARM, TRON PREM.	1
3	242-5008-00	WASHER, 1/4" ID X 1/2" OD X 1/16" THICK	1
4	270-5002-00	RETAINING RING - 1/4"	1
5	265-5001-00	RESET ARMATURE SPRING	1

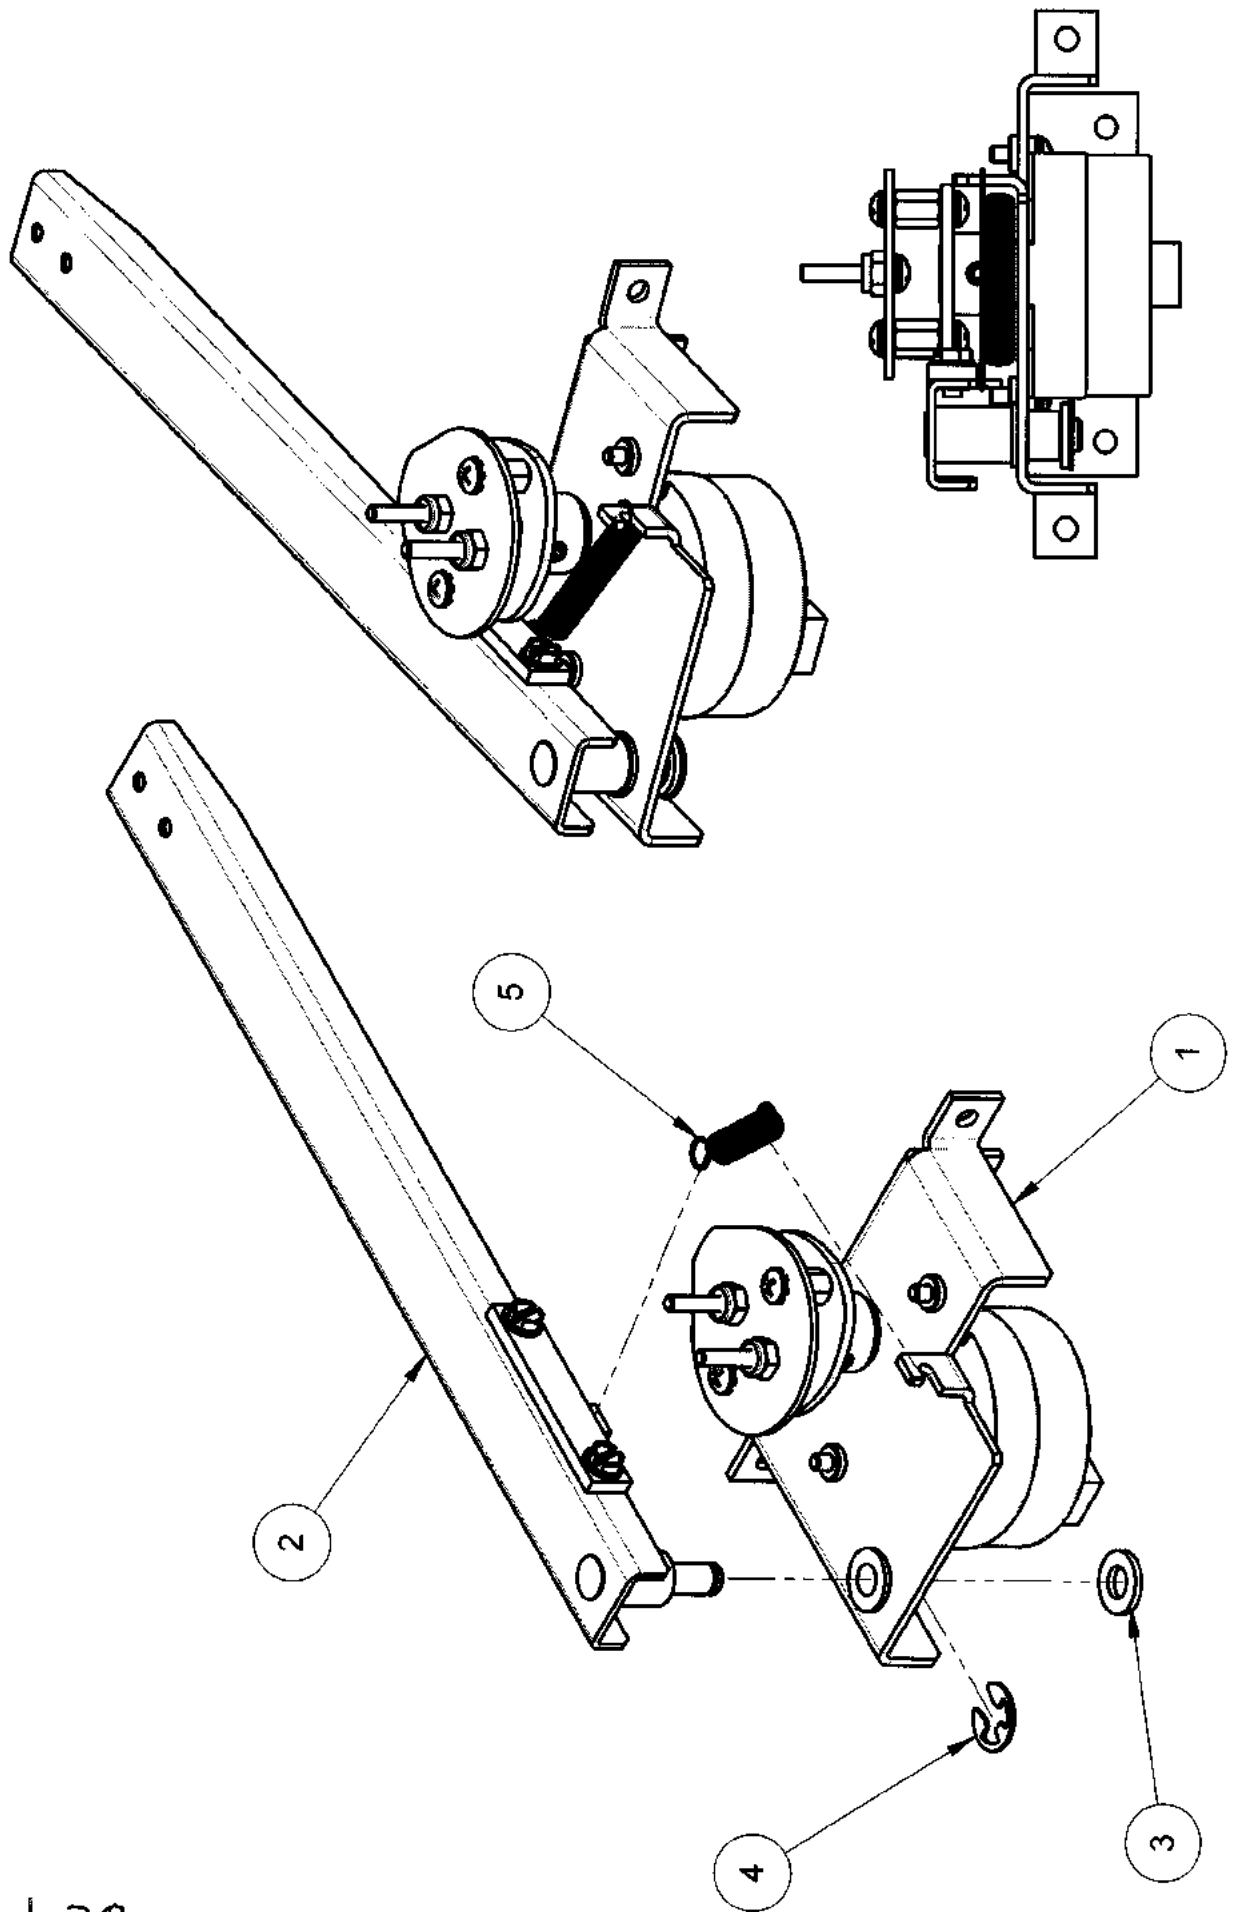


b28

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	510-5141-00	RIVET ASSY, SWITCH BRKT, RECOG	1
2	180-5119-02	MICRO-SWITCH - LIGHT ACTUATION	2
3	535-6539-00	SWITCH BODY PROTECT PLATE	3
4	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	4
5	112-5003-00	DIODE - 1N4004	3
6	180-5010-04	MICRO-SWITCH	1
7	237-5806-00	SCREW, 2-56 X 1/2" PPH MS ZINC	2
8	240-5301-00	2-56 HEX NUT	2
99*	036-5570-15-C2	CABLE, RECOGNIZER SWITCHES	1

* ITEM NOT SHOWN

ASSEMBLY, RECOGNIZER SWITCH, TRON PREMIUM 511-6932-00

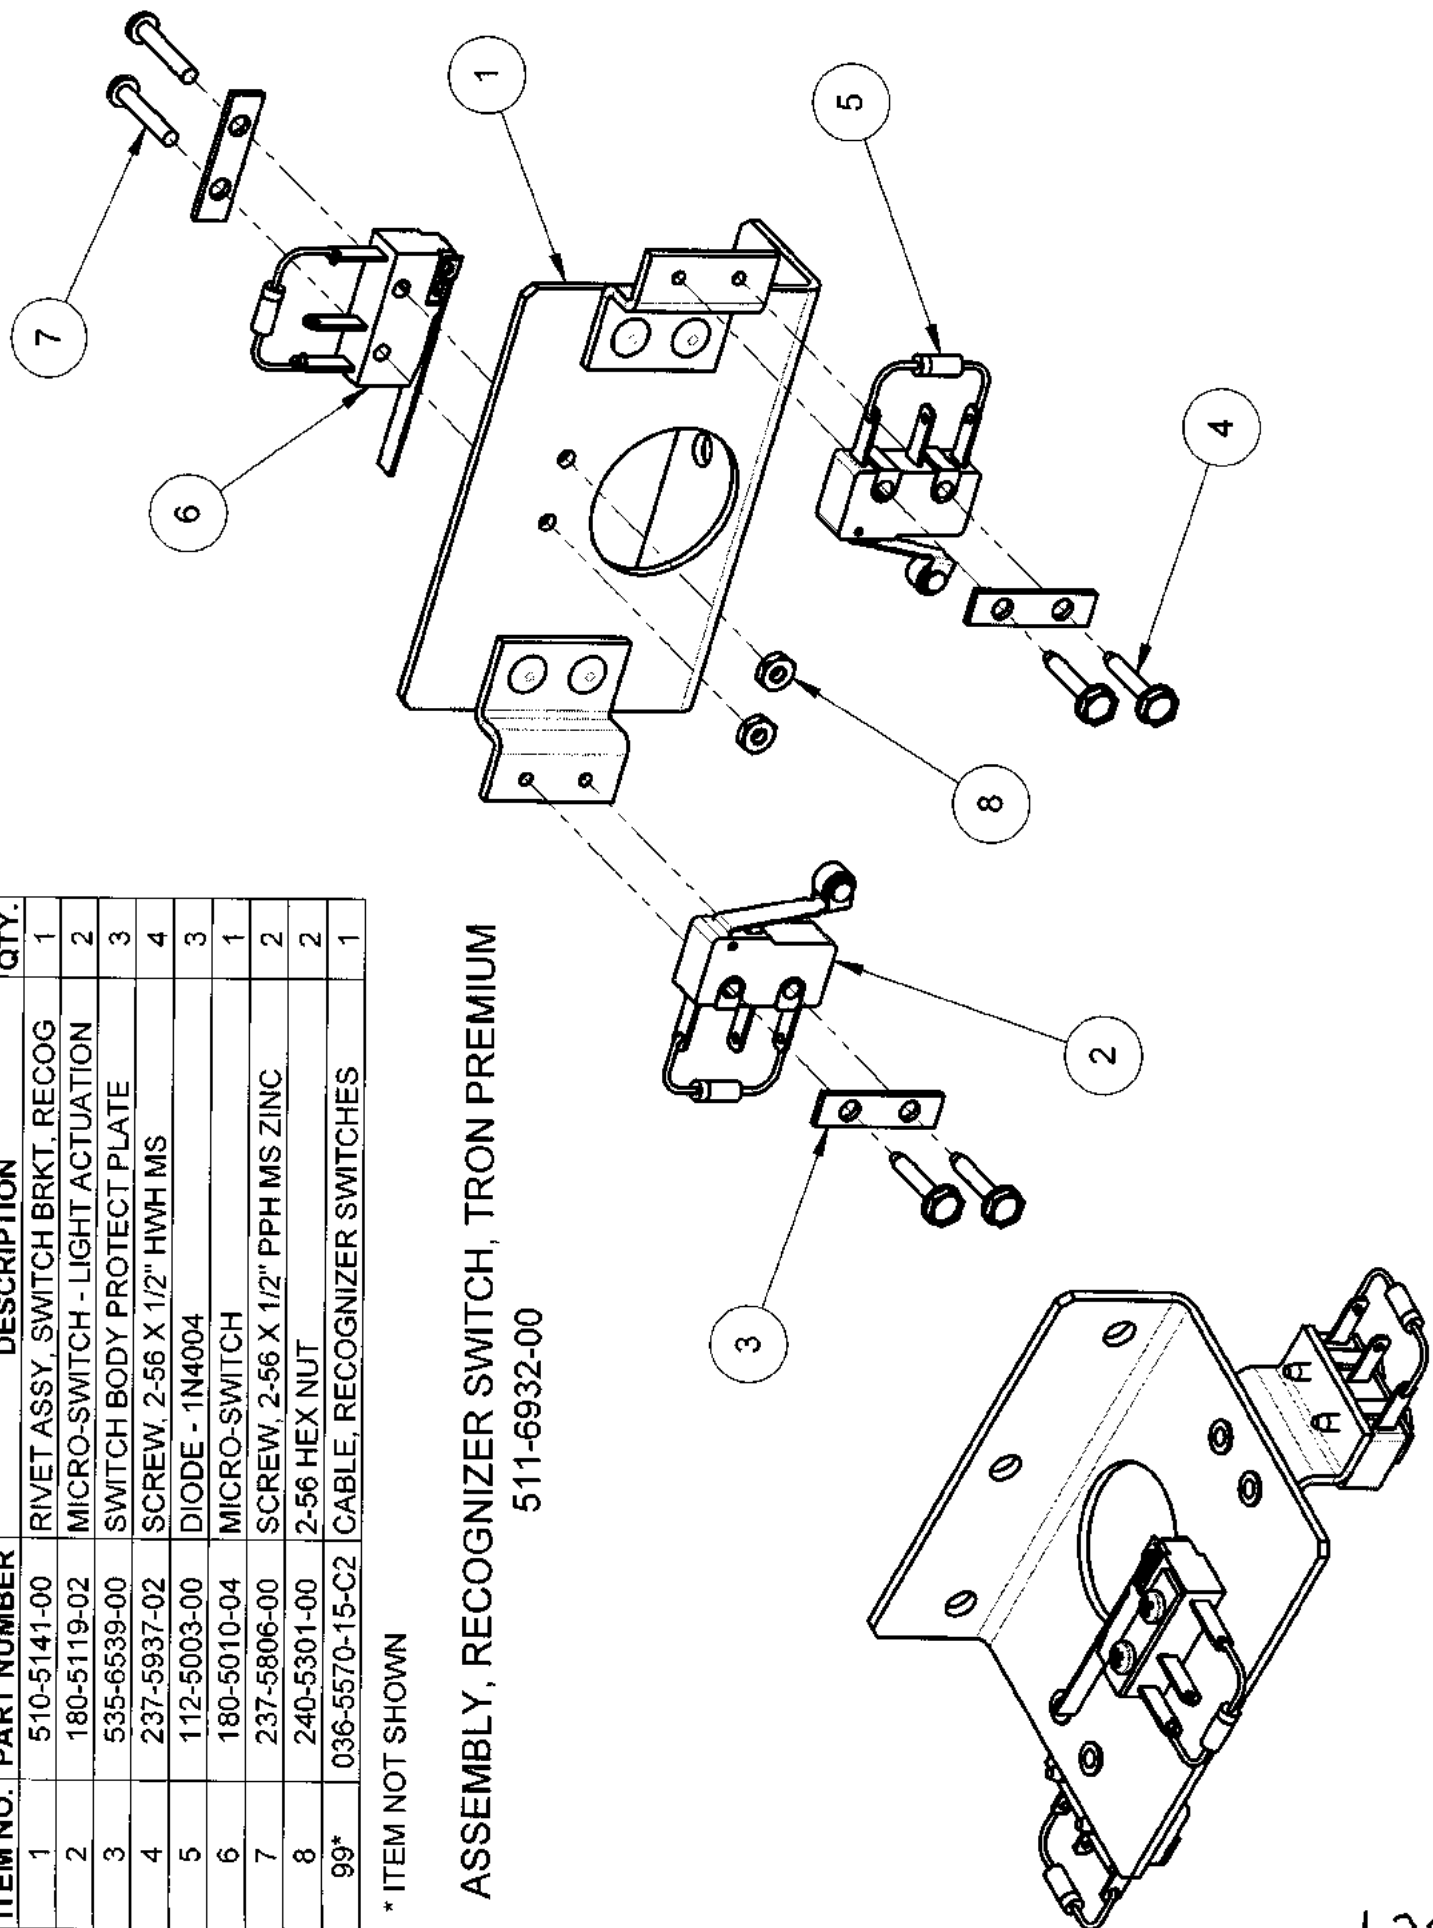



530

BACK PANEL ASSEMBLY, TRON 500-7199-00

ITEM #	PART NUMBER	DESCRIPTION	QTY.
1	525-5711-00	BACK PANEL, TRON	1
2	519-5000-00-HF	SOCKET & BULB ASSY, CLEAR	6
3	535-8964-00	BRACKET - BACK PANEL SUPPORT	2
4	234-5101-00	SCREW, #8 X 1/2" SLT HWH AB ZINC	8
5	550-5031-05	MINI MARS W/ EARS - BLUE SB	2
6	519-5101-05-HF	SOCKET/#89 BULB ASSY, BLUE - HEAVY FIL	2
7	234-5001-02	SCREW, #6 X 1/2" HWH	4
8	830-6124-22	BUTYRATE #22, BACK PANEL, TRON	1
9	237-5809-00	SCREW, #6 X 1/2" PTH A	5
10	040-5000-03	1/4" CABLE CLAMP	2
97*	600-5003-00	BRAIDED WIRE - 20GA.	3 FT.
98*	631-5000-00	STAPLE - 5/16	18
99*	036-5539-04-B9	BACK PANEL CABLE ASSEMBLY	1

* ITEM NOT SHOWN

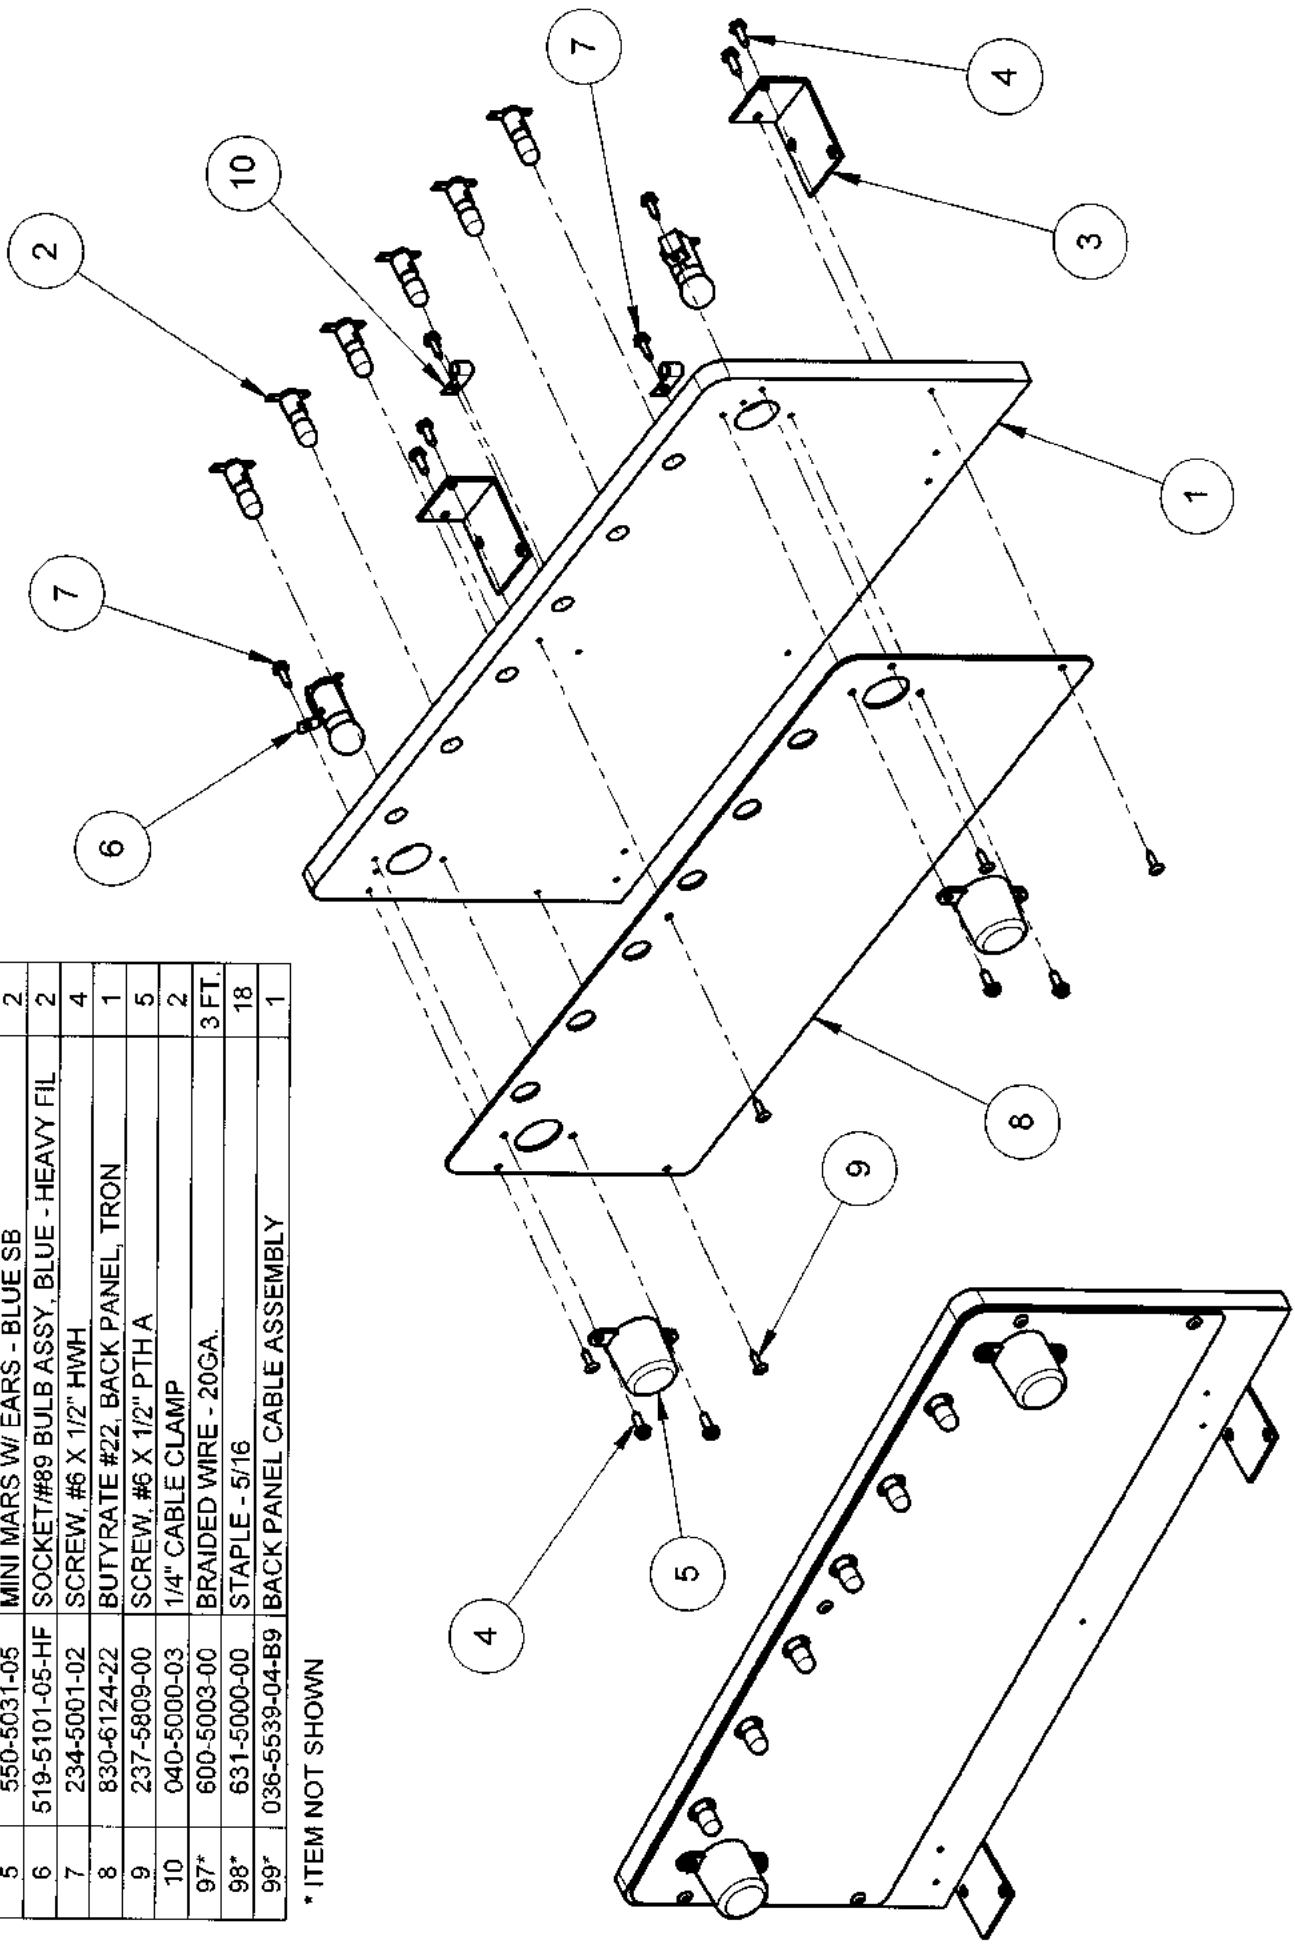

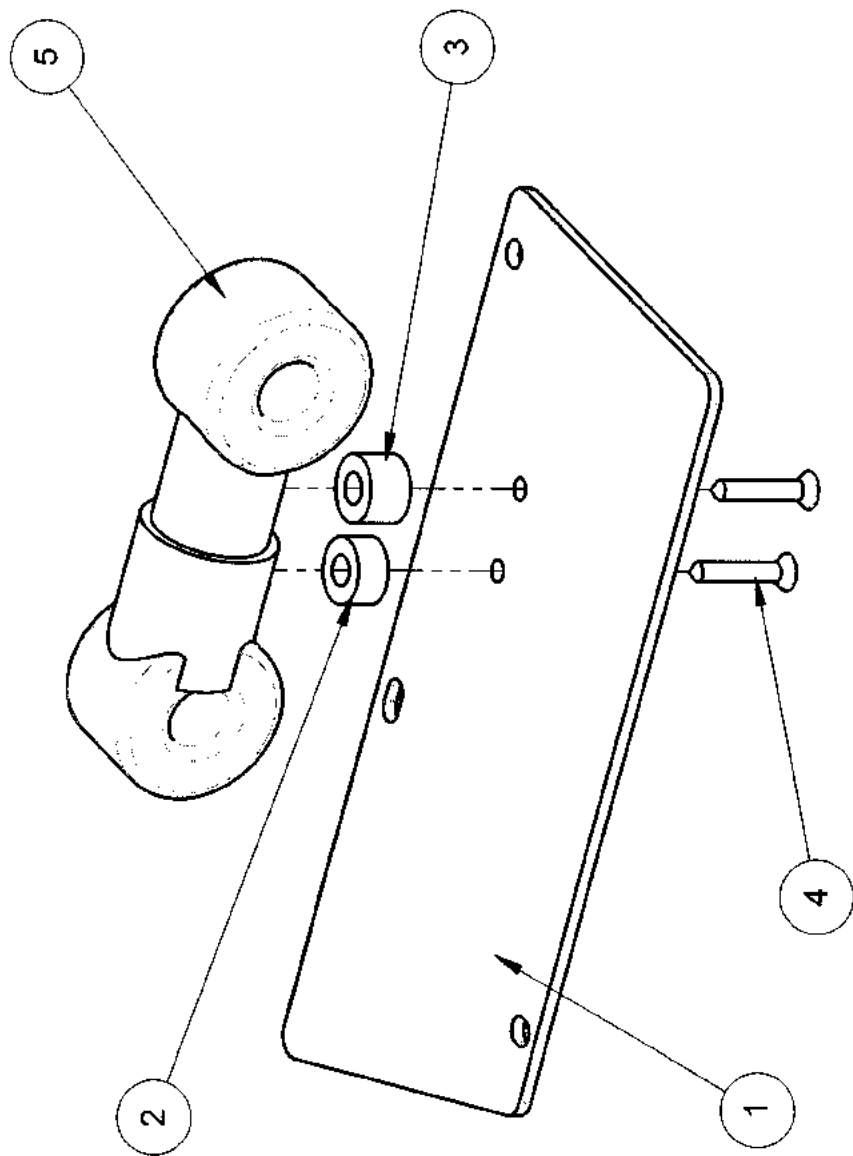

ITEM #	QTY	PART #	DESCRIPTION
1	1	830-6138-25	BUTY #25 - RIGHT RAMP COVER - TRON PREMIUM
2	1	254-5000-18	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 3/16"
3	1	254-5000-09	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/4"
4	2	237-5833-00	SCREW, #4 X 5/8" PFH - BLACK
5	1	880-5126-01	MOTORCYCLE - BLUE - MODIFIED

BUTY ASSEMBLY #25 - TRON PREMIUM

511-6899-25


BACK PANEL ASSEMBLY, TRON PREMIUM

500-7199-01

b32

ITEM #	PART NUMBER	DESCRIPTION	QTY.
1	525-5711-01	BACK PANEL, TRON PREMIUM	1
2	519-5000-00-HF	SOCKET & BULB ASSY, CLEAR	6
3	535-8964-00	BRACKET - BACK PANEL SUPPORT	2
4	234-5101-00	SCREW, #8 X 1/2" SLT HWH AB ZINC	9
5	550-5031-05	MINI MARS W/ EARS - BLUE SB	2
6	519-5101-05-HF	SOCKET/#89 BULB ASSY, BLUE - HEAVY FIL	2
7	234-5001-02	SCREW, #6 X 1/2" HWH	4
8	830-6138-22	BUTYRATE #22, BACK PANEL, TRON PREMIUM	1
9	237-5809-00	SCREW, #6 X 1/2" PTH A	9
10	040-5000-03	1/4" CABLE CLAMP	2
11	240-5101-00	8-32 T-NUT	2
12	511-6932-00	ASSEMBLY, RECOG SWITCH, TRON	1
13	500-2454-00	ASSEMBLY, RECOG MOTOR/ARM, TRON	1
14	232-5303-00	SCREW, #8-32 X 5/8" PPH MS SEMS	2
97*	600-5003-00	BRAIDED WIRE - 20GA.	3 FT.
98*	631-5000-00	STAPLE - 5/16	18
99*	036-5570-04-C2	BACK PANEL CABLE ASSEMBLY	1

* ITEM NOT SHOWN

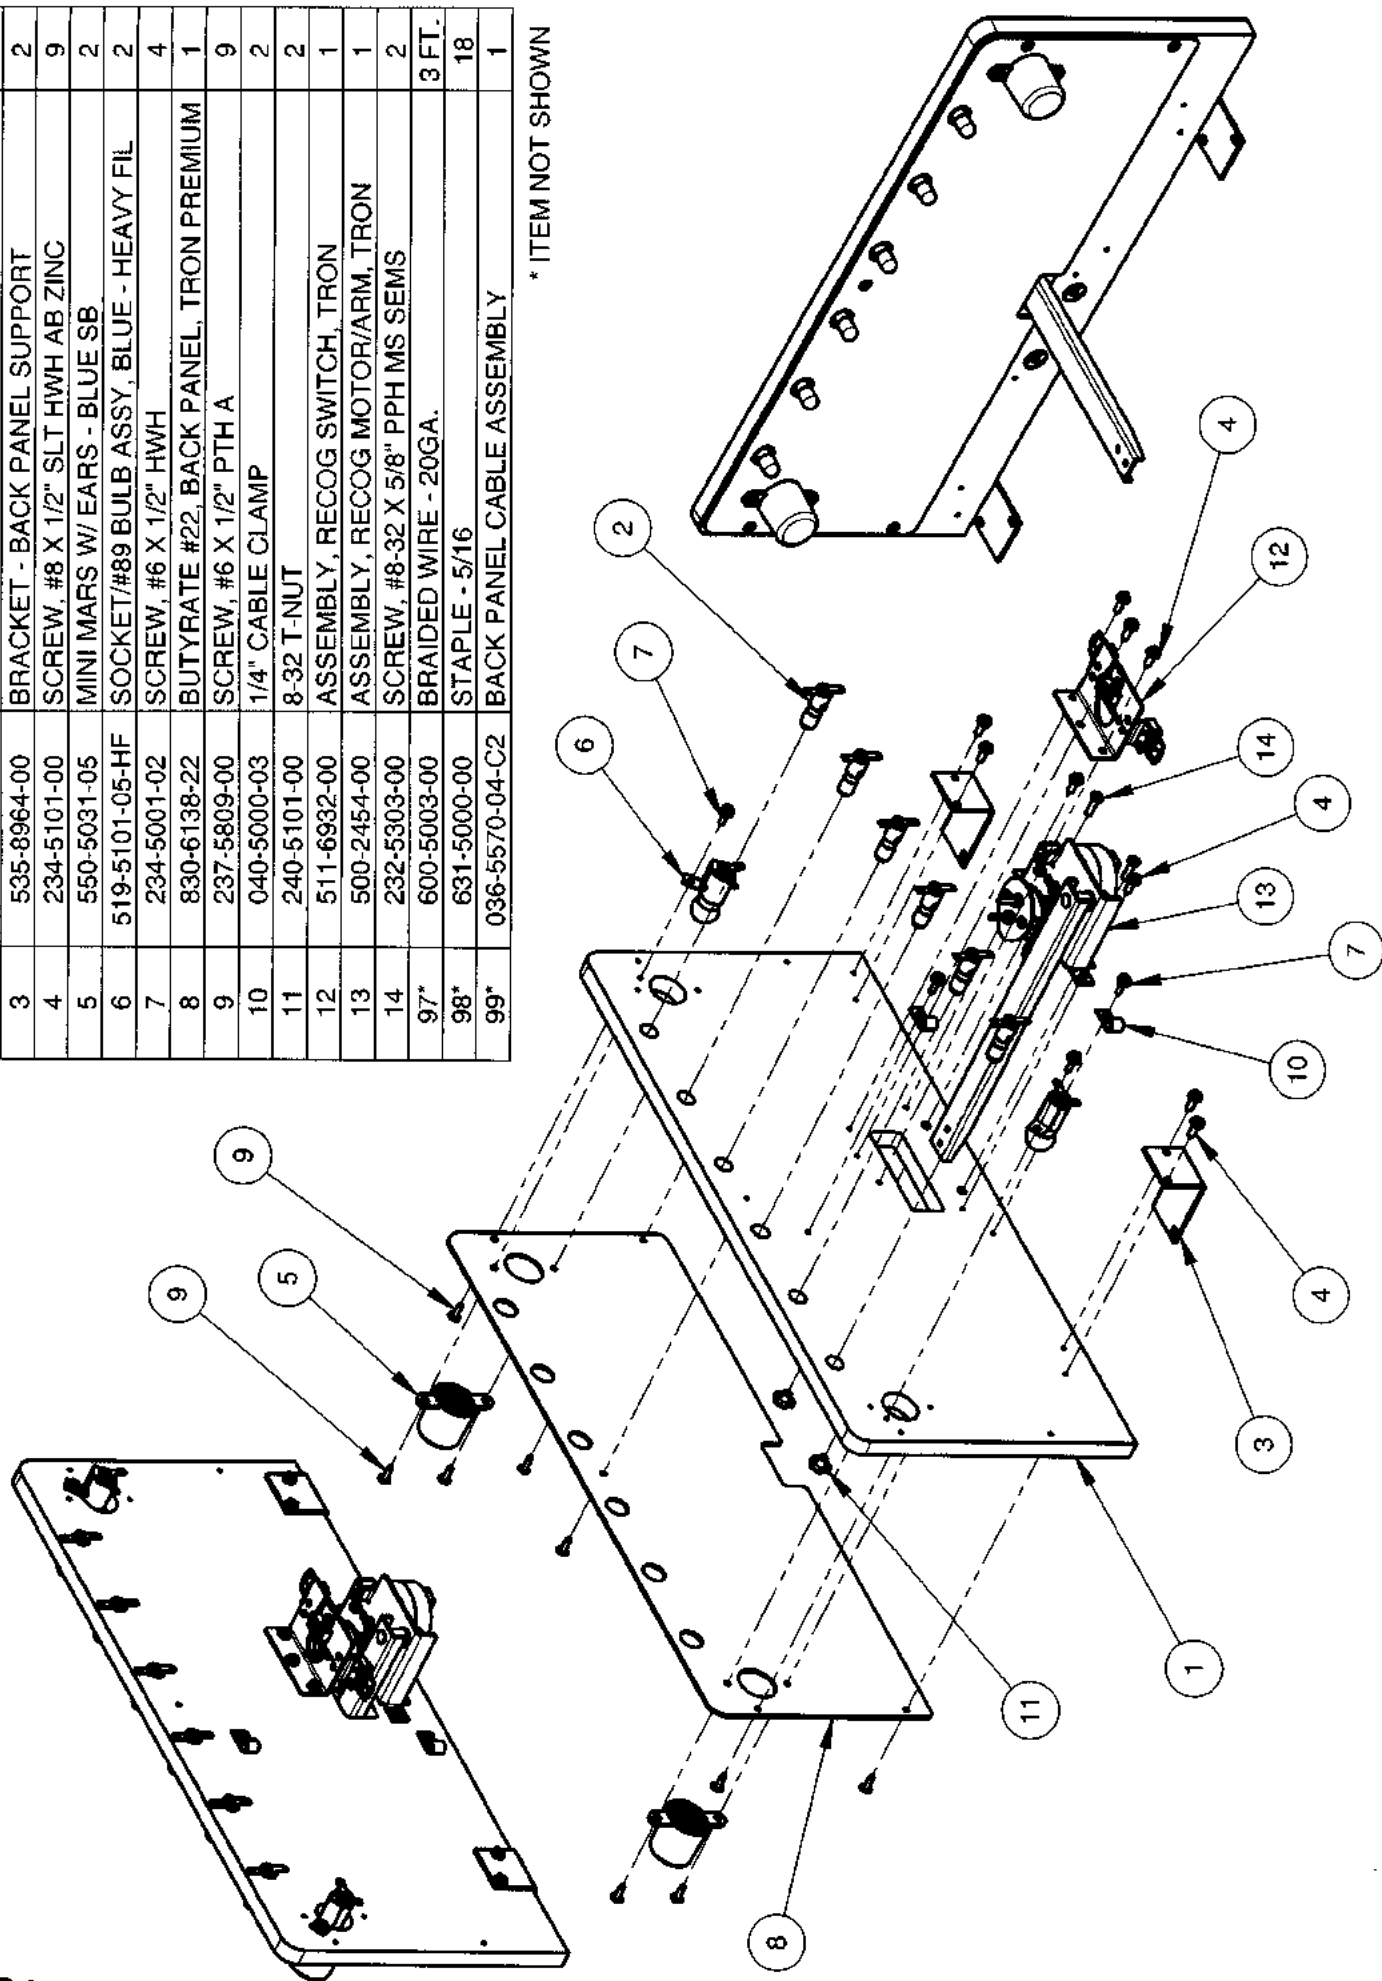

Optional Kits available through your Distributor:

Pinball Location Maintenance Standard Kit (for Tron Pinball) 502-6002-B9

Standard Kit includes : 8 oz. Novus Wax #2 Fine (Red) (675-0003-01), Cloth, Rubber Rings (used above playfield), Bulbs (Bulb quantities vary and is limited to 25 per type), Fuses (1/per type) and 4 Pinballs. **Note:** Quantities, sizes and contents subject to change without notice.

Pinball Location Maintenance Deluxe Kit (for Tron Pinball) 502-6003-B9

Deluxe Kit includes : Pinball Location Maintenance Standard Kit as described above plus a quantity of Flipper Rebuild Kits. **Note:** Quantity varies which equals the same quantity of flippers used in this game.

▲ THIS GAME KIT INCLUDES (2) FLIPPER REBUILD KITS ▲

Plastics*Kit (for Tron) 803-5000-B9

Plastics Kit includes: Plastic Sets (830-6124-XX)

Decals*Kit (for Tron) 802-5000-B9

Decals Kit includes: Decal Set (820-6588-XX)

Mylar*Kit (for Tron) 802-5001-B9

Mylar Kit includes: Pop Bumper (820-6589-00)

***Attention:** No individual Plastic or Decal can be ordered separately, unless noted otherwise. Plastics & Decals are subject to change without notice during and / or after production. Key Fobs subject to availability and may or may not be included in the plastic set. All designs, shapes & pieces used subject to change without notice. Kit contents subject to change. Service Bulletin(s) will announce any critical changes, if warranted. The last 2-digits shown on plastics or decals are for reference only.

TRON PREMIUM PARTS:

Pivot Hinge Chrome (Left Style) 535-7999-06

Pivot Hinge Chrome (Right Style)..... 535-7999-07

Speaker Grill Chrome..... 535-8081-04

Chrome Legs with Leveler Asm. 500-5921-10

Chrome Side Armor Left..... 535-9596-10

Chrome Side Armor Right..... 535-9596-11

Front Molding Lockdown Asm..... 500-6881-00

Front Molding (Chrome) No Button Hole..... 500-6882-02-02


Bracket, Playfield Support Slide..... 535-6862-05

Start Button..... 500-6388-44-TL

I/O Power Driver PCB..... 520-5317-00

CPU/Sound PCB..... 520-5303-00

TOURNAMENT PINBALL

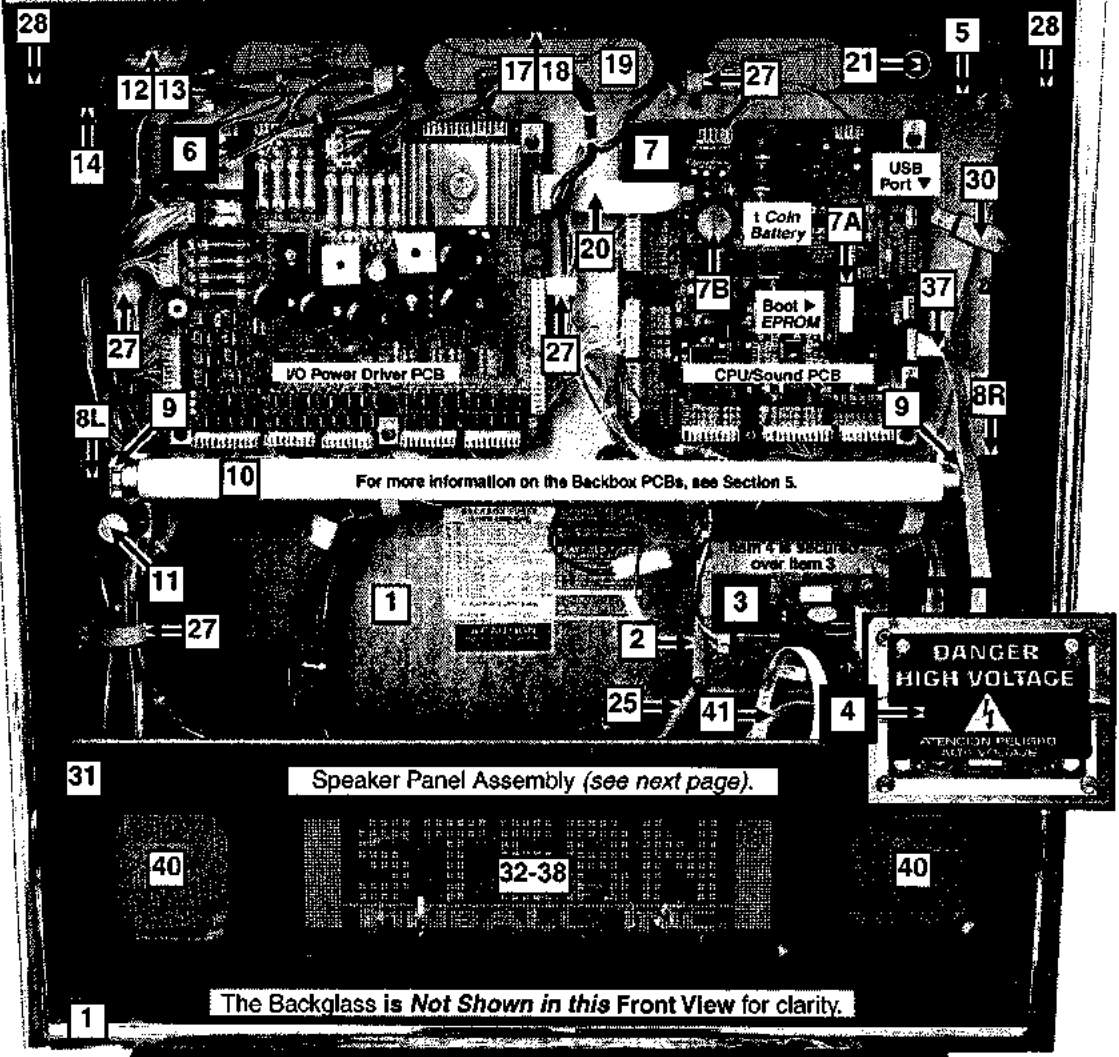


Parts Identification

Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.
1	Backbox Avatar™ (No Parts)	1	525-5631-17-B1
Item 1 Note: Chrome T-Molding is installed and cannot be ordered separately. Fuse Description (#20-6384-00) and High Voltage Caution (UL) (#20-6062-01 & -02) Decals.			
2	PCB Metal Mounting Plate [Display]	1	535-9769-00
3	Display Power Supply PCB	1	520-5138-00
Item 3 is secured to ② bottom by: #8-32 X 3/8" SHWH Swg. (Zinc) (Qty. 2) (237-5975-00)			
4	Plastic Cover [DANGER HIGH VOLTAGE]	1	830-6053-00
Items 3 & 4 are secured to ② top by: 1-1/4" X 3/8" Plastic Spacer Gray (Qty. 2) (254-5000-06) and #8-32 X 1-3/4" SHWH Sec. (Zinc) (Qty. 2) (237-5975-26)			
5	PCB Metal Mounting Plate [I/O+CPU]	1	535-9664-00
Items 2 & 5 are secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/each) (234-5101-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16" Thick (Qty. 1/each) (242-5003-00) Note: Where a Wire Clamp (Item 27) is mounted, a #10 Washer is not required.			
6	I/O Power Driver PCB [S.A.M. Sys.]	1	520-5249-00
7	CPU/Sound PCB [S.A.M. System]	1	520-5246-00
7A: 8MB EPROM #M27C801-100F1 (980-5016-00) Ordering Note: Programmed EPROM (985-B00T-SAM) 7B: Coin Cell Battery (CR2430 3V) (000-0644-01) For USB Memory Stick Information, see Item 30 on the next page.			
Items 6 & 7 are secured to Item 5 by: #8-32 X 3/8" SHWH Swage (Zinc) (Qty. 10) (237-5975-00) and 1/4" Std. Ftn. Spacer White (Qty. 5 [I/O] / Qty. 4 [CPU]) (254-5007-05)			
8L	Fluorescent Light Bracket (Left Style)	1	535-7739-00
8R	Fluorescent Light Brckt. (Right Style)	1	535-7739-01
Items 8L & 8R are secured to Item 1 by: #10-24 X 1-1/4" Carriage Bolt Square Neck (Qty. 2/per) (231-5012-00), #10-24 Keps Nut (Qty. 2/per) (240-5207-00) and 3/4" X 3" Reinforced Strapping Tape (Qty. 1; sold in 12' length only) (626-5040-00)			
9	Fluorescent Lamp Holder (Socket)	2	077-5214-01
Item 9 is secured to Items 8L and 8R by: #6-32 X 5/8" PPH MS (Sems) Zinc (Qty. 1/per) (232-5203-00) Lock-In Fluor. Bulb with Yellow Socket Clip (Qty. 1/per) (545-6271-00)			
10	Fluorescent Tube 24" (F18T8CW)	1	165-5061-00


Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.
11	Starter - Fluorescent (FS2 Light)	1	165-5011-01
	Starter Base (with leads) (on Item 8L)	1	077-5213-00
Item 11 is secured to Item 8L by: #4-40 X 1/2" PPH MS (Sems) Zn. (Qty. 2) (237-5813-00)			
12	Ballast Mounting Plate	1	535-8657-00
13	Ballast CU452-W 1/2" Core 120v 60 Hz 13W	1	010-5015-00
Items 12 & 13 are secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 2) (234-5101-00) >>> CAUTION - VERY HOT" Decal (820-6266-00) EU / UK Only: Ballast, 5/8" Core 50/60 Hz (010-5015-01)			
14	Ground Strap (5')	1	600-5006-05
15*	Roto Lock Male (on Cabinet)	1	355-5006-01
16	Roto Lock Female (R2-0002-02)	1	355-5006-02
Item 16 is secured by: #10-24 X 1-3/4" CBSN (231-5022-00), #10-24 Keps Nut (Qty. 2) (240-5207-00), #10-24 X 2" CBSN (231-5045-00) and #10 Washer 7/32" I.D. X .5" O.D. X 1/16" (Qty. 5) (242-5003-00). See opposite next page.			
17	Lock Mounting Plate	1	535-0072-00
18	Lock 5/8" Barrel, 3/4" x 1.5" Flat Cam	1	355-5055-00
Items 17 & 18 are secured by: #8 X 1/2" TP Torx T20 Black (Qty. 2) (237-6173-05)			
19	Back Vent Grill 2-1/2" X 18"	1	545-5072-02
20	Ribbon Cable, 20-Pin (3.5")	1	036-5000-350
Item 20 connects the I/O Pwr. Dvr. PCB to the CPU/Sound PCB. For 14-Pin see next page.			
21	Button Hole Plug (Blk) (Happ #52-6214-00)	1	500-6566-00
Item 21 plugs the Access Hole required if using optional BETAbrite Sign or Data cables.			
22	Header Sign TOURNAMENT PINBALL	1	545-6133-00
23	Bracket, Tournament Sign (Black)	2	535-0081-02
Item 22 is mounted to Item 23 with #8-32 X 3/8" PPA screw (Qty. 2/per) (232-5303-01) & #8-32 Nylock Nut (Qty. 2/per) (240-5102-00). Item 23 is secured to Item 1 by: #6 X 5/8" PPH (Qty. 2/per) (232-5101-01)			

PARTS TABLE & VIEWS CONTINUED ON THE NEXT PAGE. ►

Backbox [S.A.M. System] - Parts

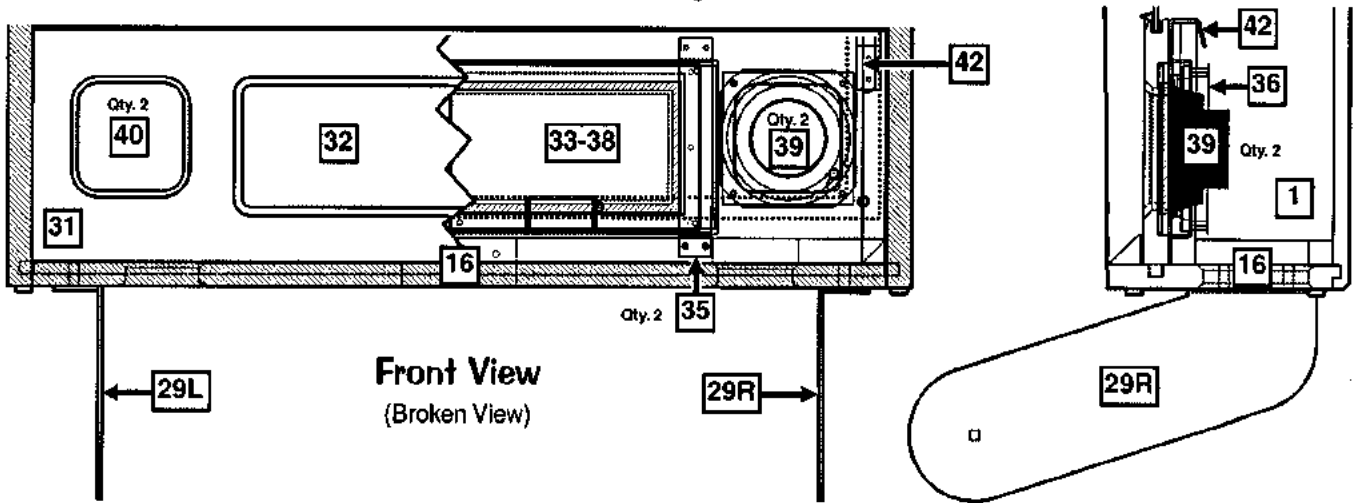

Speaker Panel [S.A.M. System] - Parts

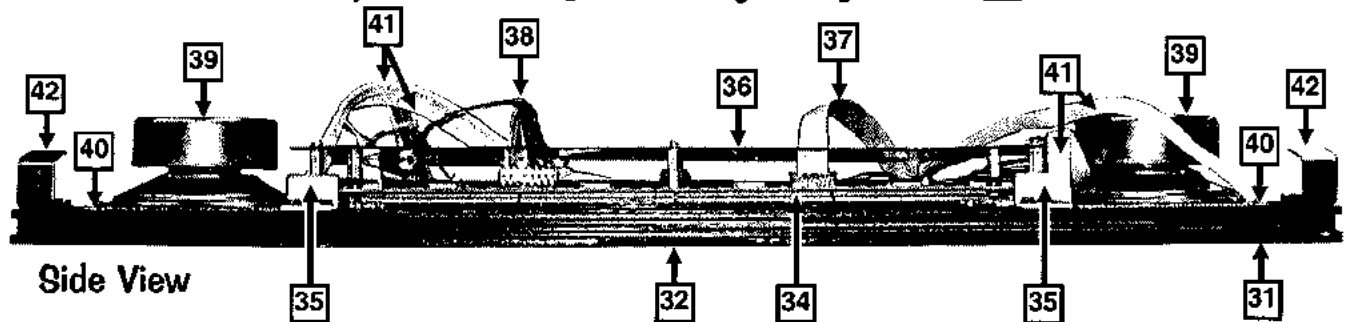

Nr.	BACKBOX PARTS	QTY.	SPI PART Nr.	Nr.	SPEAKER PANEL PARTS	QTY.	SPI PART Nr.
* PARTS TABLE & VIEWS CONTINUED FROM THE PREVIOUS PAGE.							
25	Braided Wire (1-1/2 Feet)	1	600-5001-00	31	Speaker Panel (Black Wood)	1	525-5515-00
Item 25 is secured by: Staple 5/16" (Qty. 23) (631-5000-00)				32	Plastic Shield (Display Front Cover)	1	545-5884-00
26*	Zip Cable Tie (Screw Down Style)	4	040-5005-00	Item 33 is secured to inside item 31 by: #6 X 3/8" SHWH AB (Zinc) (Qty. 8) (234-5000-00)			
Item 26 is secured inside bot. by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/per) (234-5101-00)				33*	Foam 3/16" Thick X 1/4" Wide X 12"	6	626-5026-00
27	Clamps [Multiple Sizes]	28	040-5000-XX	Above item 33 is self-adhesive. Located between items 32-34. Sold in 12" Lengths only.			
Item 27 secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/per) (234-5101-00) For the following sizes, replace -XX with: 1/4" Double = -23 (Qty. 5); 1/2" Single = -06 (Qty. 3); 3/4" Single = -08 (Qty. 4); 1" Single = -09 (Qty. 1); 1-1/4" Double = -30 (Qty. 1)				128 X 32 Dot Matrix Display PCB	1	520-5052-00	
28	Foam 3/16" Thick X 1/4" Wide X 12"	6	626-5026-00	34	// EURO ONLY RoHS // 128 X 32 DM CES PCB		520-5052-05
Above item 28 is self-adhesive. 17.5" strip on each side. Sold in 12" Lengths only.				// EURO ONLY RoHS // Dot Matrix Bezel			
29L	Pivot Hinge (Left Style)	1	535-7999-00	Item 34 is secured to item 35 by (at corners): 3/16" X 3/8" Spacer Gray (Qty. 4) (254-5000-18) and #8-32 X 1/2" SHWH Swage (Serr) Zinc (Qty. 4) (237-5876-03)			
29R	Pivot Hinge (Right Style)	1	535-7999-01	35	Dot Matrix Display Mounting Bracket	2	535-8368-01
Items 29L-29R are secured to Backbox by: 1/4"-20 X 1-1/4" C.B. Sq. Neck (Qty. 4) (231-5003-00) and 1/4"-20 Flange Nut (Qty. 4) (240-5300-00)				36	Plastic Shield (Display Back Cover)	1	830-6040-00
Items 29L-29R are secured to Cabinet by: Spacer Hex Nut 1/2" O.D. - 1/4-20 X 1/2" TD (Black) (Qty. 1/per) (254-5042-00), Nylon Spacer (Black) (Qty. 1/per) (242-5084-00), 1/4-20 X 1/2" Carriage Bolt Square Neck (Black) (Qty. 1/per) (231-5072-00) and Washer 1" O.D. X 1/2" I.D. X 1/16" (Black) (Qty. 1/per side, only if required) (242-5087-00)				Item 36 is secured to item 34 by: 1/2" X 1/4" Hex Spacer #8-32 Tap (Qty. 4) (254-5008-03), 3/4" X 1/4" Hex Spacer #8-32 Tap (Qty. 2) (254-5008-04), #8-32 X 1/4" PPH MS (Same) Zinc (Qty. 2) (232-5200-00) and #8-32 X 3/8" PPH (Qty. 6) (232-5201-00)			
30*	Memory Stick USB 1.1+ (Generic) 64MB	970-0064-00		37	Ribbon Cable, 14-Pin (33")	1	036-5260-33
	Memory Stick USB 1.1+ (Generic) 128MB	970-0128-00		Item 37 (14-Pin) connects the 128 X 32 Dot Matrix Display PCB to the CPU/Sound PCB.			
Item 30 was not included with your game. Read the inside cover or go on-line for more info. To order with the latest game code copied onto it, add -A3 to the Part Nr. (970-0128-00-A3). File(s) can be downloaded from our website if files are 25MB or larger, DSL or Fast Modem recommended. Not all manufacturers of Memory Sticks are compatible with our system. Test it out, if it doesn't work properly, return your purchase and order the memory stick through your local pinball distributor (Stern Pinball Memory Sticks guaranteed compatible).				38	Display Cable (Wiring Harness)	1	036-5454-01
(ASM. REF. 505-6002-A3-A3, items 1-42 Only; [29-30 not included in assembly])				// EURO ONLY RoHS // LED Display Adapter Harness			
				39	Speaker (Shld.) 4" 8Ω #MG ELE 4060SH	2	031-5004-02
				40	Speaker Grill (Chrome w/Artwork)	2	535-8081-04
				Items 38-40 are secured by: #8 X 1/2" SHWH AB (Black) (Qty. 4/per) (234-5101-01)			
				41	Ground Strap (25") (2 per : Items 35 & 39)	4	600-5006-25
				42	Speaker Panel Hook Bracket	2	535-7009-02
				Item 42 is secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 2/per) (234-5101-00)			
				(ASM. REF. 515-6888-05, Items 31-42 Only [includes wiring])			

Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.



Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.


Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.	Nr.	BACKGLASS PARTS	QTY.	SPI PART Nr.
i*	Glass (Tempered) 25.908" X 19.187" X .125"	1	660-5038-02	iv*	Bottom Plastic Lift Channel - 26"	1	545-6313-01
ii*	Tronr™ Film Art (#B1)	1	830-5289-00	v*	Plastic Edging (Left/Right) - 18-1/8"	2	545-5018-14
iii*	Top Plastic Channel - 26"	1	545-5018-15	Items i-v are secured to item 1 by: 3M Tape (Double-Sided), 12" (Qty. 1) (826-5080-00)			
				Note: Only 6" required, sold in 12" lengths only.			

(ASM. REF. 515-5450-00-A9, Items i-v)

For Backbox Parts see the previous two pages.

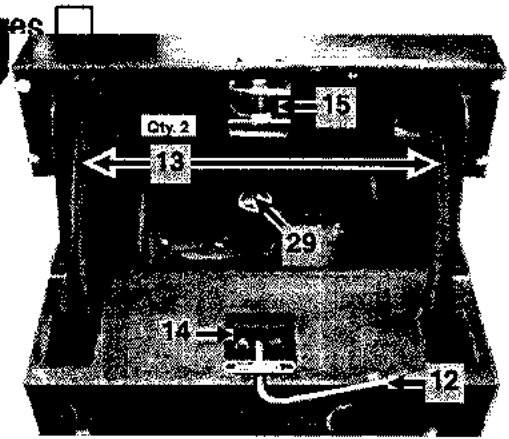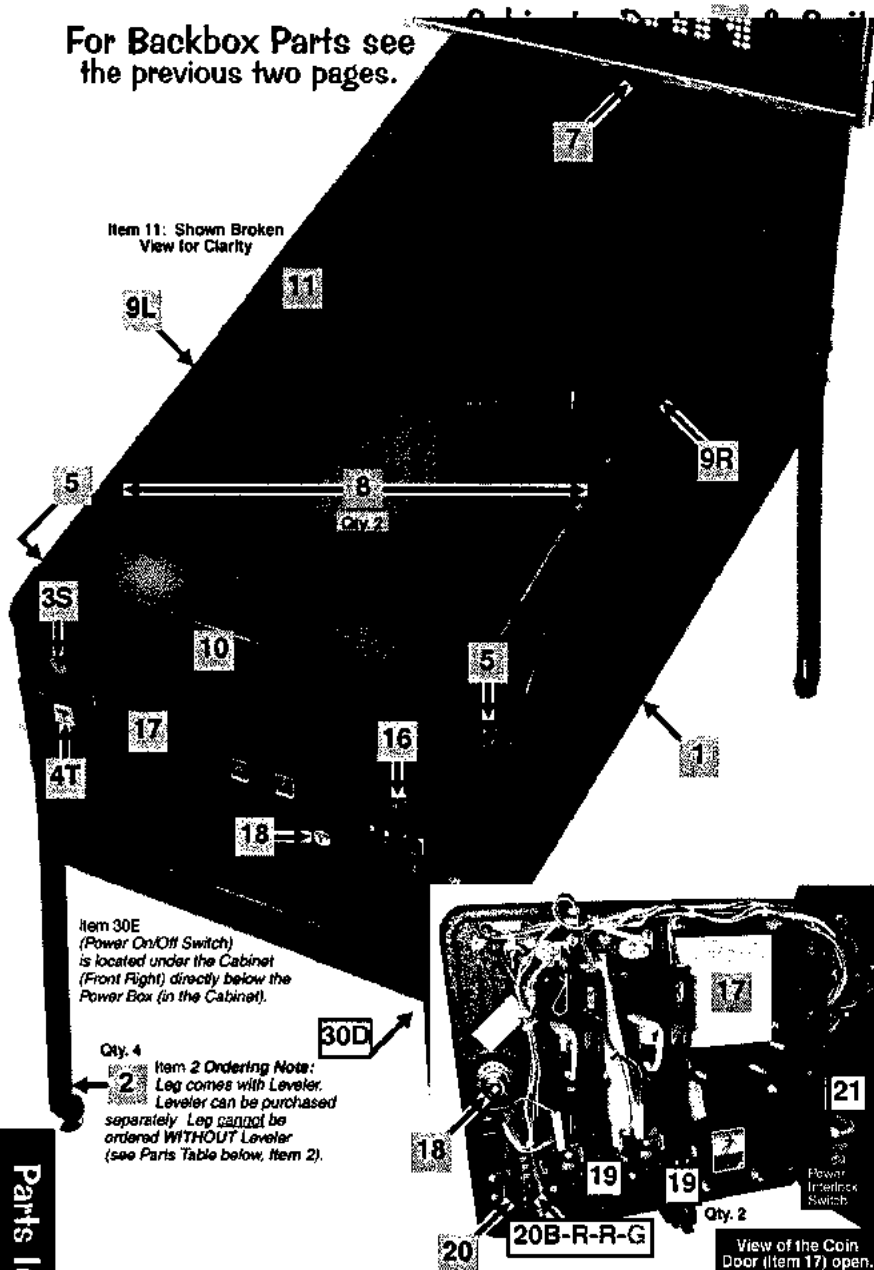

View of the back of the Cabinet with the Backbox in the down position.

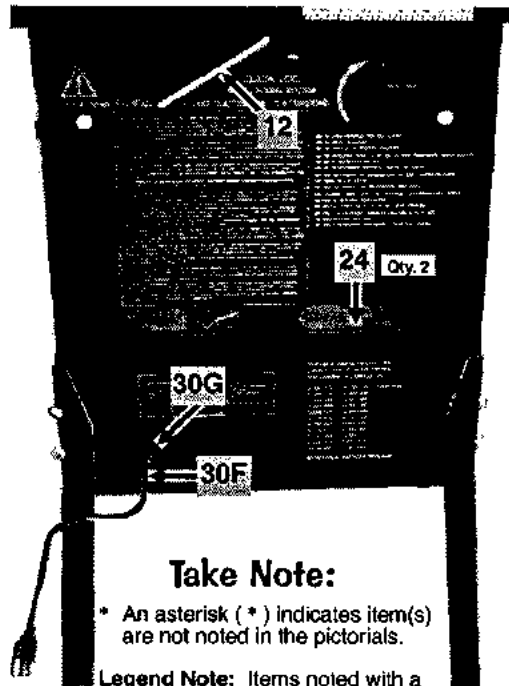

Take Note:

* An asterisk (*) indicates item(s) are not noted in the pictorials.

Legend Note: Items noted with a cyan square are Cabinet Parts. Items noted with a white square are Switches.





Parts Identification

Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
1	Screened Cabinet Tron™ (No Parts)		525-5395-15P-B9
2	Black Leg with Leveler Asm.	4	500-5921-50
Item 2 is secured by: Leg Bolt Back Plate (535-7394-00) and Leg Bolt 3/8" X 1 1/2" Hex 5/8" Hd. (2/per) (231-5001-01) Leg Leveler ONLY (3/8" X 3") (500-5017-00).			
3S	Start Button (Green Round) with Sw. + Lamp	1	500-6388-44-TL
4T	Tournament Button (Yel. Sq.), w/Sw. + Lamp		500-6587-06-TL
Item 3S & 4T includes the Switch & Lamp (No Wiring; desolder old wiring where required). Switch or Bulb replacement: U TWIST U LOCK (-TL) >> not snap-in << Assembly Parts Included: Microswitch (180-5174-00); #555 Wedge Base Clear Bulb (165-5002-00); If 4T is not desired, use optional Button Plug Black (500-6566-00). Requires 3-Lug Terminal Strip (055-5204-03) and Diodes, 1N4004 (Qty. 2) (112-5003-00) inside cabinet under button(s) for Lamp Operation (Diode for Switch, located on Switch.)			
5	Flipper Button (Blue) Assembly (No Switch)	2	500-5026-35
Item 5 is secured by: Pal Nut for Flipper Button (Metal) (Qty. 2/per) (240-5003-01) Pal Nut inside cabinet secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/per) (234-5101-00) and Washer (Zinc), .187" ID X .875" OD X .048" Thick (Qty. 1/per) (242-5059-00)			
6S	Flipper Switch Single Assembly	2	500-6889-01
Assembly Parts Included: Flipper Switch Stack Single (Paliney Contact) (180-5160-01) and Capacitor - Ceramic .05 Mfd 25 volt (130-5001-00)			
Item 6S/6D are secured to Cab. by: #6 X 1-1/4 SHWH AB (Zinc) (Qty. 2/per) (237-5959-00)			
6D	Flipper Switch Double Assembly	0	500-6890-01
Assembly Parts Included: Flipper Switch Stack Double (Paliney Contact) (180-5164-01) and Capacitor - Ceramic .05 Mfd 25 volt (130-5001-00)			
Item 6S/6D are secured to Cab. by: #6 X 1-1/4 SHWH AB (Zinc) (Qty. 2/per) (237-5959-00)			


Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
7	Rear Glass Channel 20-3/8" Length	1	545-5038-00
8	Plastic Channel 42-5/8" Lg. (Left/Rt.)	2	545-5017-00
9L	Side Armor (Left) W/O Button Guard	1	535-7297-02
9R	Side Armor (Right) W/O Button Guard	1	535-7297-02
Items 9L & 9R are secured @ front & side by: Perm Stud 1/4 X 1" Flange Head Black (Qty. 1/per) (237-6116-01); 1/4-20 Flange Nut (Qty. 1/per) (240-5300-00) and #8 X 1/2" 120 Temp Proof Black (Qty. 5/per) (237-8173-06); @ rear (backbox) by: #10-24 X 1" Sq. Neck Camp. Bolt Black (Qty. 1/per) (231-5001-00) and #10-24 Hex Nut (Qty. 1/per) (240-5202-00)			
10	Front Molding (Black) < NO BUTTON HOLE >	1	515-7729-00
Item 10 includes: Self-Adhesive Foam Rubber 3/8" X 3/16" X 20-3/8" (3") (626-5001-00) Items 10 works with Item 22 (next page) ONLY			
11	Playfield Glass (Tempered) 21" X 43" X 3/16"	1	660-5001-00
12	Hex Key Allen Wrench 5/16"	1	777-0001-00
13	Corrugated Tubing Black 1" X 2 1/2" Lg.	1	605-5008-03
Above Item 13 covers the Cable Wiring Harnesses going into the Backbox from the Cabinet			
14	Roto Lock Male (R2-0055-02)	1	355-5006-01
Item 14 is secured by: #10-24 X 1-3/4" Carriage Bolt Square Neck (Qty. 2) (231-5022-00), #10-24 Nylon Stop Nut (Qty. 2) (240-5206-00) and #10 Washer, 7/32" ID X 1/2" OD X 1/16" Thick (Qty. 2) (242-5003-00)			
15	Roto Lock Female (on Backbox)	1	355-5006-02
16	Ball Shooter (Plunger) Assembly	1	500-6146-00-04

PARTS TABLE & VIEWS CONTINUED ON THE NEXT PAGE. ►

Cabinet - Parts & Switches Continued

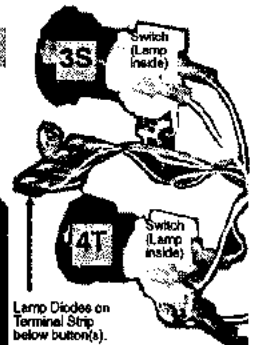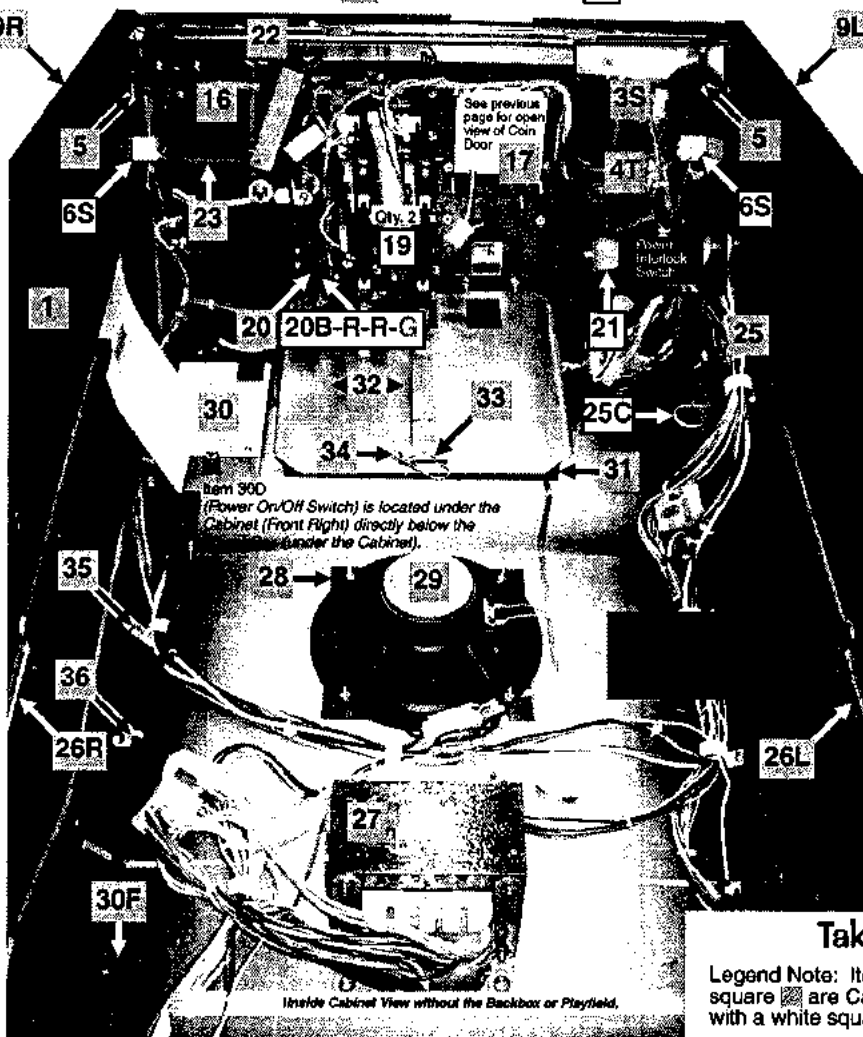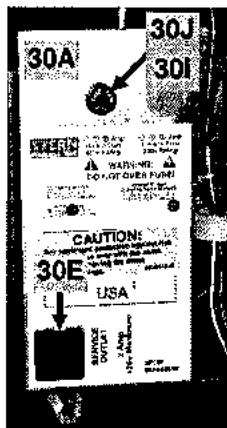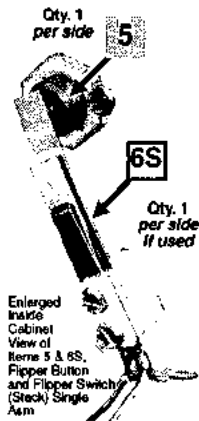

Enlarged Inside Cabinet View of Items 3S, 4T and 25 (25B, 25C, 25H & 25W), Plumb Bob Tilt Switch.

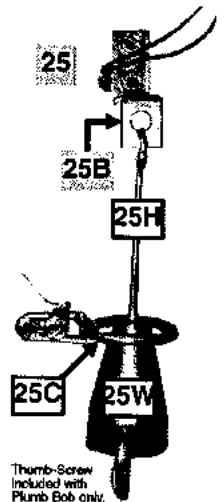



Take Note:

Legend Note: Items noted with a cyan square are Cabinet Parts. Items noted with a white square are Switches.

Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
17	Coin Door 2-Cht. \$V Up-Sk. 4-Button Bracket	1	501-5018-172
Item 17 is secured by: 1/4"-20 X 1-1/4" Carriage Bolt Square Neck (Qty. 4) (231-5009-00) 1/4"-20 Flange Nut (Qty. 4) (240-5300-00) and Fend Washer 1/4" I.D. X 1" O.D. (Qty. 3) (242-5009-00). Note: For Coin Door other than USA call Technical Support for SPI Part Nr.			
18	Lock 5/8" Barrel, 3/4, Flt. Cam	1	355-5055-00
19	Coin Door Switch (USA) (Happ)	2	180-5024-01
ALT. SW.: 19C: Coin Door Switch (USA) (Coin Control) (180-8024-00) ALT. SW.: 19J: Coin Door Switch (Japan) (180-5091-00)			
20	4-Button Bracket (for Service Menu Buttons)	1	535-6860-04
SWITCH: 20B: Push-Button Service Switch (Black) (180-5192-00) SWITCH: 20R: Push-Button Service Switch (Red) (Qty. 2) (180-5192-02) SWITCH: 20G: Push-Button Service Switch (Green) (180-5192-04)			
Ordering Note: Securing hardware for switches included. Decal in kit sold separately.			
21	Power Interlock-Memory Protect Switch Asm.	1	500-5808-05
Assembly Parts Included: Mounting Bracket (535-8794-00); Power Interlock (Playfield) Switch (180-5136-00) and secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 2) (234-5101-00)			
22	Front Molding Lockdown Asm. Premium Game	1	500-6881-00
22A	Cabinet Brkt. PF Supt. Pro Games	1	535-0399-00
Item 22 is secured by: #10-24 X 1-1/4" Carr. Bolt (Qty. 2) (231-5012-00) and #10-24 Keps Nut (Qty. 2) (240-5207-00)			
23	Lockdown Spring Premium Games (connected to handle)	1	265-5008-00
Item 23 is secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1) (234-5101-00) and #10 Washer, 7/32" ID X 1/2" OD X 1/16" Thick (Qty. 1) (242-5003-00)			
24	Grills 2-172" X 18" (on Back & Bottom)	3	545-5072-02
Plumb Bob Tilt Switch Individual Parts Only Ind. Parts Only			
25	SWITCH: 25B: Bracket for Hanger Wire (535-5221-00) 25C: Contact Wire Form (535-7563-01) 25H: Hanger Wire (535-5319-02) 25W: Plumb Bob Weight (535-5029-00) (includes Thumb-Screw)		
Item 25B is secured to Cabinet by: #6 X 5/8" SHWH AB (Zinc) (Qty. 4) (234-5002-00)			
26L	Slide & Pivot Support Bracket (Left)	1	535-5989-00
26R	Slide & Pivot Support Bracket (Right)	1	535-5990-00

Nr.	CAB. PARTS & SWITCHES	QTY.	SPI PART Nr.
27	Transformer 5.7VAC (with Ballast Winding)	1	010-5012-01
Item 27 is secured by: 1/4"-20 X 5/8" PPH MS (Zinc) (Qty. 4) (237-5854-00) and 1/4" Split Lock Washer (Qty. 4) (244-5000-00)			
28	Woofer (Speaker) Grill 7" X 7"	1	545-5072-03
29	Woofer 8" Round 8010 4Q	1	031-5007-01
Items 28 & 29 are secured by: #6-32 X 1-1/4" Fin Shank Screw (Qty. 4) (237-5863-00) and #6-32 Keps Nut (Qty. 4) (240-5008-00)			
30	Power Input Box Asm. + Univ. Cable	1	515-5360-08
30A: Power Box (No Parts) Mounting Frame (535-5832-00) 30B*: Line Filter (150-5000-00) 30C*: Varistor* TNR159211KM (Domestic) (150-5001-00) or Varistor TRM15G431KM (Euro) (150-5002-00) SWITCH: 30D: On/Off Rocker Switch + Bracket Assembly (515-7095-00) 30D incl.: Switch, APEM R2101C5N6B (180-5001-03) + Bracket (535-8318-00) 30E: Service Outlet (3-Prong / US) (180-5008-01) / International N/A 30F: Line Cord 10' ROJ 3" + Ring Terminal Asm. (515-6566-00) 30G: Recessed (Black) Cup (rear of Cabinet) (545-5122-00) 30H*: Snap Bushing 9/16" (White) (280-5001-01) 30I: Fuse 8 Amp 250V Slo-Blo (Domestic) (200-5000-05) or Fuse 5 Amp 250V Slo-Blo (International) (Qty. 2) (200-5003-00) 30J: Fuse Holder (205-5001-00)			
Universal Cable & Jumper Caps (all voltage variations). See the Yellow Pages, Page y 10.			
31	Cash Box Plastic Bottom	1	545-5090-00
32	Cash Box Cover (Validator)	1	535-5013-03
33	Cash Box Lock Bracket (U-Wire)	1	535-7562-00
Item 33 is secured by: #8 X 5/8" SHWH AB (Green) (Qty. 2) (234-5102-04)			
34	Large Hair-Pin Clip	1	535-7772-00
35	Clamps (Multiple Sizes)	28	040-5000-XX
Item 35 is secured to Item 1 by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/par) (234-5101-00) For following sizes, replace XX with: 3/4" Single = 08 (Qty. 9); 1-1/2" Single = 10 (Qty. 3)			
36	Zip Cable Tie (Screw Down Style)	4	040-5005-00
Item 36 is secured by: #8 X 1/2" SHWH AB (Zinc) (Qty. 1/par) (234-5101-00)			
37	Meter +12VDC with Bracket Optional	opt.	G-0053-013-102

Playfield - Metal Posts & Fin Shank Screws (Actual Size) †

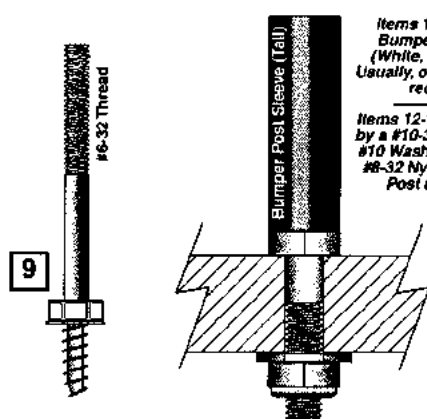
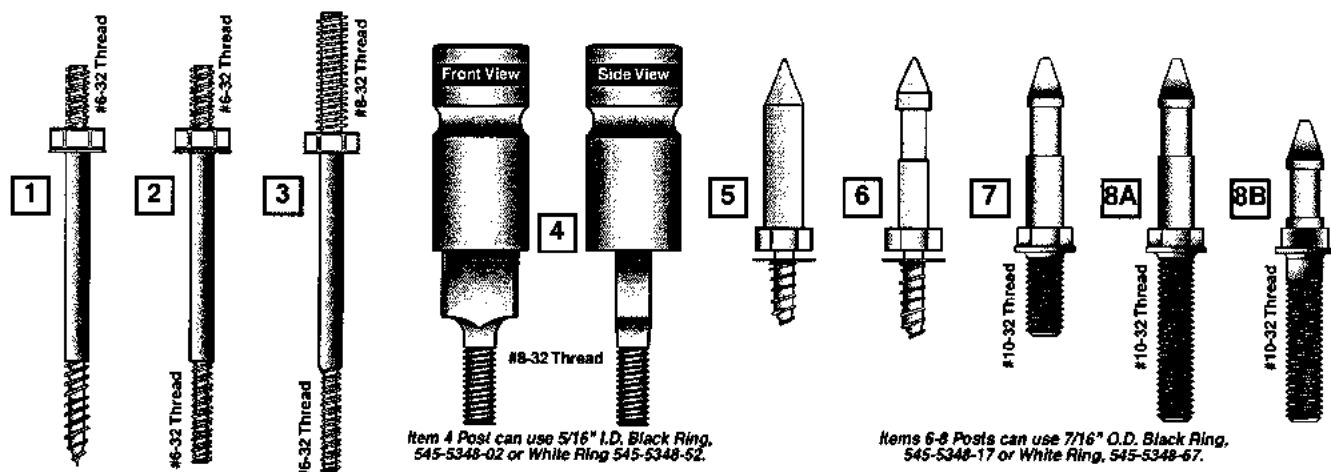


Items 11-16 & 18 Posts can use a Black Bumper Post Sleeve (Tail), 545-5308-00 (White, 545-5308-08 or Red, 545-5308-22). Usually, only Posts which are in the ball path require a Bumper Post Sleeve.

Items 12-15 & 18 Posts are typically secured by a #10-32 Nylon Stop Nut, 240-5203-00 and #10 Washer, 242-5010-00 (Item 11 Post use a #8-32 Nylon Stop Nut, 240-5102-00; Item 16 Post use a #8-32 T-Nut, 240-5101-00).

A & B Items A & B Note: Typically used to secure Hex Spacers onto the Playfield Wood or Back Panel.
C Item C Note: Quantity 4 on bottom Cabinet Speaker Grill (Qty. 4) (also requires #6-32 Nylon Stop Nut, 240-5005-00).
D Item D Note: Quantity 3 per on the Coil Bracket Welded Assembly (515-5839-00) in the Bumper Bottom Assembly (515-6459-04).

A - D Items A-D Note: The "Fins" keep the screw from turning inside the wood hole.

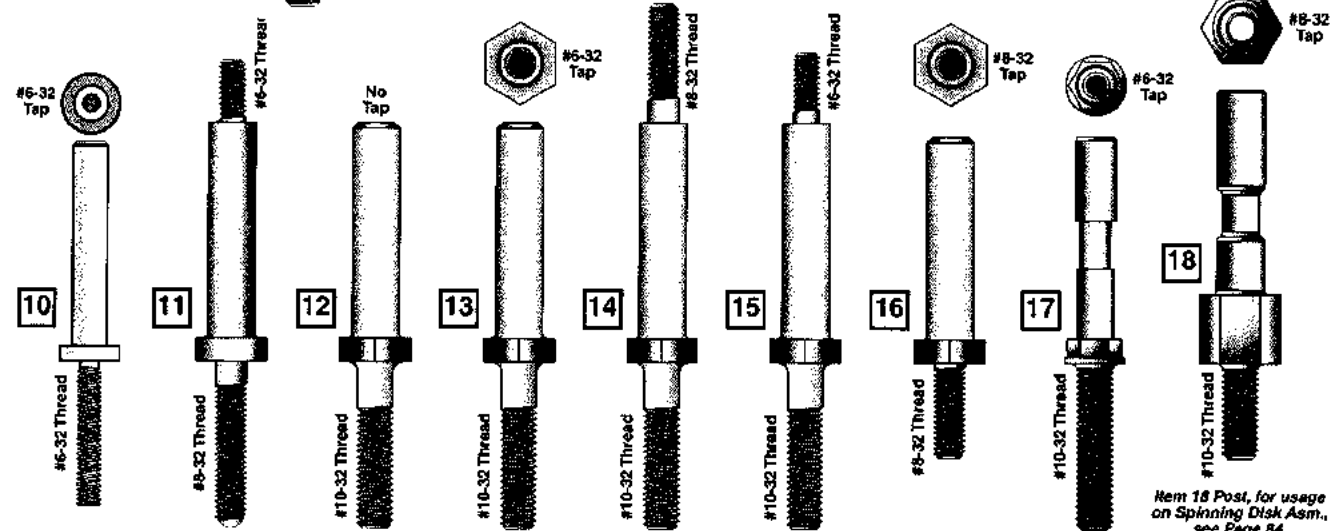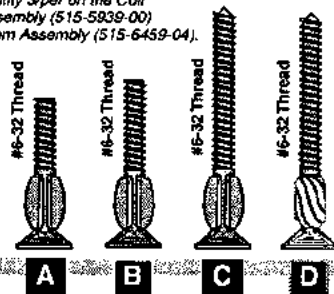

Nr.	METAL POSTS	SPI PART Nr.	Nr.	METAL POSTS	SPI PART Nr.
1	Post [Fasten] #6-32 Thread // Wood Screw	530-5010-02	12	Post [Hex Base] NO TAP // 10-32 Thread	530-5332-00
2	Post [Fasten] #6-32 Thread // #6-32 Thread	530-5012-02	13	Post [Hex Bs.] #6-32 TAP // #10-32 Thread	530-5332-01
3	Post [Fasten] #8-32 Thread // #6-32 Thread	530-5008-00	14	Post [Hex Bs.] #8-32 Thread // #10-32 Thr.	530-5332-02
4	Post Brass [Adjustable, Sliding] #8-32 Thread	530-5621-00	15	Post [Hex Bs.] #6-32 Thread // #10-32 Thr.	530-5332-03
5	Mini-Post Wood Screw (no cut-away)	530-5004-01	16	Post [Hex Bs.] #8-32 TAP // #8-32 Thread	530-5332-04
6	Mini-Post Wood Screw	530-5004-00	17	Post [Hex Bs. + Groove] #6-32 TAP // #10-32 Thr.	530-5679-00
7	Mini-Post Machine Scr. // #10-32 .4" Thread	530-5005-01	18	Post [Hex Bs. + Groove] #8-32 TAP // #10-32 Thr.	530-5753-00
8A	Mini-Post MS // #10-32 .875" Thread	530-5005-00			
8B	Mini-Post Short MS // #10-32 .875" Thread	530-5749-00			
9	Post [Fasten] #6-32 Thread // Wood Screw	530-5263-01			
10	Post #6-32 Tap // #6-32 Thread	530-5127-00			
11	Post [Fasten] #6-32 Thread // #8-32 Thread	530-5007-00			
			Nr.	FIN SHANK SCREWS	SPI PART Nr.
			A	#6-32 X 3/4" Fin Shank Screw	237-5921-02
			B	#6-32 X 7/8" Fin Shank Screw	237-5921-04
			C	#6-32 X 1 1/4" Fin Shank Screw	237-5883-00
			D	#6-32 X 1 3/16" Spiral Fin Shank Screw	237-5957-00

Playfield - Nylon Stop, KEPS, Hex, T-, Flange, Pal* & Wing Nuts* (Actual Size) †

Nr.	NYLON STOP NUTS*	SPI PART Nr.
N1	#6-32 Nylon Stop Nut	240-5005-00
N2	#6-32 N.S. Nut (with 1/4" Hex Body)	240-5010-00
N3	#8-32 Nylon Stop Nut	240-5102-00
N4	#10-32 Nylon Stop Nut	240-5203-00
N5	#10-24 Nylon Stop Nut	240-5206-00
<i>Item N5 used with #10-24 X 1-3/4" Carriage Bolt Square Neck Black (231-5022-00) located in the Cabinet for the Roto Lock (Male) (355-5006-01).</i>		
N6	#4-40 Nylon Stop Nut	240-5303-00
N7	#4-40 (18/8 Stainless) Nylon Stop Nut	240-5303-01
N8	5/16"-18 Nylon Stop Nut	240-5316-00



Nr.	KEPS NUTS*	SPI PART Nr.
K1	#6-32 Keps Nut (with Star Washer)	240-5008-00
K2	#6-32 Keps Nut (with 1/4" Hex Body)	240-5011-00
K3	#8-32 Keps Nut	240-5104-00
K4	#10-32 Keps Nut	240-5208-00
K5	#10-24 Keps Nut	240-5207-00
K6	#4-40 Keps Nut	240-5318-00




Nr.	HEX NUTS*	SPI PART Nr.
H1	#6-32 Hex Nut (No Star Washer)	240-5004-00
H2	#8-32 Hex Nut	240-5103-00
H3	#10-32 Hex Nut	240-5201-00
H4	#10-24 Hex Nut	240-5202-00
<i>Item H4 used with #10-24 X 1" Carriage Bolt Square Neck Black (231-5021-00) located in the Cabinet for the Side Armor Rear (towards Backbox).</i>		
H5	#10-32 X 3/8" Hex Nut	240-5209-00
H6	3/4"-16 Hex Nut	240-5315-00
H7	#2-56 Hex Nut	240-5301-00
H8	7/8"-14 Hex Nut	240-5317-00



Nr.	T-NUTS*	SPI PART Nr.
T1	#6-32 T-Nut	240-5002-00
T2	#6-32 T-Nut (with Side Cut Off)	240-5002-01
T3	#8-32 T-Nut	240-5101-00
T4	#10-32 (Black Oxide) T-Nut	240-5007-00
T5	#10-32 T-Nut (with Side Cut Off)	240-5205-00
T6	#10-32 X 5/16" 3-Prong T-Nut	240-5204-00
T7	#10-24 T-Nut	240-5200-00



Nr.	FLANGE NUT*	SPI PART Nr.
F1	1/4" X 20 Flange Nut	240-5300-00
<i>Item F1 used with 1/4-20 X 1-1/4 Sq. Neck Carriage Bolt Black (231-5003-00) located in the Cabinet for the Side Armor (Front) and Pivot Hinges.</i>		



Nr.	PAL NUTS*	SPI PART Nr.
P1	Plastic Pal Nut (on Flipper Buttons)	240-5003-00
P2	Metal Pal Nut (on Flipper Buttons)	240-5003-01


* Not Shown

Nr.	WING NUTS*	SPI PART Nr.
W1	#6-32 Wing Nut	240-5001-00
W2	#8-32 Wing Nut	240-5100-00
W3	#10-24 Wing Nut	240-5211-00
W4	1/4"-20 Wing Nut	240-5302-00
W5	1/4"-20 Toggle Wing	240-5324-00

* Not Shown

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.


Playfield Top - Hex Spacers (Actual Size) †

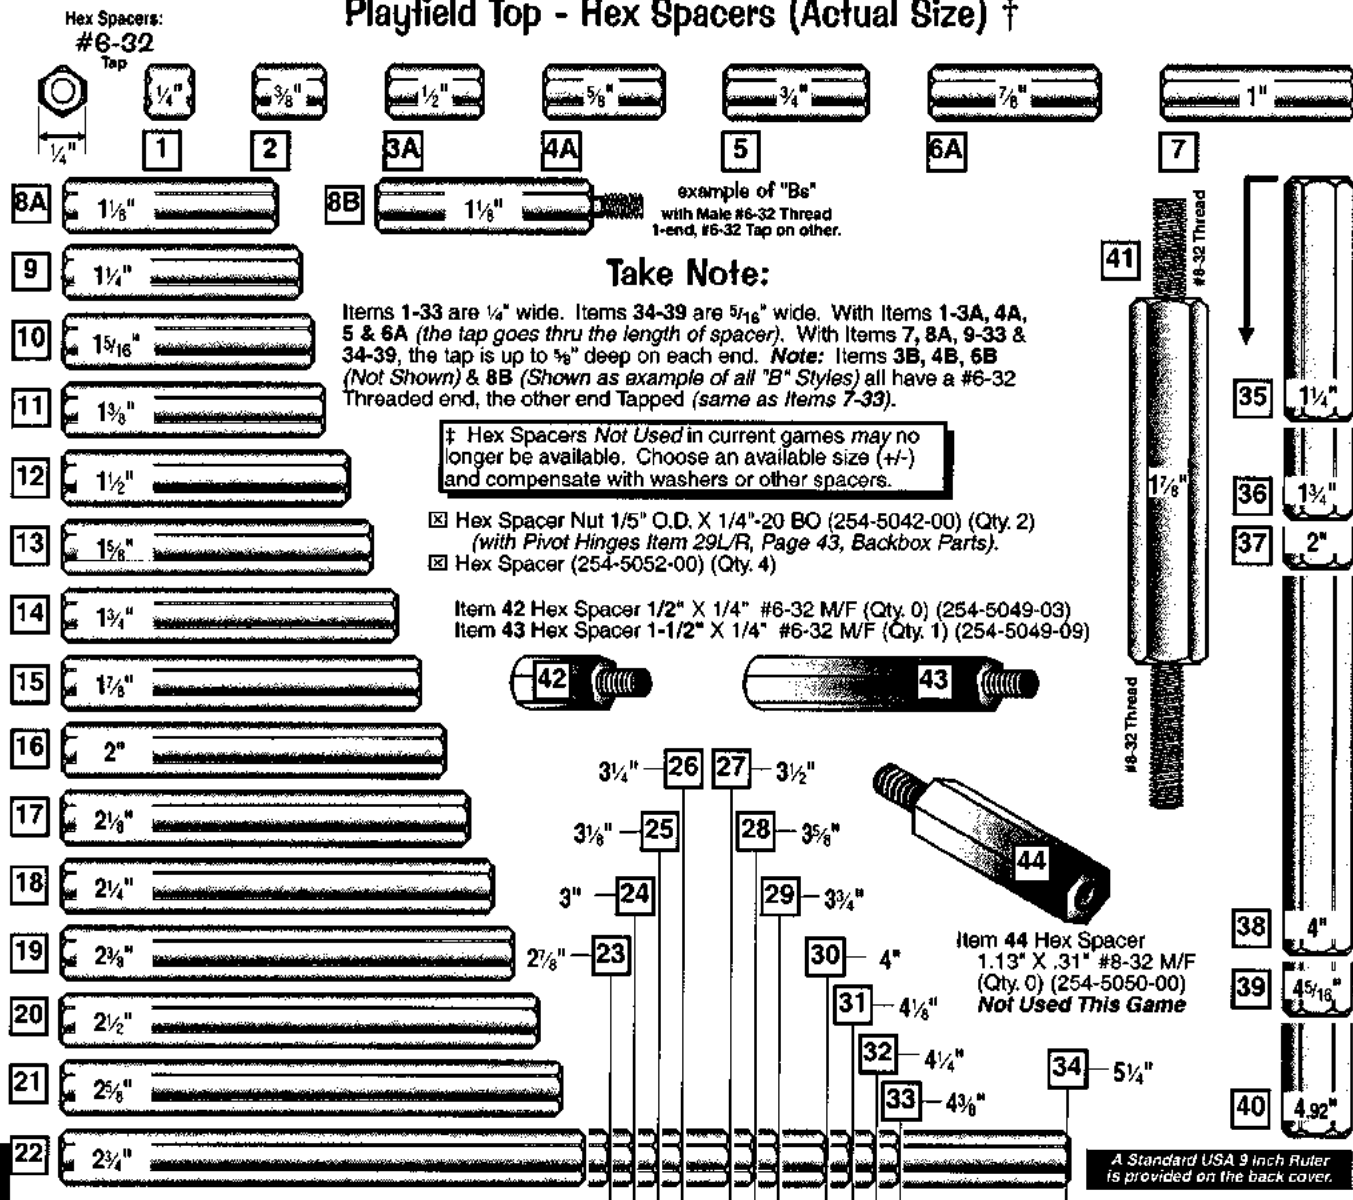

Nr.	HEX SPACERS	SPI PART Nr.	Nr.	HEX SPACERS	SPI PART Nr.
1	1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-00	19	2 3/8" X 1/4" : #6-32 Tap (both ends)	254-5008-28
2	3/8" X 1/4" : #6-32 Tap (both ends)	254-5008-12	20	2 1/2" X 1/4" : #6-32 Tap (both ends)	254-5008-16
3A	1/2" X 1/4" : #6-32 Tap (both ends)	254-5008-03	21	2 5/8" X 1/4" : #6-32 Tap (both ends)	254-5008-08
3B*	Identical to 3A with #6-32 Thread end	254-5024-03	22	2 3/4" X 1/4" : #6-32 Tap (both ends)	254-5008-15
4A	5/8" X 1/4" : #6-32 Tap (both ends)	254-5008-02	23	2 7/8" X 1/4" : #6-32 Tap (both ends)	254-5008-31
4B*	Identical to 4A with #6-32 Thread end	254-5024-02	24	3" X 1/4" : #6-32 Tap (both ends)	254-5008-14
5	3/4" X 1/4" : #6-32 Tap (both ends)	254-5008-04	25	3 1/8" X 1/4" : #6-32 Tap (both ends)	254-5008-19
6A	7/8" X 1/4" : #6-32 Tap (both ends)	254-5008-05	26	3 1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-26
6B*	Identical to 6A with #6-32 Thread end	254-5024-05	27	3 1/2" X 1/4" : #6-32 Tap (both ends)	254-5008-27
7	1" X 1/4" : #6-32 Tap (both ends)	254-5008-06	28	3 5/8" X 1/4" : #6-32 Tap (both ends)	254-5008-25
8A	1 1/8" X 1/4" : #6-32 Tap (both ends)	254-5008-17	29	3 3/4" X 1/4" : #6-32 Tap (both ends)	254-5008-36
8B	Identical to 8A with #6-32 Thread end	254-5024-17	30	4" X 1/4" : #6-32 Tap (both ends)	254-5008-21
9	1 1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-11	31	4 1/8" X 1/4" : #6-32 Tap (both ends)	254-5008-23
10	1 5/16" X 1/4" : #6-32 Tap (both ends)	254-5008-34	32	4 1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-30
11 ‡	1 3/8" X 1/4" : #6-32 Tap (both ends)	254-5008-33	33	4 3/8" X 1/4" : #6-32 Tap (both ends)	254-5008-29
12	1 1/2" X 1/4" : #6-32 Tap (both ends)	254-5008-09	34	5 1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-35
13 ‡	1 5/8" X 1/4" : #6-32 Tap (both ends)	254-5008-13	35	1 1/4" X 5/16" : #6-32 Tap (both ends)	254-5018-09
14	1 3/4" X 1/4" : #6-32 Tap (both ends)	254-5008-10	36	1 3/4" X 5/16" : #6-32 Tap (both ends)	254-5018-06
15 ‡	1 7/8" X 1/4" : #6-32 Tap (both ends)	254-5008-20	37	2" X 5/16" : #6-32 Tap (both ends)	254-5018-07
16	2" X 1/4" : #6-32 Tap (both ends)	254-5008-07	38	4" X 5/16" : #6-32 Tap (both ends)	254-5018-03
17	2 1/8" X 1/4" : #6-32 Tap (both ends)	254-5008-32	39	4 5/16" X 5/16" : #6-32 Tap (both ends)	254-5018-00
18	2 1/4" X 1/4" : #6-32 Tap (both ends)	254-5008-18	40	4.92" X 5/16" : #6-32 Tap (both ends)	254-5018-04

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

Playfield Top - Plastic Posts & Spacers & Metal Spacers (Actual Size) †

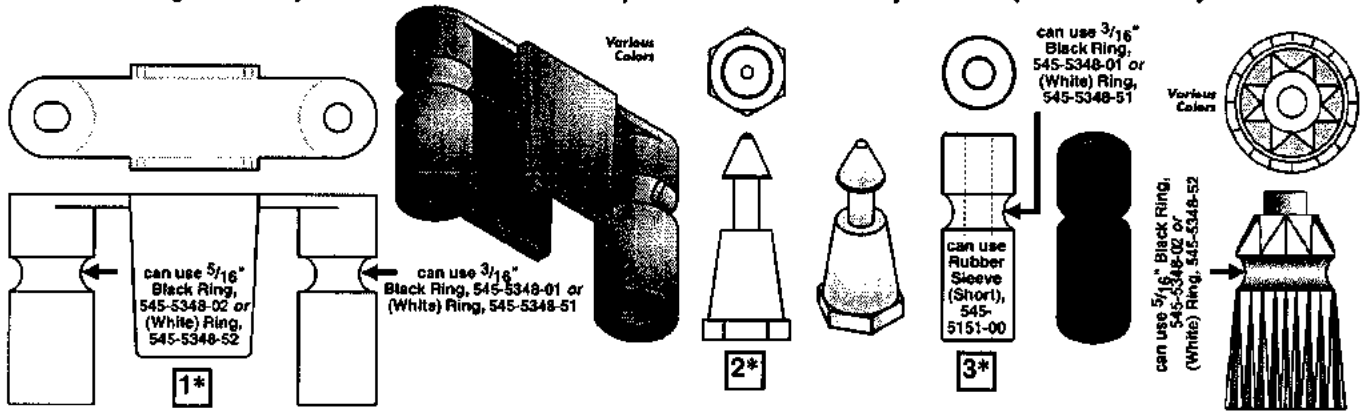


PLASTIC PART COLOR CHART

Nr.	Color	Nr.	Color	Nr.	Color
-00	Black	-06	Yellow	-12	Fluor. Blue
-01	Clear	-07	Orange	-13	Teal Green
-02	Red	-08	(White)	-14	(Gray)
-03	Amber	-09	Purple	-15	Luminescent
-04	Green	-10	Fluor. Org.	-16	Gold
-05	Blue	-11	Fluor. Green		

* Items 1 & 5 come in various colors. The "-XX" (the last 2-Digits in the Part Number), should be replaced with the desired 2-Digit number from the above Color Chart (may not be available in every color; other colors used in prior games may no longer be available.) Call for availability.

O.D. & I.D.



5 - 11:
Height Shown X 9/32" O.D.
X .153" I.D.

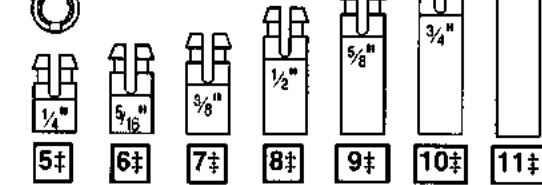

† Items 5 through 11 dimensions are measured from bottom to just under the cut-away. Item 33 dimension is measured from top-to-top of curve. See pictorials with Items 11 & 33.


O.D. & I.D.

12: 1/2" X 1/4" O.D. X .147" I.D.

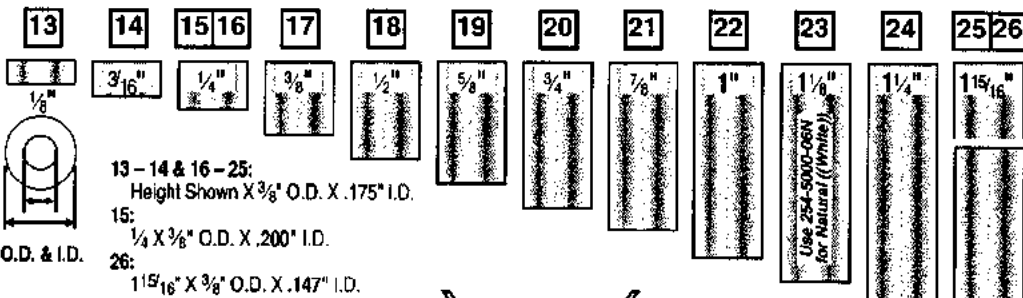


O.D. & I.D.

1" Note the Part Nr. & Material Difference

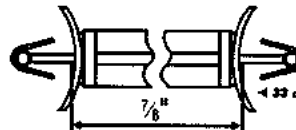


33 dimension is measured from this point.

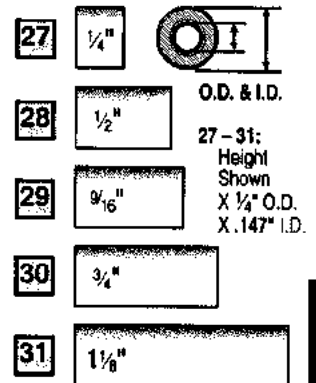



Nr.	PLASTIC POSTS & SPACERS	SPI PART Nr.	Nr.	PLASTIC POSTS & SPACERS	SPI PART Nr.
1**	Top Lane Plastic Mini-Lite Hood (XX-Color)	550-5061-XX	21	7/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-11
2**	Mini-Jewel Plastic Post (XX-Color)	550-5052-XX	22	1" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-04
3**	1 1/16" 1-Groove Plastic Post (XX-Color)	550-5059-XX	23	1 1/8" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-06
Item 3 Only: Use Part Number (550-5059-09) for color Black.			Item 23 Only: Add the letter "N" for color Natural (if available) or "B" for color Black.		
4**	1-Groove Jewel Plastic Post (XX-Color)	550-5034-XX	24	1 1/4" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-05
Items 3 & 4 typically sec'd by: Post Fastening Scr. #6-32 Top / #6-32 Bot. (530-5012-02). Use Color Chart above for last 2-digits. Not all colors are available.			25	1 1/2" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-08
Items 1-4 Note: Use Color Chart above for last 2-digits. Not all colors are available.			26	1 5/16" X 3/8" O.D. X .147" I.D. Plastic Spacer (Gray)	254-5000-15
Items 13-26 Only: Spacers may also be Black in color (random from vendor).			Not Shown and listed for reference only: 254-5000-10: 2 1/2" X 3/8" O.D. X .175" I.D. -13: 5/16" X 1/4" X .147"; -16: 5/16" X 5/16" X .190"; -17: 1 3/4" X 3/8" O.D. X .175" I.D.		
5 ‡	1/4" Self Retain. Plastic Spacer (White)	254-5007-02	27	1/4" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-03
6 ‡	9/16" Self Retain. Plastic Spacer (White)	254-5007-05	28	1/2" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-00
7 ‡	3/8" Self Retain. Plastic Spacer (White)	254-5007-01	29	9/16" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-04
8 ‡	1/2" Self Retain. Plastic Spacer (White)	254-5007-04	30	3/4" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-01
9 ‡	5/8" Self Retain. Plastic Spacer (White)	254-5007-00	31	1 1/8" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5014-02
10 ‡	3/4" Self Retain. Plastic Spacer (White)	254-5007-03	32	1" X 5/16" O.D. X .144" I.D. Metal Spacer	254-5001-00
11 ‡	1" Self Retain. Plastic Spacer (White)	254-5007-06	33 ‡	7/8" Plastic Spacer Support (Dual-Locking)	254-5039-14
12	1/2" X 1/4" O.D. X .147" I.D. Pls. Spacer (White)	254-5000-03	34	Plastic Spacer, .5"	254-5054-00
13	1/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-19	35	Plastic Spacer, 1.13"	254-5054-01
14	3/16" X 3/8" O.D. X .175" I.D. Pls. Spcr. (Gray)	254-5000-18			
15	1/4" X 3/8" O.D. X .200" I.D. Pls. Spcr. (Gray)	254-5000-02			
16	1/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-09			
17	3/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-12			
18	1/2" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-01			
19	5/8" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-14			
20	3/4" X 3/8" O.D. X .175" I.D. Pls. Spacer (Gray)	254-5000-07			

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER). COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE P/N REQUIRED.

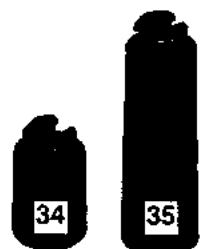

Parts Identification

Playfield - Rubber Parts Black ■, White □ & Blue ■ (Rings Actual Size) †

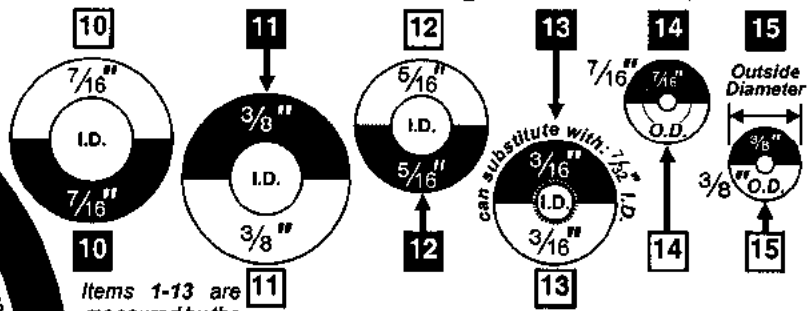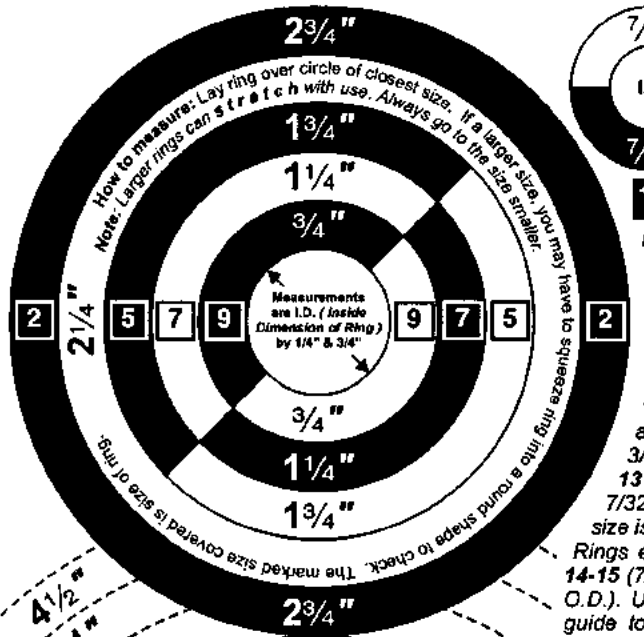

Items 1-13 are measured by the Inside Diameter (I.D.). Items 1-9 and 11 are approximately 1/4" thick. Items 10, 12-15 are approximately 3/16" thick. Item 13 can also be a 7/32" I.D. Ring. The size is imprinted on all Rings except for Items 14-15 (7/16" O.D. & 3/8" O.D.). Use this page as a guide to measure rings where the size imprint or mark does not exist. Size 2 1/4" I.D. (Black or White) was never used. Choose a Ring Size +/- 1/4" I.D. if required.


Nr.	RUBBER RINGS	QTY.	SPI PART Nr.
1	3" I.D. Rubber Ring BLACK	1	545-5348-10
	3" I.D. Rubber Ring WHITE		545-5348-60
2	2 3/4" I.D. Rubber Ring BLK		545-5348-20
		N/U	
3	2 1/2" I.D. Rubber Ring BLK		545-5348-09
	2 1/2" I.D. Rubber Ring WHT		545-5348-59
4	2" I.D. Rubber Ring BLACK	2	545-5348-08
	2" I.D. Rubber Ring WHITE		545-5348-58
5	1 3/4" I.D. Rubber Ring BLK		545-5348-21
	1 3/4" I.D. Rubber Ring WHT	N/U	545-5348-71
6	1 1/2" I.D. Rubber Ring BLK	1	545-5348-07-40
	1 1/2" I.D. Rubber Ring WHT		545-5348-57
7	1 1/4" I.D. Rubber Ring BLK	5	545-5348-06
	1 1/4" I.D. Rubber Ring WHT		545-5348-56
8	1" I.D. Rubber Ring BLACK		545-5348-050
	1" I.D. Rubber Ring WHITE		545-5348-55
9	3/4" I.D. Rubber Ring BLACK		545-5348-04
	3/4" I.D. Rubber Ring WHITE		545-5348-54
10	7/16" I.D. Rubber Ring BLK		545-5348-18
	7/16" I.D. Rubber Ring WHT		545-5348-68
11	3/8" I.D. Rubber Ring BLACK		545-5348-03
	3/8" I.D. Rubber Ring WHITE	N/U	545-5348-53
12	5/16" I.D. Rubber Ring BLK		545-5348-02
	5/16" I.D. Rubber Ring WHT		545-5348-52
13	3/16" I.D. Rubber Ring BLK	14	545-5348-01-40
	3/16" I.D. Rubber Ring WHT		545-5348-51
14	7/16" O.D. Rubber Ring BLK	9	545-5348-17-40
	7/16" O.D. Rubber Ring WHT		545-5348-67
15	3/8" O.D. Rubber Ring BLK		545-5348-19
	3/8" O.D. Rubber Ring WHT		545-5348-69
16	Small Flipper BLACK Ring (Soft Duro)		545-5207-00
	Small Flipper RED Ring (Soft Duro)		545-5207-22
	Large Flipper BLACK Ring (50 Duro)		545-5277-00
	Large Flipper YELLOW Ring (50 Duro) (use -06 40 Duro)		545-5277-04
17	Large Flipper WHITE Ring (50 Duro)		545-5277-08
	Large Flipper RED Ring (Soft Duro)	3	545-5277-22

Take Note:


For Blue Rubber Pads, see the next page and/or the Blue Pages for the assembly the pads are found on for the part number.

Nr.	RUBBER BUMPER PADS	QTY.	SPI PART Nr.
A*	Bumper BLK Pad (Lg. w/ grommet)		545-5428-00
	Item A are located on Flipper Assemblies. See next page for location.		
B*	Bumper BLK Pad (Sm. w/ grommet)	2	545-5105-00
	Item B are located on multiple assemblies. See next page for location.		

Nr.	RBR. BUMPER POST SLVS.	QTY.	SPI PART Nr.
D*	Bumper BLACK Post Sleeve (Tall)	2	545-5308-65
	Item D in RED use 545-5308-22; Item D in WHITE use 545-5308-08.		
E*	Bumper Post Sleeve (Short)		545-5151-00

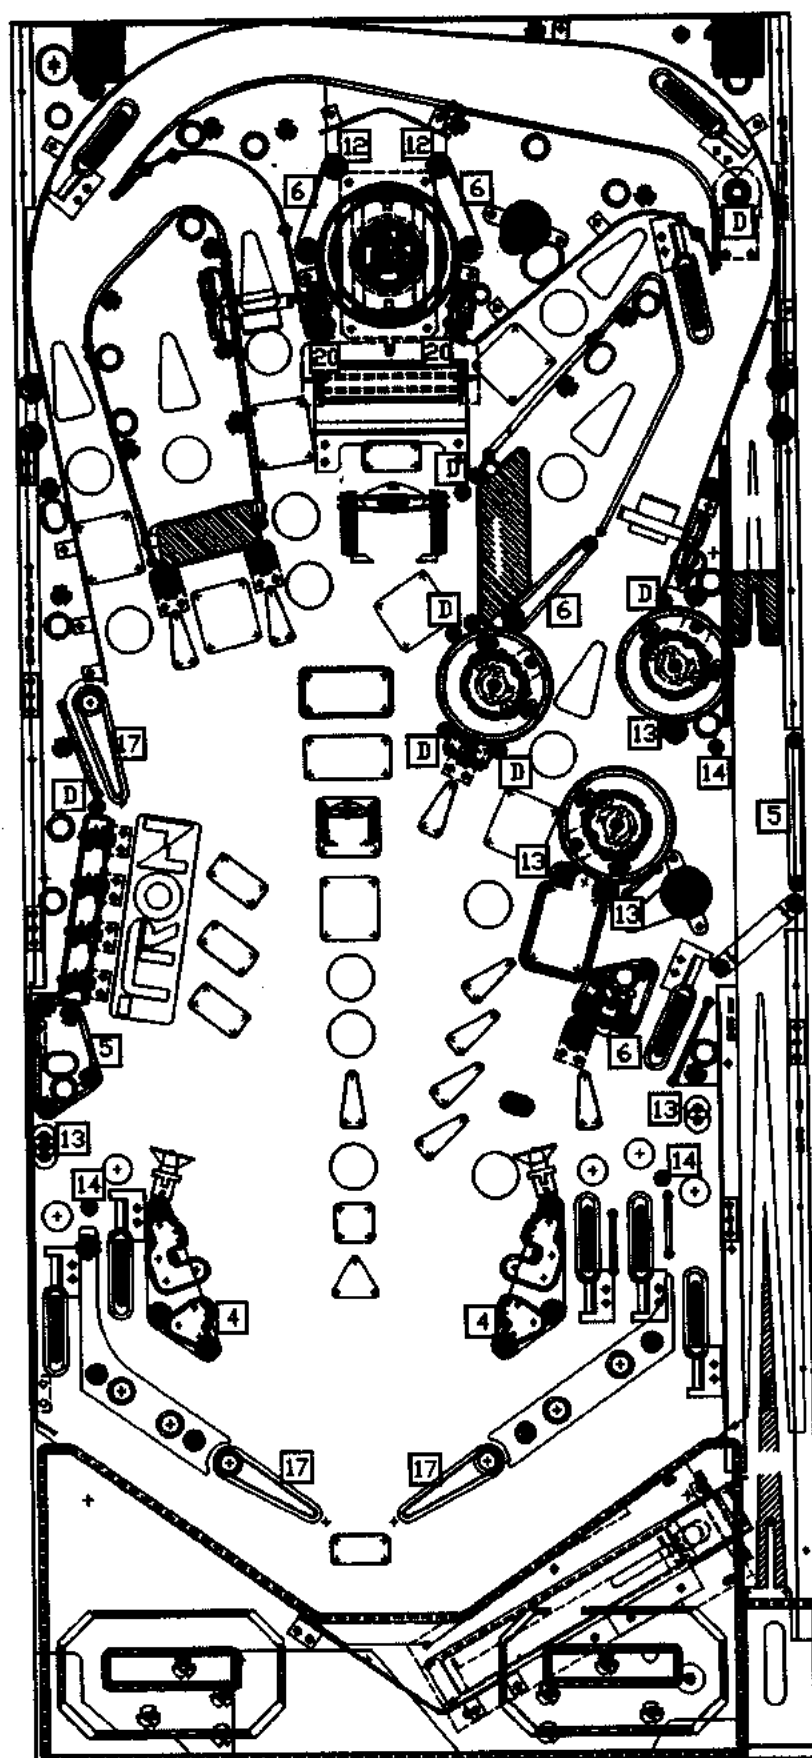

Playfield Top & Bottom - Small Bayonet Sockets & Bulbs ■ (Actual Size) †

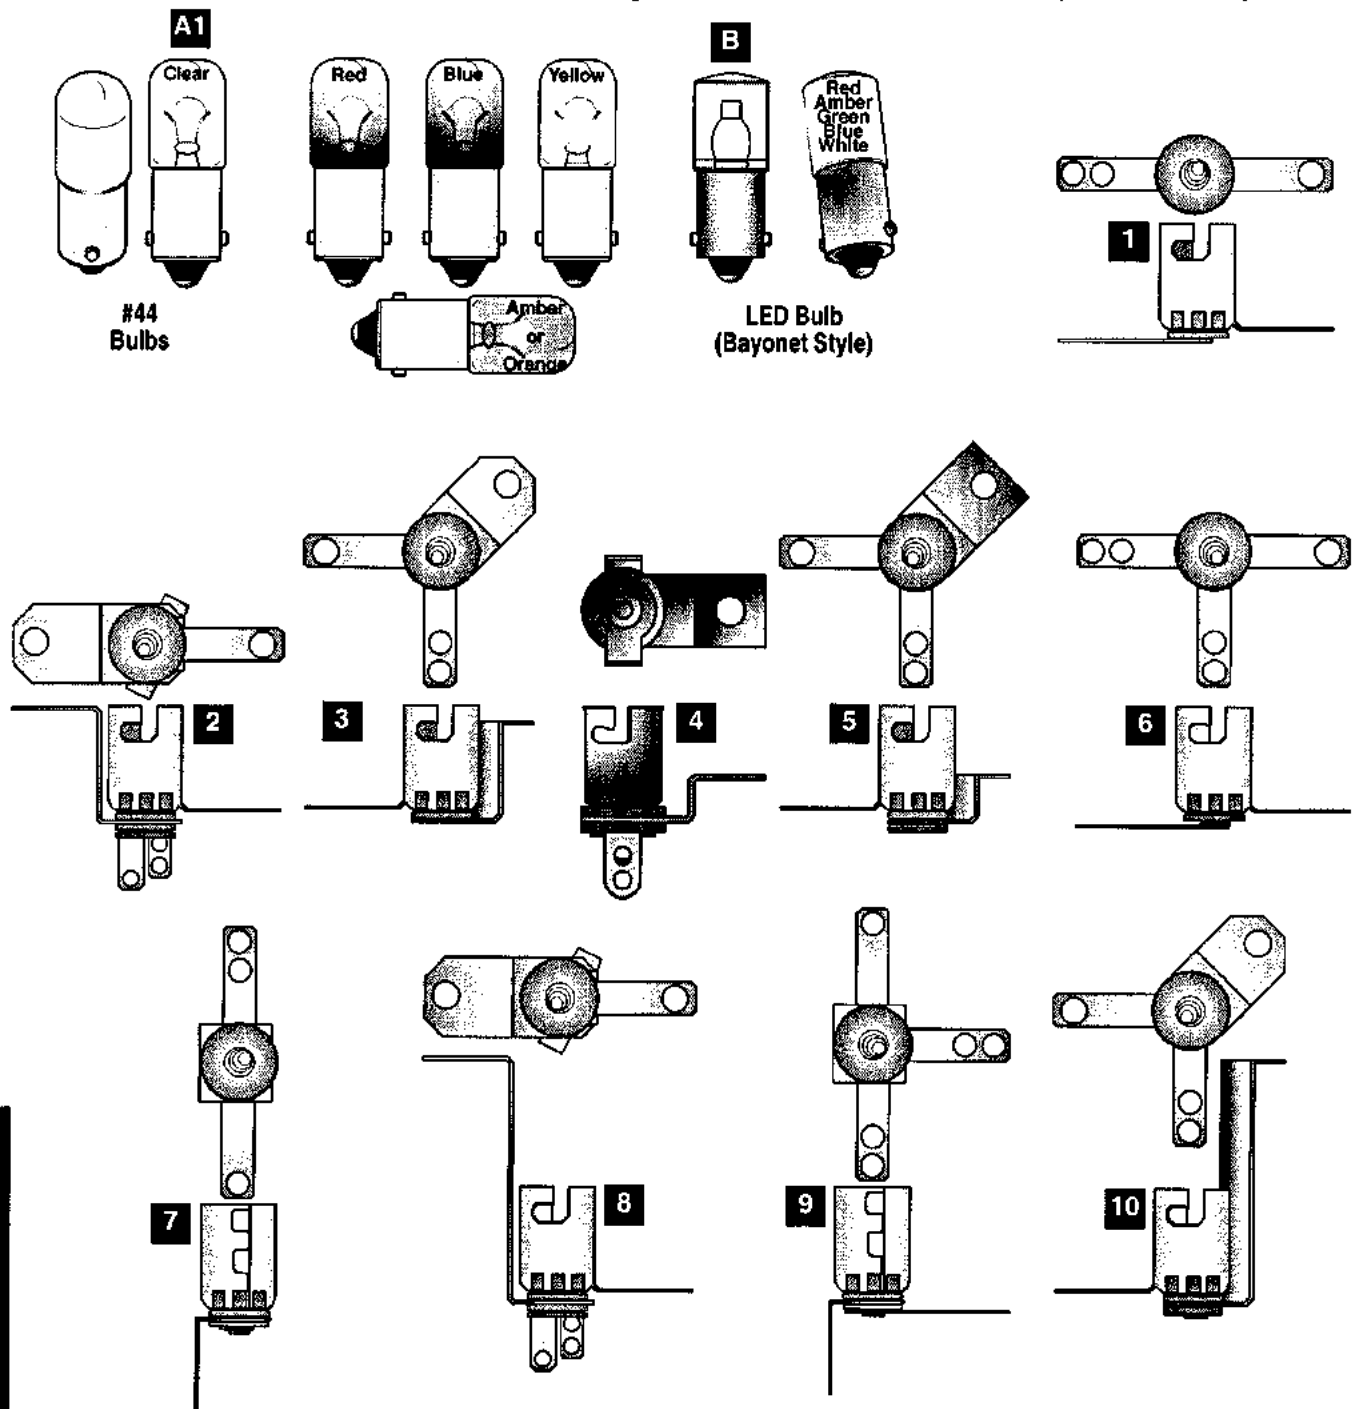


Parts Identification

Nr.	BULBS (#44)	SPI PART Nr.	Nr.	BULBS (LED & #455)	SPI PART Nr.
A	#44 Bulb (Clear) Heavy Filament 36	165-5000-44-HF	B	LED Module (WHT) (12.8v 20-25mA) Bynt.	112-5023-08
	#44 Bulb (replace -XX w/color below)	165-5053-XX-HF		Item B Note: Different Colors may be available -	
	Item A Note: Amber (165-5053-03-HF); Green (165-5053-04-HF); Yellow (165-5053-06-HF); Red (165-5053-02-HF); Blue (165-5053-05-HF); Orange (165-5053-07-HF)			Red (112-5023-02); Amber (112-5023-03); Green (112-5023-04); Blue (112-5023-05);	


Nr.	SMALL BAYONET SOCKETS	SPI PART Nr.	Nr.	SMALL BAYONET SOCKETS	SPI PART Nr.
1	2-Lug Staple Down Socket	077-5000-00	10	2-Lug Stand-Up Socket (Tall Bracket)	077-5005-00
2	3-Lug Stand-Up Socket (Med. Brkt.)	077-5008-00	11	3-Lug Stand-Up Long Shell Socket	077-5013-00
3	2-Lug Stand-Up Socket (Med. Brkt.)	077-5002-00	12	2-Lug Stand-Up Lg. Shell Socket (Gls)	077-5031-00
4	2-Lug Stand-Up Socket (Short Brkt.)	077-5223-00	13	1-Lug S-U Lg. Shell Sckt. (Med. Brkt.)	077-5012-00
5	2-Lug Stand-Up Sckt. (Short Bracket)	077-5002-31	14	3-Lug S-U Lg. Shell Sckt. (45° Brkt.)	077-5035-00
6	3-Lug Staple Down Socket	077-5001-00	15	3-Lug Laydown Socket (2 Lugs Bent)	077-5032-00
7	2-Lug Laydown Socket	077-5003-00			
8	3-Lug Stand-Up Socket (Tall Bracket)	077-5009-00			
Nr.	SMALL BAYONET SOCKETS	SPI PART Nr.			
9	3-Lug Laydown Socket (3 Lugs Flat)	077-5006-00			

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

Playfield Top & Bot. - Small Bayonet Sockets & Bulbs ■ (Actual Size) † Continued

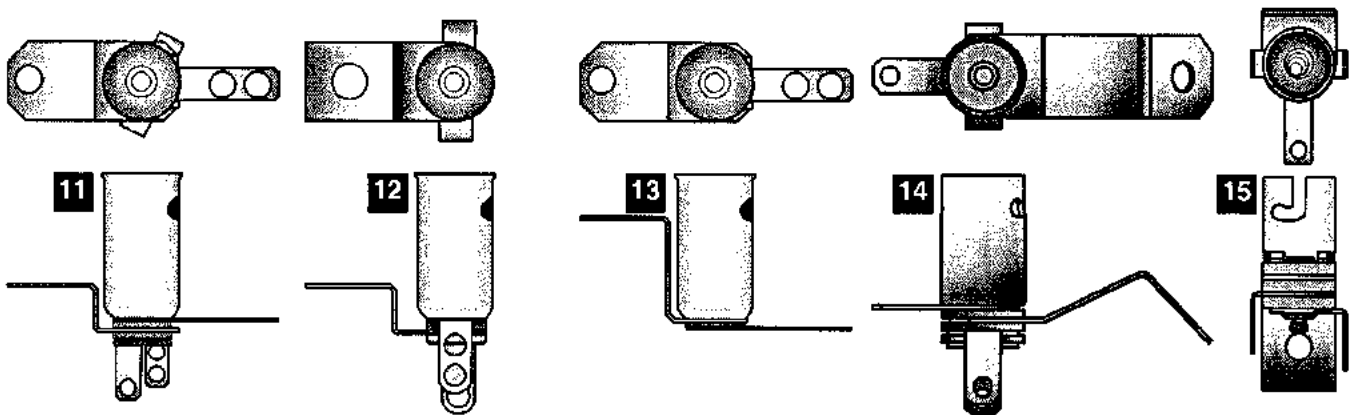

Playfield Bottom - Large Bayonet Sockets & Bulbs ■ (Actual Size) †

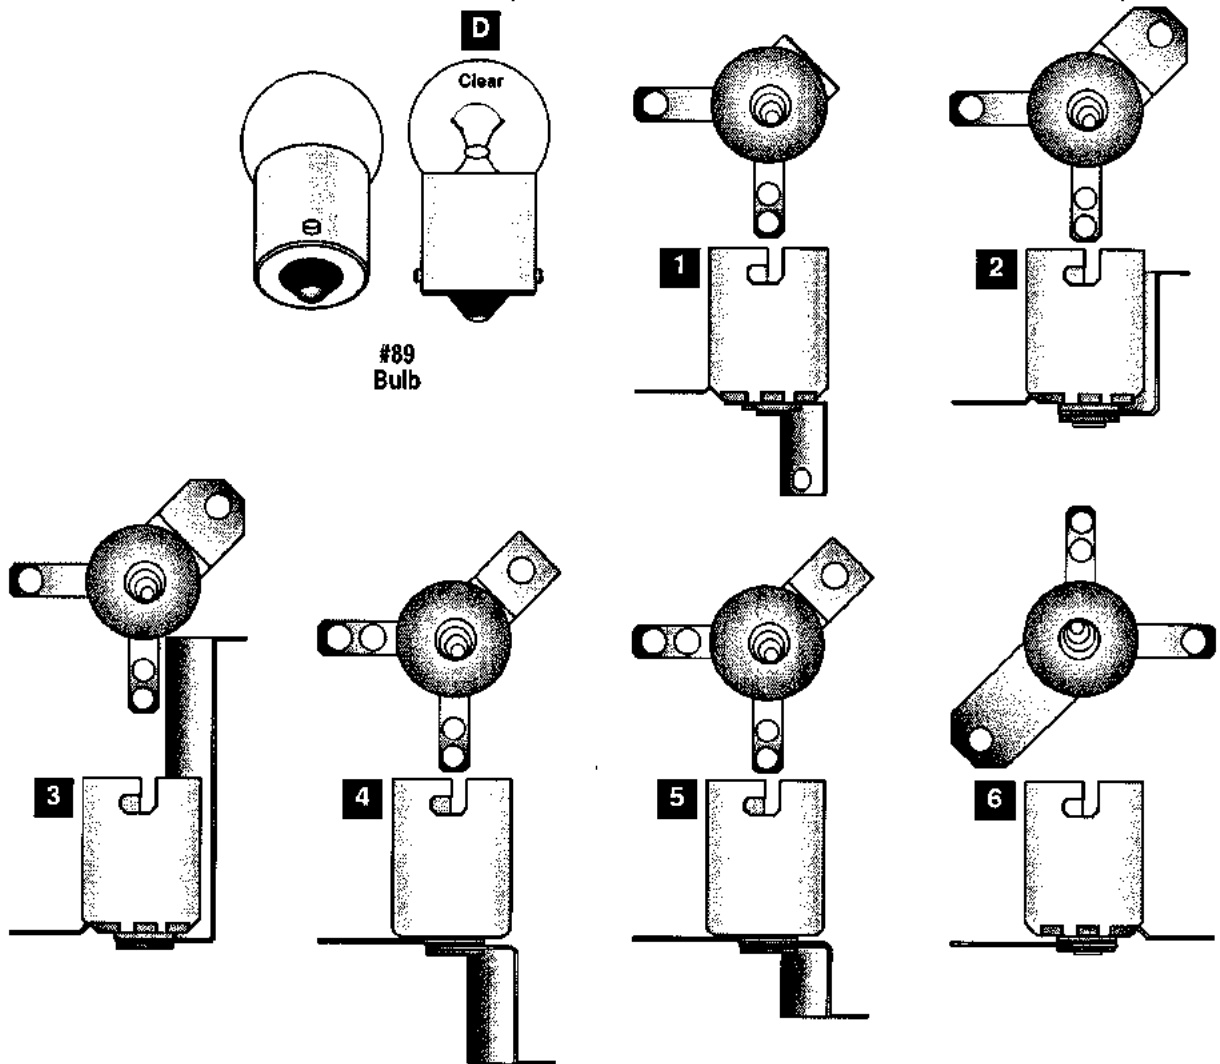

Parts Identification




Nr.	BULBS (#89)	SPI PART Nr.
D	#89 Bulb Heavy Filament 10	165-5000-89-HF

3	2-Lug Stand-Up Long Socket	077-5102-00
4	2-Lug Stand-Up Rev. Mount Socket	077-5103-00
5	2-Lug Stand-Up Rv. Mnt. Short Socket	077-5106-00
6	2-Lug Straight Leg Socket	077-5107-00

Nr.	LARGE BAYONET SOCKETS	SPI PART Nr.
1	2-Lug Laydown Standard Socket	077-5100-00
2	2-Lug Stand-Up Short Socket	077-5101-00


NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

Playfield Top & Bottom - Wedge Base Sockets & Bulbs (Actual Size) †

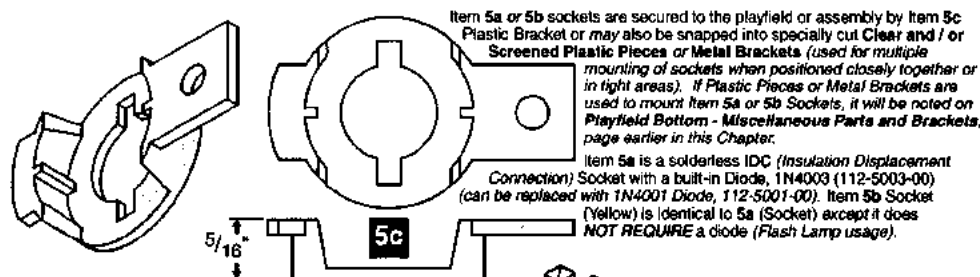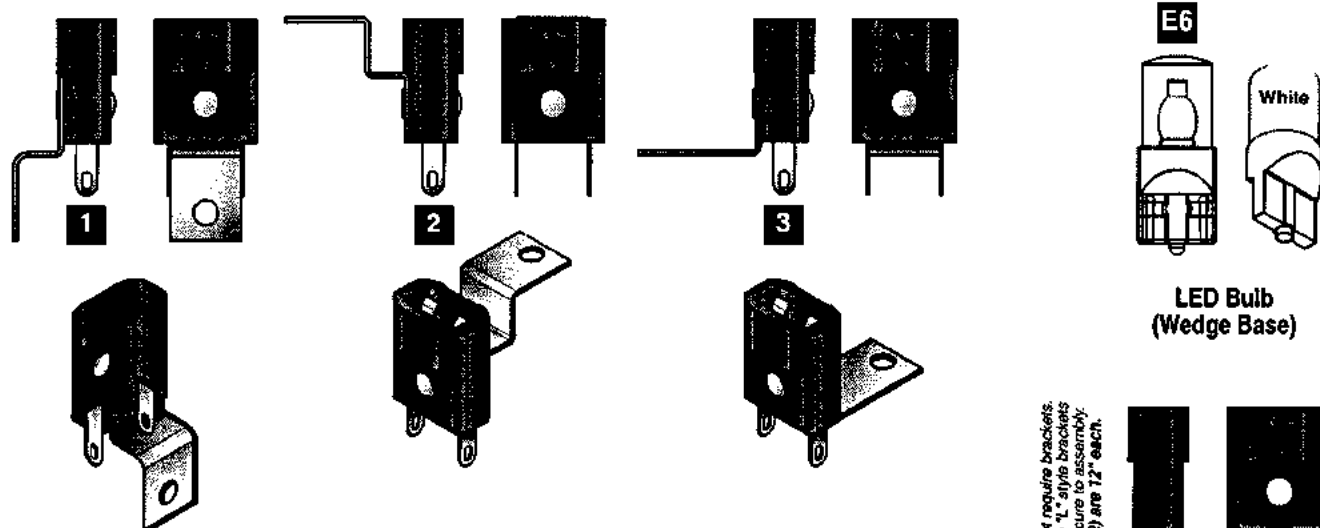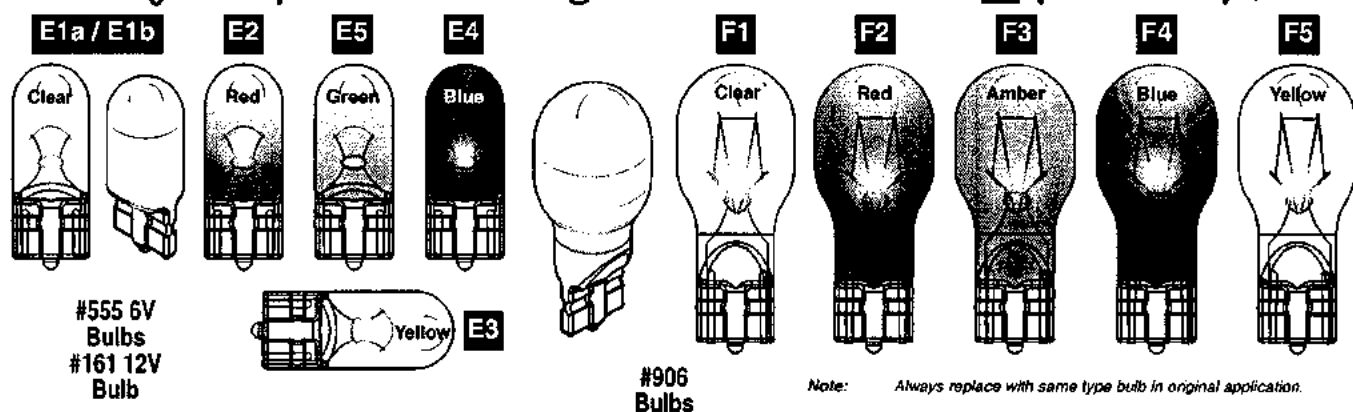

Item 4 Socket does not require brackets. Old stock may include 1/2" style brackets (each side); do not secure to assembly. Black Wires (Qty. 2) are 12" each.

Parts Identification

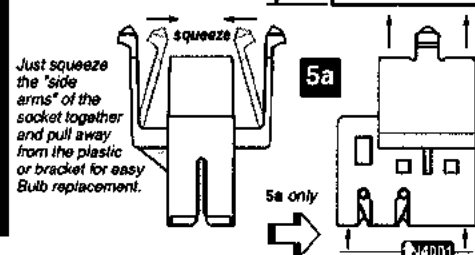

5b is Yellow with No Diode

Nr.	BULBS (#555)	SPI PART Nr.	Nr.	BULBS (LED & #906)	SPI PART Nr.
E1a	#555 Wedge Base Bulb (Clear) 64	165-5002-00	E6	LED Module (WHT) (5v - 6.3v) Wedge Base 3	112-5024-08
E2-E5	#555 Wedge Base Bulb (Multi-Color)	165-5054-XX	Item E6 Bulb Note: Typically used with Item 4 Socket in Pop Bumpers.		
Item E2-E5 Bulb Note: Different Colors available (not used in this game) - Red (165-5054-02); Green (165-5054-04); Blue (165-5054-05); Yellow (165-5054-06);			F	#906 Wedge Base Bulb (Clear)	165-5004-00
E1b	#161 12V Wedge Base Bulb (Clear) 5	165-5032-00	Item F Note: Different Colors available (not used in this game) - Red (165-5004-02); Amber (165-5004-03); Blue (165-5004-05); Yellow (165-5004-06)		

Nr.	WEDGE BASE SOCKETS	SPI PART Nr.	Nr.	WEDGE BASE SOCKETS	SPI PART Nr.
1	Wedge Base Socket (Laydown)	077-5026-01	5a	IDC Snap-On Socket (Blue)	077-5216-00
2	Wedge Base Socket (Offset)	077-5029-00	5b	IDC Snap-On Socket No Diode (Yel.)	077-5216-01
3	Wedge Base Socket (Laydown GI)	077-5030-00	5c	5/16" Ht. Bracket (White)	545-5760-18
4	W.B. Socket (Bumpers/Special App.)	077-5206-00	6	Light Reflector (Silver Plst.) REF540N	545-5409-01
			Note Item 6: Typically used with Item 1 (but will fit on any similar Wedge Base Socket).		

NOT ALL PARTS LISTED ABOVE ARE USED ON THIS GAME (QUANTITIES PER GAME WILL DIFFER).
COMPARE ACTUAL PART ON GAME TO ABOVE DRAWINGS TO IDENTIFY THE PART NUMBER REQUIRED.

HOW TO UPDATE YOUR GAME CODE FOR S.A.M. SYSTEM MACHINES

USB Compatible Data Storage Device (Thumb, Flash or Jump Drives) required to copy game code into system.

S.A.M. System compatible, tested & SPI approved USB Data Storage Devices 128MB+ available through your local distributor: Ask for SPI Part Number 970-0128-00

* to get the Data Storage Device with the latest Game Code copied to it, add "game title" to above part number.

STYLE, COLOR, SIZE AND MANUFACTURER SUBJECT TO CHANGE.

Game Code is subject to change. Update this game with the latest code downloaded from our website, from another game or order through your local distributor (use SPI PN + name above).

Upon power-up the display will describe the version of code installed in your game. When directed to do so (via Service Bulletin or website announcement) you will need to update your code ... with the **BOOT FLASH EPROM*** installed, here's how:


STEP 1 Open the Back Box and locate the **8-Position Dip Switch (SW1 on the CPU/Sound Board)**.

STEP 2 Switch Dip Switch #8 to 'ON'.
(***BOOT FLASH EPROM** must be installed.)

STEP 3 Press the **White Reset Button (S1 RESET on the CPU/Sound Board)** or Power Cycle the game **OFF/ON** (ON/OFF Switch is located on the outside of the cabinet bottom, front right).



STEP 4 Using the **4-Button Service Switch Set (inside the Coin Door)**:

- 4A } Press [SELECT] to begin.
- 4B } With the "UPDT" Icon highlighted, press [SELECT].
- 4C } Insert the Data Storage Device (w/latest file(s)) into the USB Port.
- 4D } If more than one file is present on the Data Storage Device, press [<] or [>] to locate your file. Press [SELECT] to update.
- 4E } Follow on-screen prompts.

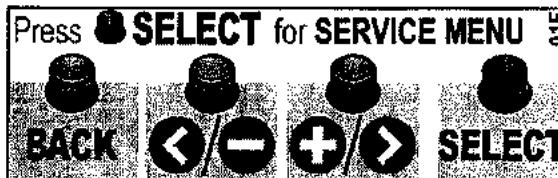

- **Green Button**
Press to **Escape Back** (or **Exit**).
- **Red Buttons**
Press to move **< Left, Right >**.
Press to **- Decrease** or **+ Increase** values or to change settings.
- **Black Button**
Press to **Enter Select** (or **"OK"**).


CPU/Sound Board (S.A.M. System)

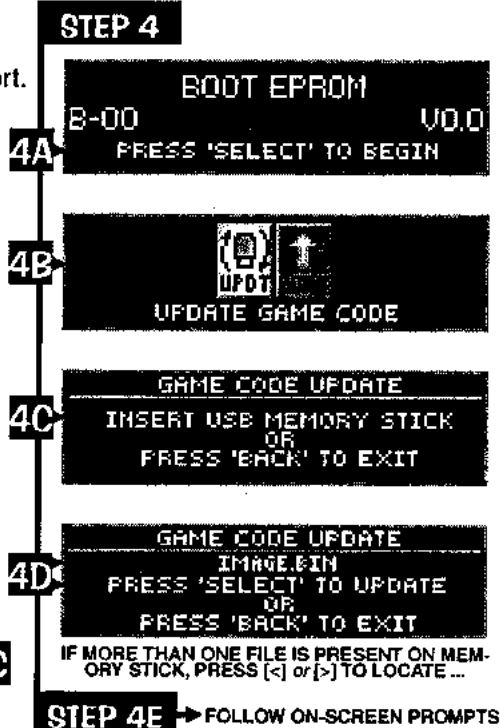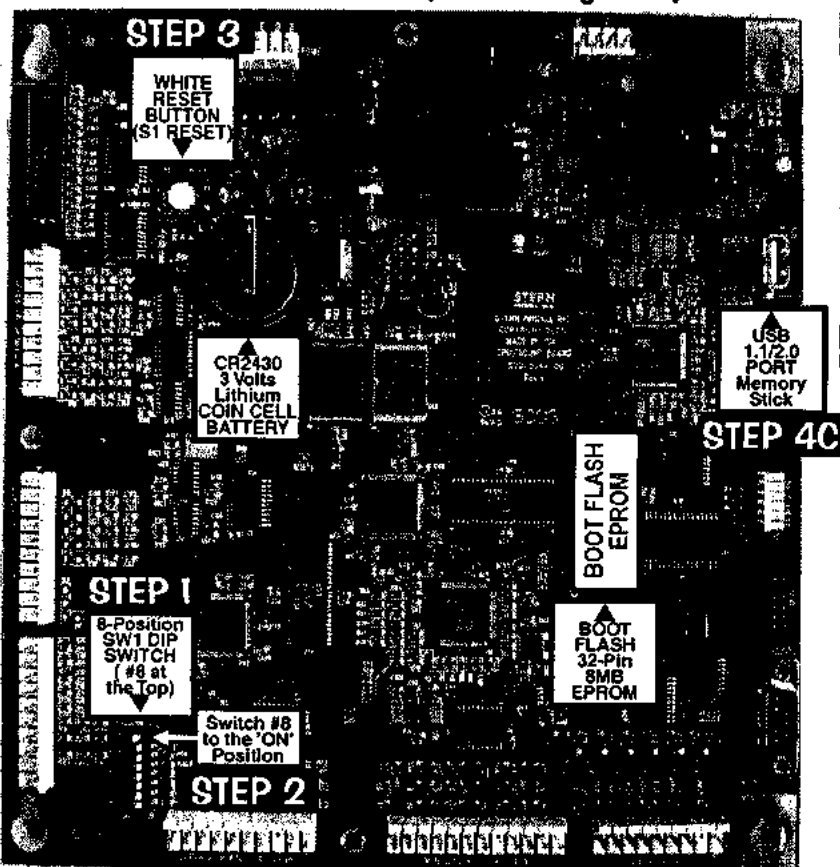

You can also retrieve your latest code from another game! From the **USB MENU** via the **UTILITIES MENU**, select the **"BKUP"** Icon instead and download to your Data Storage Device.

! Quick Tip ~ Try backing up your current code prior to installing your new code, just in case your Data Storage Device file was corrupted by a computer glitch while you were copying /

Got confused? Comments? Questions? Call Technical Support at 800-542-5377 or 708-345-7700 (Option 1).

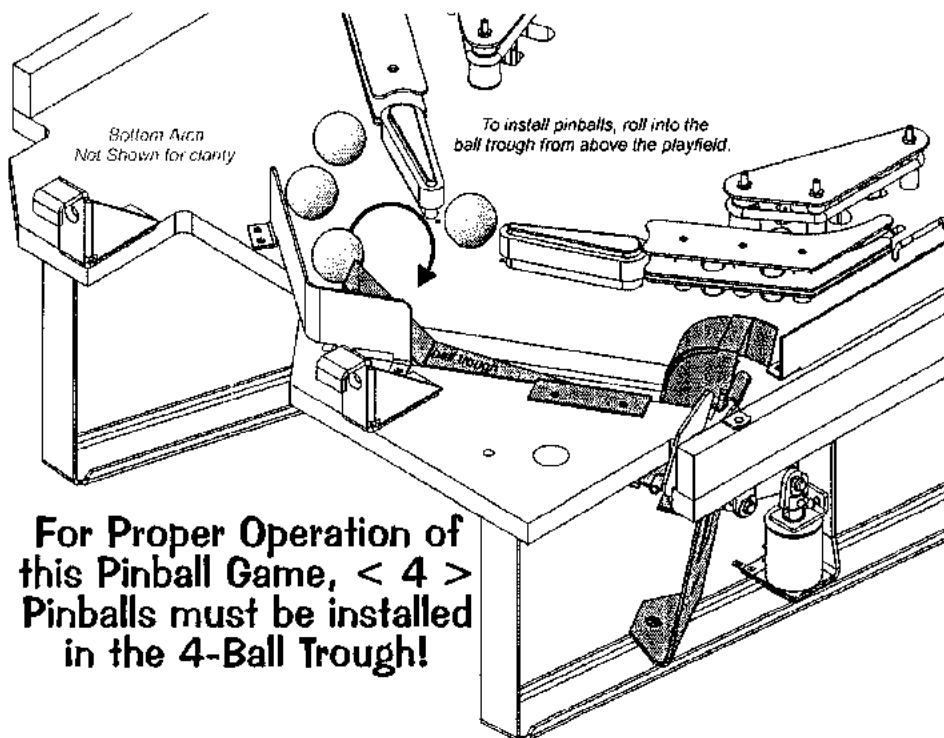

**For Proper Operation of
this Pinball Game, < 4 >
Pinballs must be installed
in the 4-Ball Trough!**

Backbox Fuses*, Cabinet Fuses, Playfield Fuses and Cabinet Switches

***Note:** The CPU/Sound PCB
does not have fuses.

QUICK REFERENCE FUSE CHART

3/4A S.B. 200-5000-17 | 3A S.B. 200-5000-08 | 4A S.B. 200-5000-05 | 5A S.B. 200-5000-01 | 7A S.B. 200-5000-03 | 8A S.B. 200-5000-05

BACKBOX FUSES

I/O POWER DRIVER BOARD

with RED LED STATUS INDICATORS (if any RED LED is OFF, check the fuse)

F1	5A S.B.	5.7VAC- G.I. Lamps	(BROWN-WHITE-WHT-BRN)
F2	5A S.B.	5.7VAC- G.I. Lamps	(YELLOW-WHITE-YEL Circuit)
F3	5A S.B.	5.7VAC- G.I. Lamps	(GREEN-WHITE-GRN Circuit)
F4	5A S.B.	5.7VAC- G.I. Lamps	(VIOLET-WHITE-VIO Circuit)
F5	7A S.B.	50VDC Coils / Flippers	(48VAC feed to BRDG 1)
F6	3A S.B.	24VAC- Motor or Special Application	
F7	4A S.B.	50VDC Magnet(s) or Special Application	
F8	3A S.B.	50VDC Coils	
F9	8A S.B.	18VDC Control Lamps	(13VAC feed to BRDG 4)
F10	5A S.B.	20VDC Coils / Flashers	(16VAC feed to BRDG 2)
F11	4A S.B.	5VDC Logic Power	(8VAC feed to BRDG 5)
F12	5A S.B.	12VDC Audio	(19VAC feed to BRDG 3)
F13	5A S.B.	12VDC Audio	(19VAC feed to BRDG 3)

CABINET FUSES

POWER (SERVICE OUTLET) BOX

(Access through Coin Door inside cabinet, front bottom)

8A S.B.	110-120V Main Line	US / Canada / Japan
5A S.B.	220-240V Main Line	International

PLAYFIELD FUSES

FLIPPER OR SPECIAL APPLICATION

(Coil Fuses are located under the playfield near assembly)

3A S.B.	50VDC R. Flipper	(BLU-YEL-WHT-YEL)
3A S.B.	50VDC L. Flipper	(GRY-YEL-WHT-YEL)
3A S.B.	50VDC Additional Flipper Coil, if used	
3A S.B.	50VDC Spcl. Application Coil, if used	

For location & more details on fuses, see Sec. 5, Chp. 2

DISPLAY POWER SUPPLY BOARD


F1	3/4A S.B.	90VDC High Voltage Dot Display Board
----	-----------	--------------------------------------

ALL FUSES ARE 250V S.B. (SLO-BLO)
SEE FUSE OR TABLES FOR AMP RATING
CAUTION: FOR CONTINUED PROTECTION
AGAINST RISK OF FIRE, REPLACE ONLY WITH
SAME TYPE FUSE WITH IDENTICAL ELECTRICAL RATING!


Stern Pinball®, Inc. ©2008

820-6384-00 Rev C

Inside Coin Door

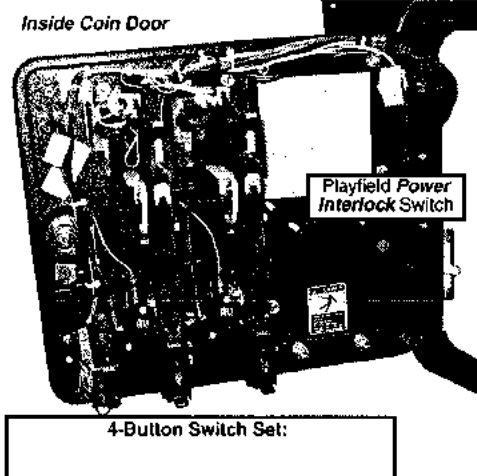

4-Button Switch Set:

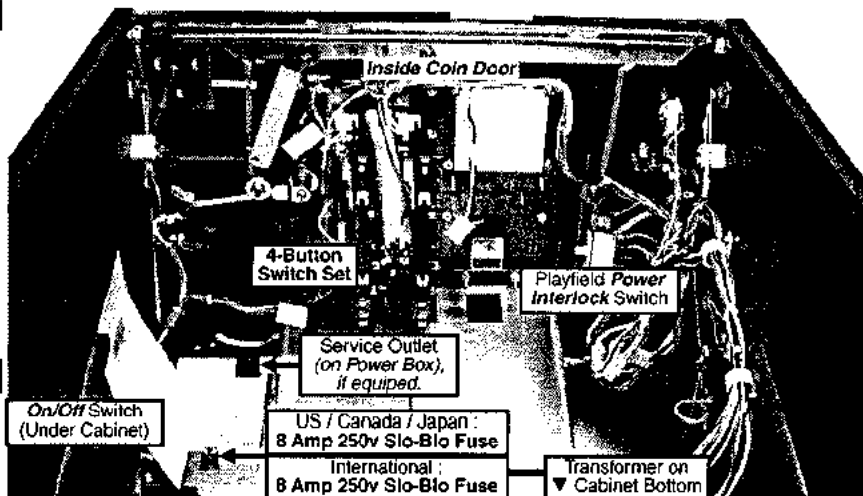


OPEN THE COIN DOOR TO ACCESS THE SERVICE SWITCH X4 SET.



● ● ● ● Service Switch X4 Set Overview

The four buttons (inside Coin Door) have dual functions depending if you have entered the Service Menu or not.

Functions in Game or Attract Mode

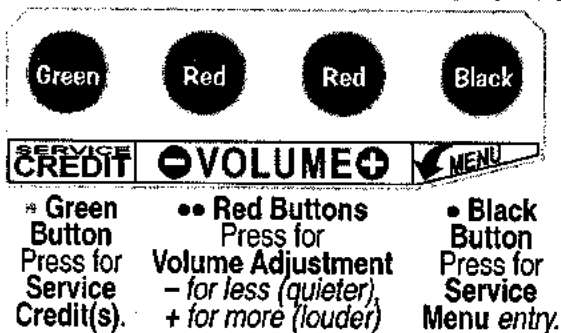

Functions in the Service Menu

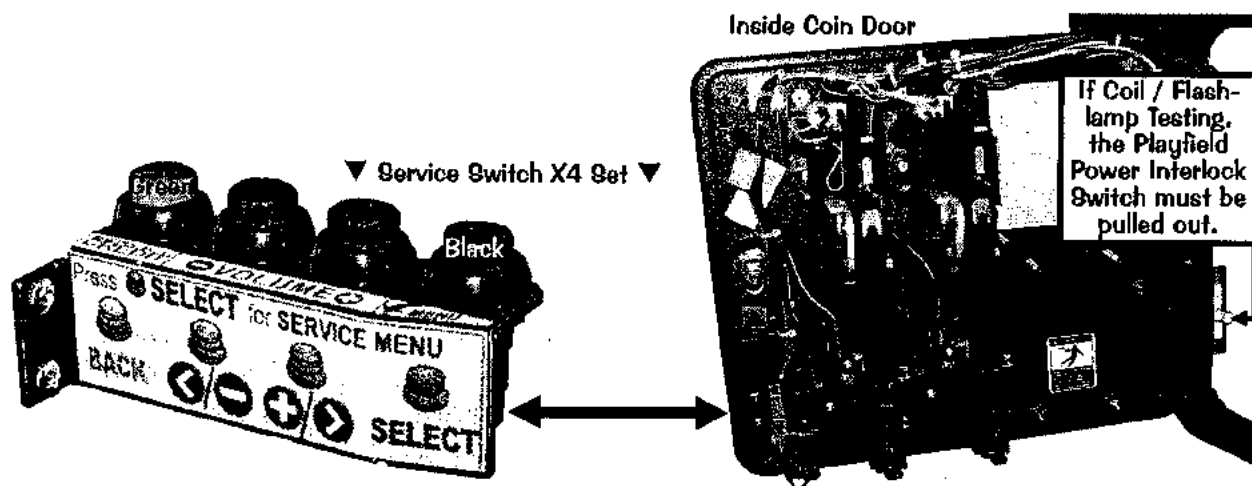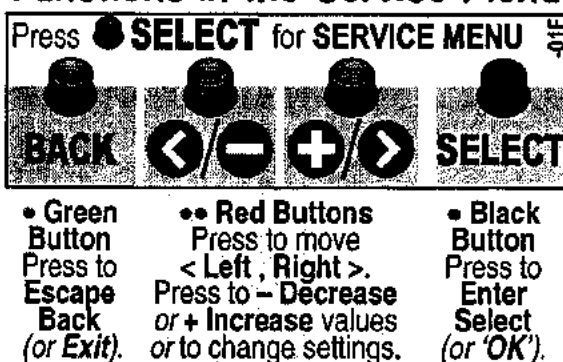

EXAMPLE:

To enter the **SERVICE MENU**, then enter the **SWITCH TEST MENU** via the **DIAGNOSTIC MENU**, perform the below steps.

Step 1 Press [**SELECT**].

Step 2 With the "DIAG" Icon highlighted, press [**SELECT**].

Step 3 With the "SW" Icon highlighted, press [**SELECT**].

Step 4 With the "TEST" Icon highlighted, press [**SELECT**].

Press any switch. If wired correctly, the information in the display will match the information in the Switch Matrix (see DR. 4).

Press [<] or [>] to move left or right through the menus.

Press [**BACK**] to go back a menu, exit or escape at any time.

Continue through the other menus.



The Service Menu is subject to change. Update this game with the latest code downloaded from our website with a USB Data Storage Device (64MB min., recommendation 128MB or higher). See the inside front cover for directions or in the Service Menu "Go To Utilities Menu" then "Go To USB Menu" and follow prompts.

DIAGNOSTIC AIDS

50V / 20V DISABLED
CLOSE COIN DOOR
OR PULL INTERLOCK SWITCH
TO RESTORE POWER

This **audible / visual alert display** is shown when the 50V / 20V Power is disabled (by opening the Coin Door). PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL, SWITCH OR PLAY TESTING WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE! Pulling out the Power Interlock Switch or pressing the 'escape' Green [BACK] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT!
AUTO PLUNGER
DEVICE MALFUNCTION

This **alert display** is shown momentarily during Game Mode or Power-Up to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly). OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in Switch Alerts and/or Technician Alerts.

GAME NAME
V0.00 SYS. 0.00 HDW. 0
SERVICE MENU *
USE -/+ TO VIEW TECH. ALERTS

Upon entering the SERVICE MENU, if an asterisk " *" is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the Red Buttons (short-cut to the TECHNICIAN ALERTS MENU) or continue into the SERVICE MENU (press the Black Button again), select the "DIAG" Icon and "TECH" Icon for the Technician Alerts information.

CPU DIP SWITCH SETTINGS

The 8-Pos. Dip Switch [SW1] is on the CPU/Sound Board (between Conn. J3 & J13, lower left corner)

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
USA	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Germany	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Russia	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Australia	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Greece	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
So. Africa	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Austria	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Italy	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Spain	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Belgium	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Japan	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Sweden	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Canada 1	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Lithuania	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Switzerland	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Canada 2	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Middle East	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Taiwan	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Croatia	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Netherlands	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
UK	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Denmark	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
New Zealand	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU/SND PCB SETTING:	Pos.	1	2	3	4	5	6	7	8
UPDATE CODE	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Finland	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Norway	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
France	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

CPU COUNTRY SETTING:	Pos.	1	2	3	4	5	6	7	8
Portugal	ON	▲	▲	▲	▲	▲	▲	▲	▲
	OFF	▼	▼	▼	▼	▼	▼	▼	▼

Note: Slide Dip Switch 8 to Position ON (with Dip Switches 1-7 in the OFF Position) only to reboot the game with the latest version BOOT EPROM installed at U9 on the CPU/Sound Board (S.A.M. System only). Currently, this is also the procedure to update your game with the latest software code update file. For the latest version, visit our website. If you have questions about updating your game code, call Technical Support for assistance.

SWITCH MATRIX GRID I #1 - #64 (Switch Locations : next page)

CPU/ Sound Board	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
IC-U22A	IC-U22B	IC-U22C	IC-U22D	IC-U16A	IC-U16B	IC-U16C	IC-U16D	IC-U56A	IC-U56B	IC-U56C	IC-U56D	IC-U60A	IC-U60B	IC-U60C	IC-U60D	IC-U60E
RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A	RETURN A
WHIT-BRN	WHIT-BRN	WHIT-BRN	WHIT-BRN	WHIT-BRN	WHIT-BRN	WHIT-BRN	WHIT-BRN	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK	TAN-BLK
J16-P3	J16-P3	J16-P3	J16-P3	J16-P3	J16-P3	J16-P3	J16-P3	J12-P9	J12-P9	J12-P9	J12-P9	J12-P9	J12-P9	J12-P9	J12-P9	J12-P9
S.W. #1	S.W. #2	S.W. #3	S.W. #4	S.W. #5	S.W. #6	S.W. #7	S.W. #8	S.W. #9	S.W. #10	S.W. #11	S.W. #12	S.W. #13	S.W. #14	S.W. #15	S.W. #16	S.W. #17
TRON(N)	TRON(N)	TRON(N)	TRON(N)			(Z)USE	Z(U)SE			VIDEO GAME EJECT	ROLL OVER	ZUS(E)	CL(U)	TOURN	START	START
DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1	DRIVE J1-P1
S.W. #17	S.W. #18	S.W. #19	S.W. #20	S.W. #21	S.W. #22	S.W. #23	S.W. #24	S.W. #25	S.W. #26	S.W. #27	S.W. #28	S.W. #29	S.W. #30	S.W. #31	S.W. #32	S.W. #33
TROUGH #4 (L)	TROUGH #3	TROUGH #2	TROUGH #1(R)	JAM	SHOOTER LANE	LEFT OUTLINE	(C)LU	LEFT SCINSHOT	RIGHT SCINSHOT	LEFT SPINNER	RIGHT SPINNER	LEFT ORBIT	RIGHT ORBIT	LEFT ORBIT	RIGHT ORBIT	ZU(S)E
DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5	DRIVE J1-P5
S.W. #33	S.W. #34	S.W. #35	S.W. #36	S.W. #37	S.W. #38	S.W. #39	S.W. #40	S.W. #41	S.W. #42	S.W. #43	S.W. #44	S.W. #45	S.W. #46	S.W. #47	S.W. #48	S.W. #49
R. RAMP EXIT	R. RAMP ENTRANCE	R. RAMP ENTRANCE	R. RAMP ENTRANCE	R. RAMP ENTRANCE	R. RAMP ENTRANCE	R. RAMP ENTRANCE	R. RAMP ENTRANCE	DISC OPTO	DISC OPTO	LEFT ORBIT	RIGHT ORBIT	LEFT ORBIT	RIGHT ORBIT	LEFT ORBIT	RIGHT ORBIT	ZU(S)E
DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4	DRIVE J1-P4
S.W. #49	S.W. #50	S.W. #51	S.W. #52	S.W. #53	S.W. #54	S.W. #55	S.W. #56	S.W. #57	S.W. #58	S.W. #59	S.W. #60	S.W. #61	S.W. #62	S.W. #63	S.W. #64	S.W. #65
RECOGNIZ 3-BANK (L)	RECOGNIZ 3-BANK (C)	RECOGNIZ 3-BANK (R)	MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)
DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3	DRIVE J1-P3
S.W. #65	S.W. #66	S.W. #67	S.W. #68	S.W. #69	S.W. #70	S.W. #71	S.W. #72	S.W. #73	S.W. #74	S.W. #75	S.W. #76	S.W. #77	S.W. #78	S.W. #79	S.W. #80	S.W. #81
RECOGNIZ 3-BANK (L)	RECOGNIZ 3-BANK (C)	RECOGNIZ 3-BANK (R)	MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)	3-BANK MOTOR (UP)

4 FOR MORE ABOUT DIODE ON TERMINAL STRIPS AND D.I.S. SEE SECTION 5, CHARACTER 2, PAGES 104-105

Wine Color Abbreviations used:

BLK Black BLU Blue BRN Brown GRN Green LGN Light Green ORG Orange PINK Pink RED Red TAN Tan VIO Violet WHI White YEL Yellow


Dedicated Switches [#D-1 - #D-32] (Dedicated Switch Locations : next page)

CPU/SND Board	IC-U22A	IC-U22B	IC-U22C	IC-U22D	IC-U16A	IC-U16B	IC-U16C	IC-U16D	IC-U56A	IC-U56B	IC-U56C	IC-U56D	IC-U60A	IC-U60B	IC-U60C	IC-U60D
PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN	PINK-BRN
J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2	J12-P2
S.W. #D-1	S.W. #D-2	S.W. #D-3	S.W. #D-4	S.W. #D-5	S.W. #D-6	S.W. #D-7	S.W. #D-8	S.W. #D-9	S.W. #D-10	S.W. #D-11	S.W. #D-12	S.W. #D-13	S.W. #D-14	S.W. #D-15	S.W. #D-16	S.W. #D-17
LEFT COIN SLOT	CENTER COIN SLOT	RIGHT COIN SLOT	FOURTH COIN SLOT	FIFTH COIN SLOT	IF USED											
160-5204-00	160-5204-00	160-5204-00	160-5204-00	160-5204-00	IF USED											
COIN DOOR	COIN DOOR	COIN DOOR	COIN DOOR	COIN DOOR	IF USED											


CPU/SOUND BD. SW1 DIP SWITCH (located between Connectors J3/J13)

CPU/SND Board	IC-U22A	IC-U22B	IC-U22C	IC-U22D	IC-U16A	IC-U16B	IC-U16C	IC-U16D	IC-U56A	IC-U56B	IC-U56C	IC-U56D	IC-U60A	IC-U60B	IC-U60C	IC-U60D
LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN	LGND-BRN
J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1	J13-P1
S.W. #D-17	S.W. #D-18	S.W. #D-19	S.W. #D-20	S.W. #D-21	S.W. #D-22	S.W. #D-23	S.W. #D-24	S.W. #D-25	S.W. #D-26	S.W. #D-27	S.W. #D-28	S.W. #D-29	S.W. #D-30	S.W. #D-31	S.W. #D-32	S.W. #D-33
TILT	SLAM	TICKET	IF USED	BACK (GREEN)	MINUS (RED)	PLUS (RED)	SELECT (BLACK)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)	DIP (12345678)
OPTIONAL 160-5202-00				160-5182-04	160-5182-02	160-5182-02	160-5182-00	S.W. POS. #1 ON	S.W. POS. #2 ON	S.W. POS. #3 ON	S.W. POS. #4 ON	S.W. POS. #5 ON	S.W. POS. #6 ON	S.W. POS. #7 ON	S.W. POS. #8 ON	S.W. POS. #9 ON


PRO

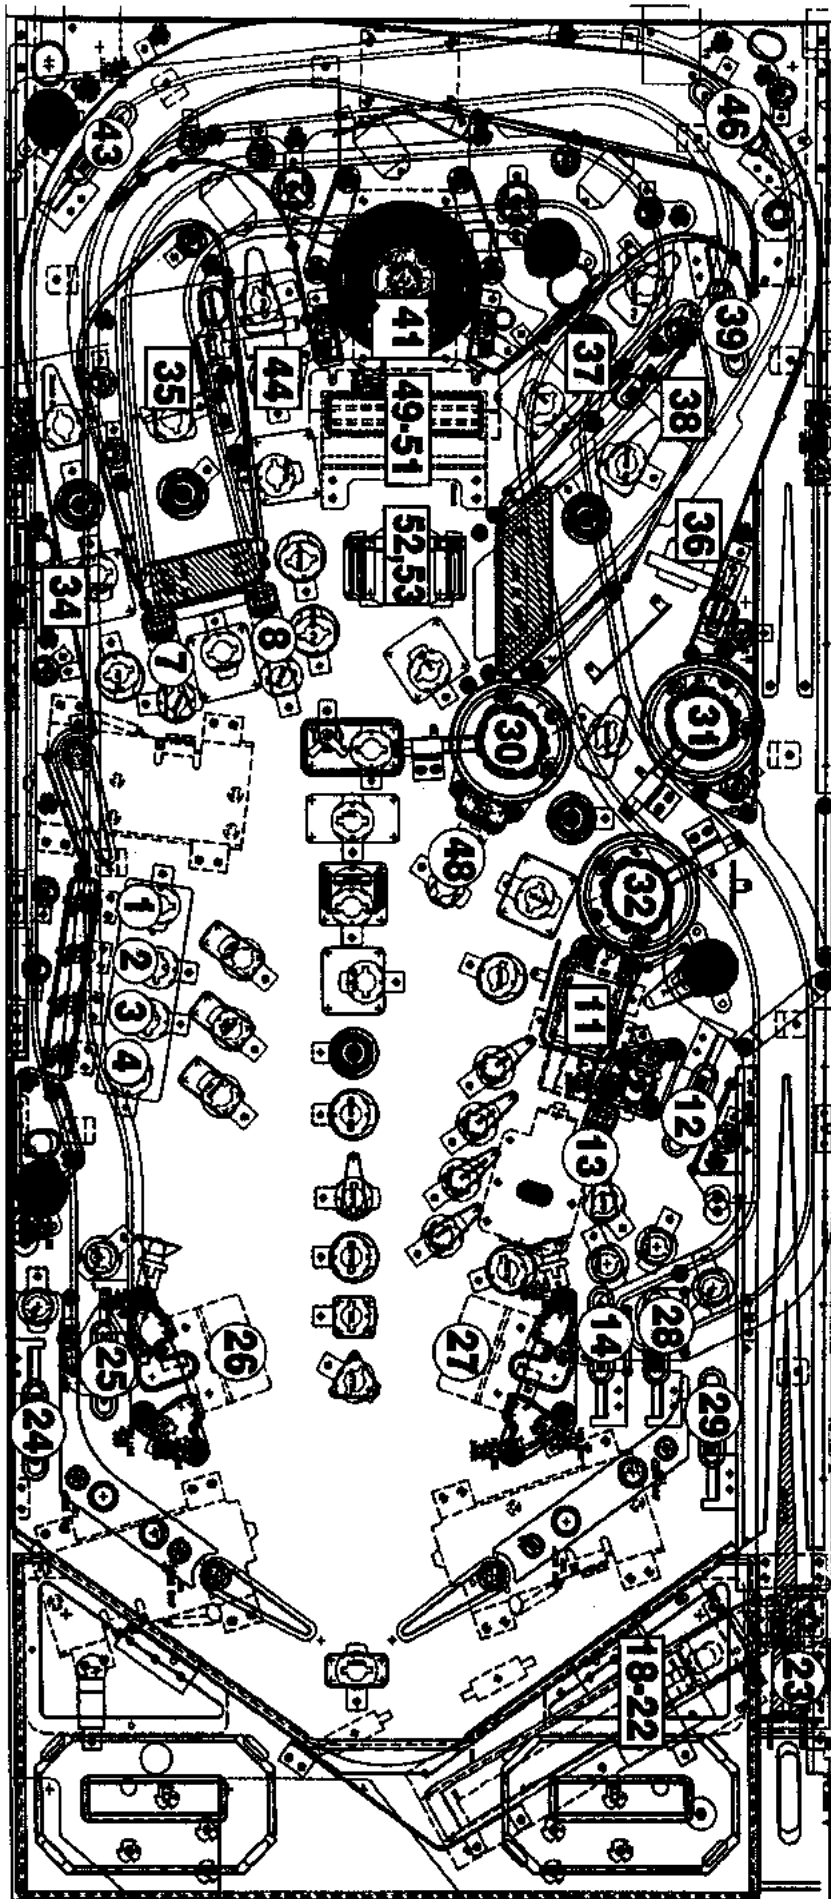


Typical Switch Wiring & Schematic

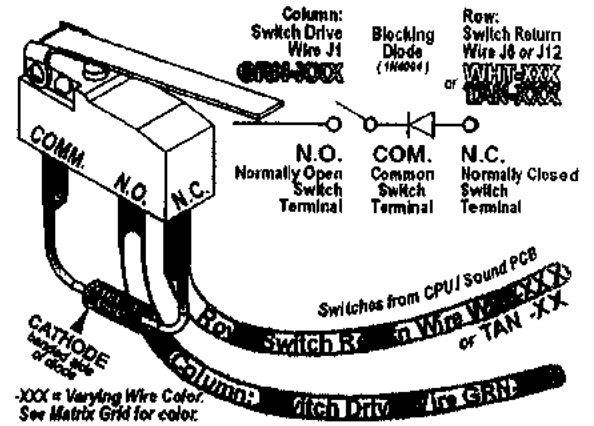

Dedicated Switch Schematic

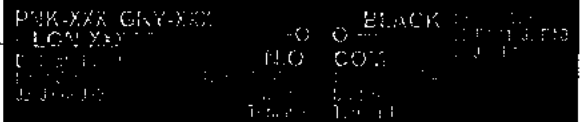

Typical Switch Wiring & Schematic ... with Switch Diode on a Terminal Strip (DOTS)

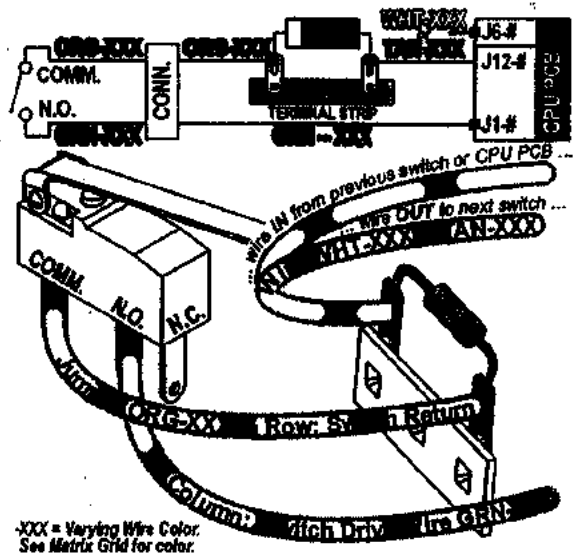

PRO

COILS DETAILED CHART TABLE

High Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#1	TROUGH UP-KICKER	Q1	I/O Power Driver	▲	YEL-VIO	J10-P9/10	60VDC	BRN-BLK	J8-P1	25-1200 090-6044-ND
#2	AUTO LAUNCH	Q2			YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-840 090-6036-ND
#3	DISC DIRECTION RELAY	Q3			BRN	J7-P1	20VDC	BRN-ORG	J8-P4	RELAY 190-8004-00
#4	VIDEO GAME EJECT	Q4			YEL-VIO	J10-P9/10	50VDC	BRN-YEL	J8-P5	25-1200 090-6044-ND
#5	DISC MOTOR POWER	Q5			BRN	J7-P1	20VDC	BRN-GRN	J8-P6	RELAY 190-8004-00
#6	RECOGNIZER 3-BANK MTR / RELAY	Q6			BRN	J7-P1	20VDC	BRN-BLU	J8-P7	RELAY 190-8004-00
#7	ORBIT UP / DOWN POST	Q7			YEL-VIO	J10-P9/10	50VDC	BRN-VIO	J8-P8	25-1200 090-6044-ND
#8	SHAKER MOTOR (OPTIONAL)	Q8			RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	S. MOTOR KIT 502-8027-00
High Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#9	LEFT POP BUMPER	Q9	I/O Power Driver	▲	YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	25-1200 090-6044-ND
#10	RIGHT POP BUMPER	Q10			YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	25-1200 090-6044-ND
#11	BOTTOM POP BUMPER	Q11			YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	25-1200 090-6044-ND
#12	UPPER LEFT FLIPPER	Q12			BLU-BRN	J10-P6/7	50VDC	BLU-YEL	J8-P5	23-1500 090-6082-ND
#13	LEFT SLINGSHOT	Q13			YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	25-1200 090-6044-ND
#14	RIGHT SLINGSHOT	Q14			YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	25-1200 090-6044-ND
#15	LEFT FLIPPER (50V RED/YEL)	Q15			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	23-1500 090-6082-ND
#16	RIGHT FLIPPER (50V RED/YEL)	Q16			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	22-1080 090-5032-ND
Low Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#17	ZEN FLASHER	Q17	I/O Power Driver	▲	ORG	J6-P10	20VDC	VIO-BRN	J7-P2	#89 BULB 165-5000-88
#18	FLASH: VIDEO GAME	Q18			ORG	J6-P10	20VDC	VIO-RED	J7-P3	#181 BULB
#19	FLASH: BACK CENTER	Q19			ORG	J6-P10	20VDC	VIO-ORG	J7-P4	#89 BULB 165-5000-88
#20	FLASH: BOTTOM ARCH (LEFT)	Q20			ORG	J6-P10	20VDC	VIO-YEL	J7-P6	#89 BULB 165-5000-88
#21	FLASH: BOTTOM ARCH (RIGHT)	Q21			ORG	J6-P10	20VDC	VIO-GRN	J7-P7	#89 BULB 165-5000-88
#22	FLASH: LOWER (LEFT)	Q22			ORG	J6-P10	20VDC	VIO-BLU	J7-P8	#89 BULB 165-5000-88
#23	FLASH: LOWER RIGHT	Q23			ORG	J6-P10	20VDC	VIO-BLK	J7-P9	#89 BULB 165-5000-88
#24	OPTIONAL (e.g. COIN METER)	Q24			RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	OPTIONAL 5VDC
Low Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#25	FLASH: BACK LEFT	Q25	I/O Power Driver	▲	ORG	J6-P10	20VDC	BLK-BRN	J6-P1	#89 BULB 165-5000-88
#26	FLASH: DISC (LEFT)	Q26			ORG	J6-P10	20VDC	BLK-RED	J6-P2	#89 BULB 165-5000-88
#27	FLASH: (DISC RIGHT)	Q27			ORG	J6-P10	20VDC	BLK-ORG	J6-P3	#89 BULB 165-5000-88
#28	FLASH: BACKPANEL (X2)	Q28			ORG	J6-P10	20VDC	BLK-YEL	J6-P4	#89 BULB 165-5000-88
#29	FLASH: RECOGNIZER	Q29			ORG	J6-P10	20VDC	BLK-GRN	J6-P5	#89 BULB 165-5000-88
#30	DISC MOTOR RELAY	Q30			BRN	J7-P1	20VDC	BLK-BLU	J6-P6	RELAY 190-8004-00
#31	FLASH: RED DISC (LEFT) (X2)	Q31			ORG	J6-P10	20VDC	BLK-VIO	J6-P7	#181 BULB 165-5032-00
#32	FLASH: RED DISC (RIGHT) (X2)	Q32			ORG	J6-P10	20VDC	BLK-GRY	J6-P8	#181 BULB 165-5032-00



PRO

DIAG
GO TO DIAGNOSTICS MENU

COIL
GO TO COIL MENU

TEST
SINGLE COIL TEST
COIL MENU: SINGLE COIL & CYCLING COIL

COIL & FLASH LAMP LOCATIONS

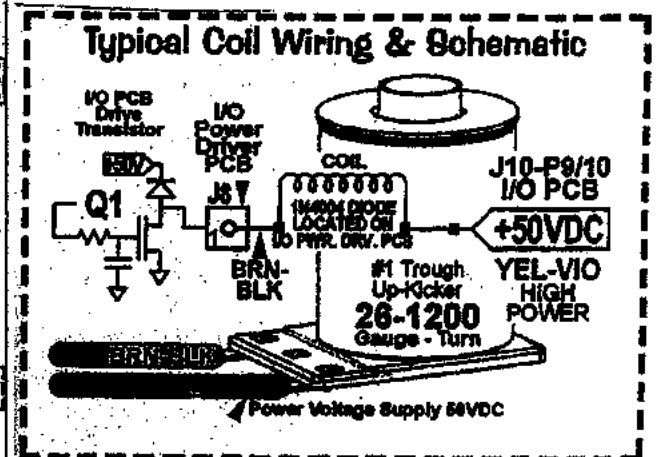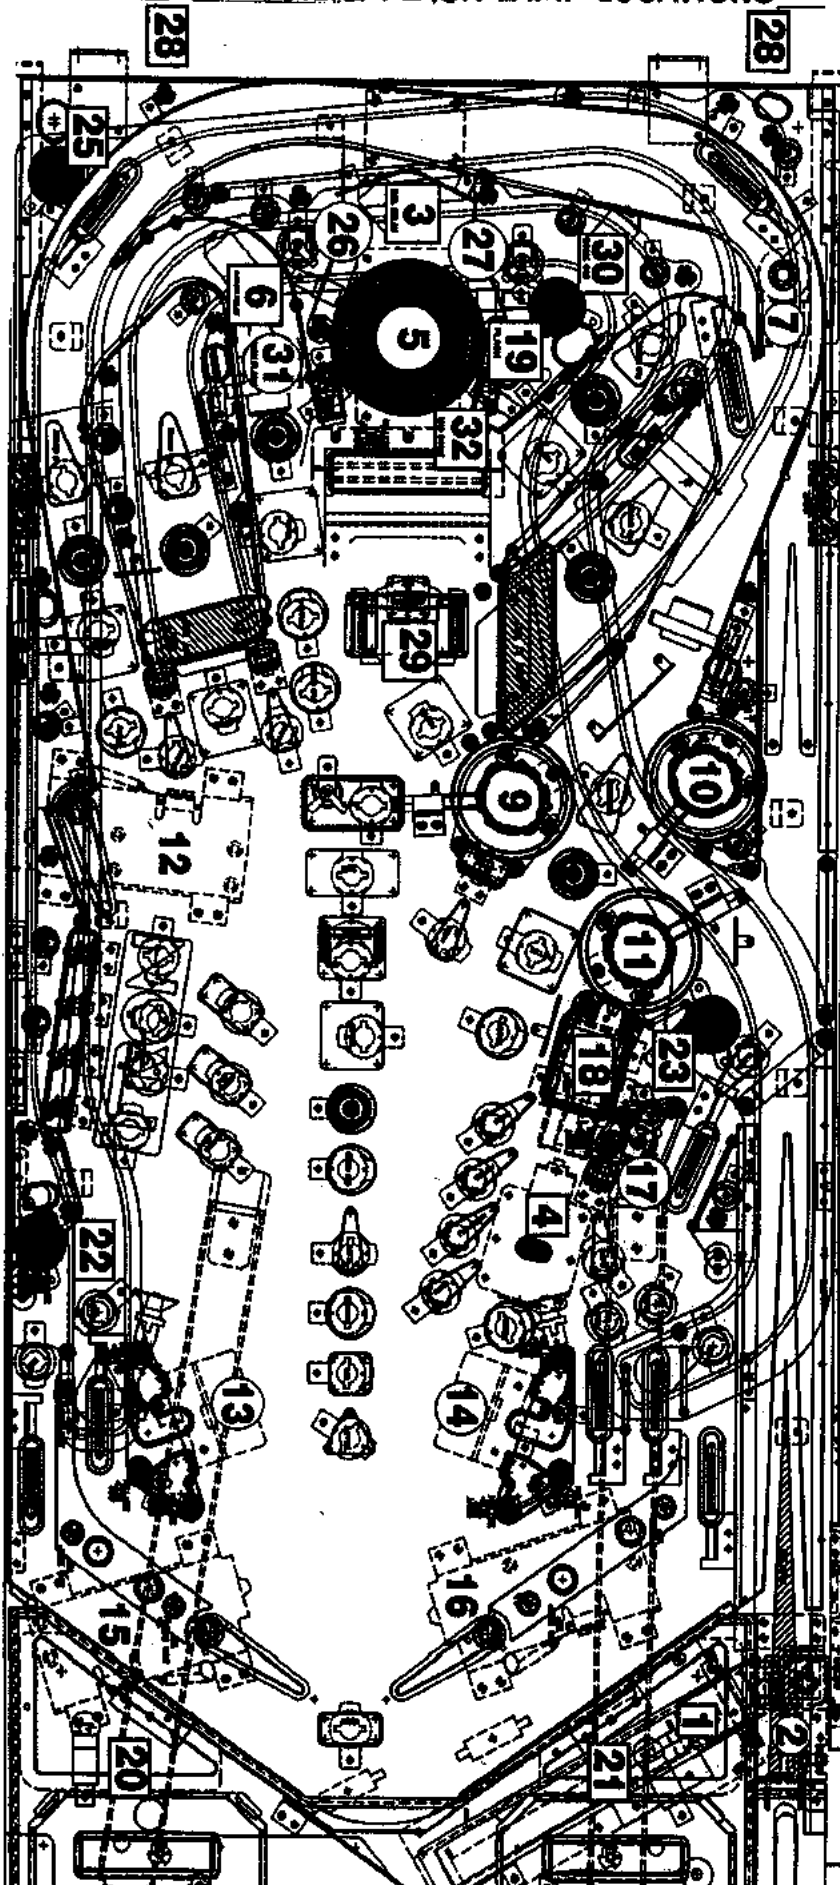

PRO

LAMP MATRIX GRID [#1 - #80] (Lamp Locations : next page)


I/O	01	02	03	04	05	06	07	08
Power Board	18VDC IC-U17 YEL-BRN J13-P9	18VDC IC-U16 YEL-RED J13-P8	18VDC IC-U15 YEL-ORG J13-P7	18VDC IC-U14 YEL-BLK J13-P6	18VDC IC-U13 YEL-GRN J13-P5	18VDC IC-U12 YEL-BLU J13-P4	18VDC IC-U11 YEL-VIO J13-P3	18VDC IC-U10 YEL-GRY J13-P1
01	033 GROUND RED-BRN J12-P1	# 555 CLEAR L.P. #1 START BUTTON	# 555 CLEAR L.P. #2 TOURN START BUTTON	# 555 CLEAR L.P. #3 SHOOT AGAIN	# 555 CLEAR L.P. #4 CENTER FLYNN	# 555 CLEAR L.P. #5 CENTER GEM	# 555 CLEAR L.P. #6 CENTER CLU	# 555 CLEAR L.P. #8 LEFT OUTLANE
02	034 GROUND RED-BLK J12-P2	# 555 CLEAR L.P. #9 (C)LU	# 555 CLEAR L.P. #10 ZUS(E)	# 555 CLEAR L.P. #11 C(L)U	# 555 CLEAR L.P. #12 CL(U)	# 555 CLEAR L.P. #13 RIGHT OUTLANE	# 555 CLEAR L.P. #14 TRO(N)	# 555 CLEAR L.P. #15 TR(O)N
03	035 GROUND RED-ORG J12-P3	# 555 CLEAR L.P. #17 (T)RON	# 555 CLEAR L.P. #18 TRON DOUBLE SCORING	# 555 CLEAR L.P. #19 BUMPER	# 555 CLEAR L.P. #20 SPINNERS	# 555 CLEAR L.P. #21 CENTER PORTAL	# 555 CLEAR L.P. #22 CENTER TRON	# 555 CLEAR L.P. #23 CENTER RECOGNIZER
04	036 GROUND RED-YEL J12-P4	# 555 CLEAR L.P. #25 CENTER DISC	# 555 CLEAR L.P. #26 CENTER QUORRA	# 555 CLEAR L.P. #27 EJECT CLU	# 555 CLEAR L.P. #28 EJECT PORTAL	# 555 CLEAR L.P. #29 EJECT QUORRA	# 555 CLEAR L.P. #30 EJECT LIGHT CYCLE	# 555 CLEAR L.P. #31 EJECT EXTRA BALL
05	037 GROUND RED-GRN J12-P5	# 555 CLEAR L.P. #23 ZU(S)E	# 555 CLEAR L.P. #24 ORBIT (RIGHT CYCLE)	# 44 CLEAR L.P. #35 FLYNN'S ARCADE	L.P. #36 R. LOOP ARROW	# 555 CLEAR L.P. #37 R. LOOP ARROW	# 555 CLEAR L.P. #38 RIGHT ORBIT (DISC)	# 555 CLEAR L.P. #39 R. RAMP (LIGHT CYCLE)
06	038 GROUND RED-BLU J12-P6	# 555 CLEAR L.P. #41 (Z)USE	# 555 CLEAR L.P. #42 LEFT RAMP (LIGHT CYCLE)	# 555 CLEAR L.P. #43 Z(U)SE	# 44 CLEAR L.P. #44 RECOGNIZER 3-BANK	# 555 CLEAR L.P. #45 L. INNER LOOP (CLU)	L.P. #46 L.P. #47	# 555 CLEAR L.P. #48 LEFT ORBIT (CLU)
07	039 GROUND RED-VIO J12-P8	# 555 CLEAR L.P. #49 R. INNER LOOP (LIGHT CYCLE)	# 555 CLEAR L.P. #50 RIGHT RAMP (DISC)	# 555 CLEAR L.P. #51 R. INNER LOOP (DISC)	# 555 CLEAR L.P. #52 R. RAMP ARROW	# 555 CLEAR L.P. #53 R. INNER LOOP ARROW	L.P. #54 L. INNER LOOP (DISC)	# 555 CLEAR L.P. #55 L. INNER LOOP ARROW
08	040 GROUND RED-GRY J12-P9	# 555 CLEAR L.P. #57 LEFT RAMP ARROW	# 555 CLEAR L.P. #58 LEFT RAMP (DISC)	# 555 CLEAR L.P. #59 LEFT ORBIT (LIGHT CYCLE)	L.P. #60 LEFT BUMPER	L.P. #61 RIGHT BUMPER	L.P. #62 BOTTOM BUMPER	# 555 CLEAR L.P. #63 L. INNER LOOP (LITE CYCLE)
09	041 GROUND RED-WHT J12-P10	L.P. #65 LEFT ORBIT (DISC)	# 555 CLEAR L.P. #66 LEFT ORBIT (DISC)	L.P. #67	L.P. #68	L.P. #69	L.P. #70	L.P. #71
10	042 GROUND RED J12-P11	L.P. #73	L.P. #74	L.P. #75	L.P. #76	L.P. #77	L.P. #78	L.P. #79
								L.P. #80

* FOR MORE ABOUT DIODE ON THER-
MINAL STRIPS «DOTS» SEE
SIC'S, CHP 2, PAGES 104-105 *


Wire Color Abbreviations Used:

BLK BLU BRN GRN GSN ORG RED VIO WHT YEL
Black Blue Brown Green Grey Orange Red Violet White Yellow

PRO

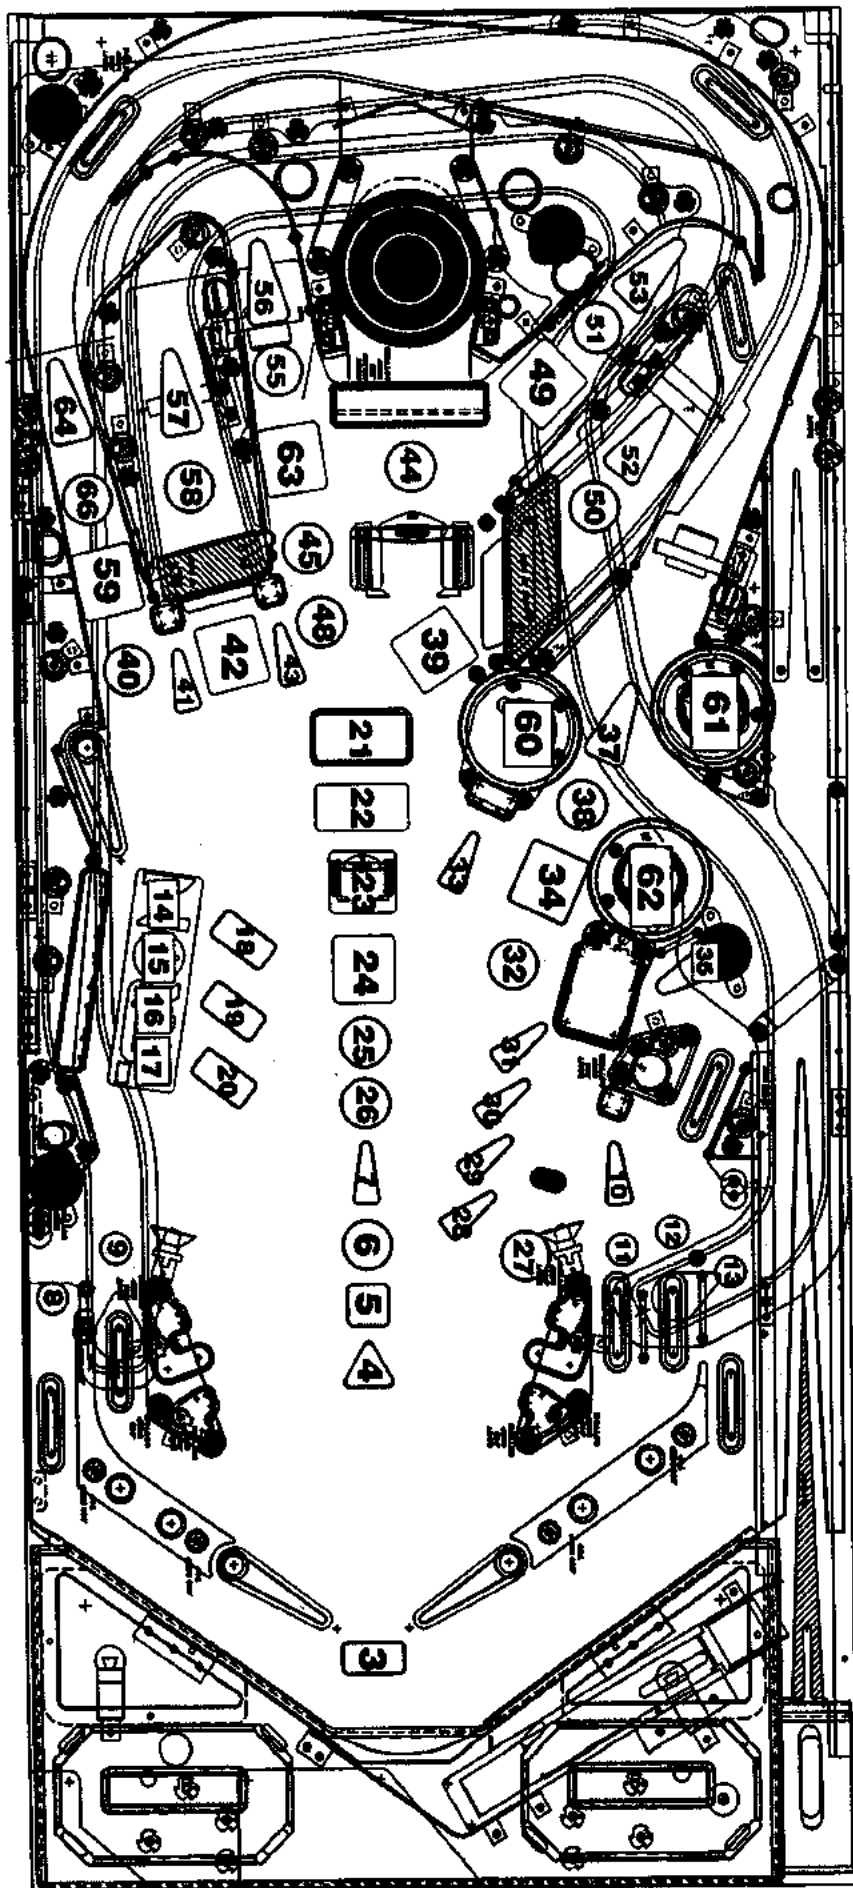

Typical Lamp Wiring & Schematic

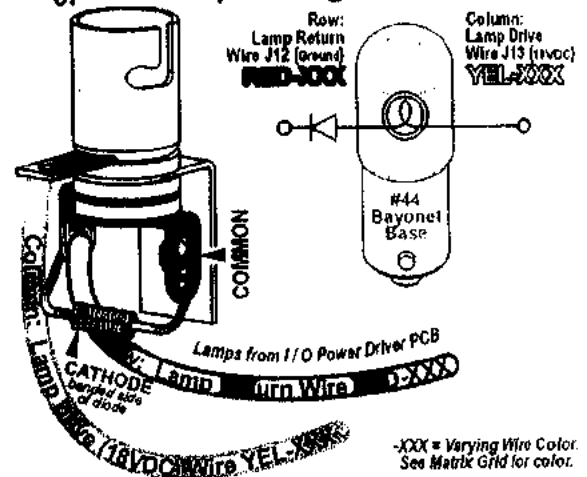


Typical Lamp Wiring & Schematic

... with Lamp Diode on a Terminal Strip (DOT9)
 (Usually when an LED Module is used as a Controlled Lamp for a Pop Bumper.)



... with Lamp Diode on a Terminal Strip (DOT9)
 (Usually when a #555 Bulb is used as a Controlled Lamp for a Spot Light.)

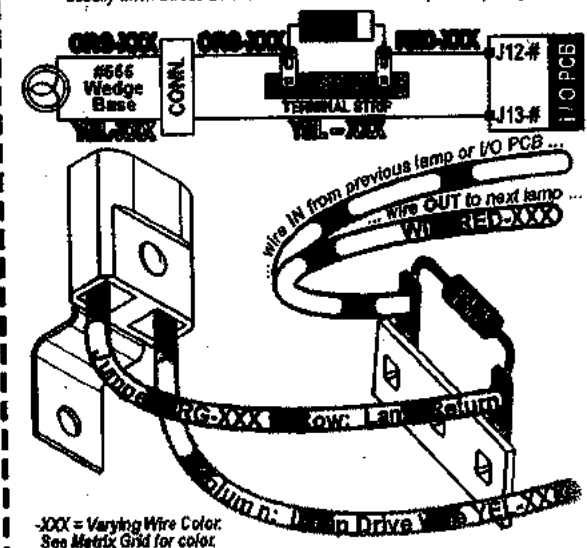

« FOR MORE ABOUT DIODE ON TERMINAL STRIPS «D.O.T.S.», SEE SECTION 5, CHAPTER 2, PAGES 104-105 »

Bischof

Estimate

FROM

Grants

சென்னை

1. **Introduction**

030

END

REF

72

WEEK




5214

71



[illegible]

Connectors J3/J13)


--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

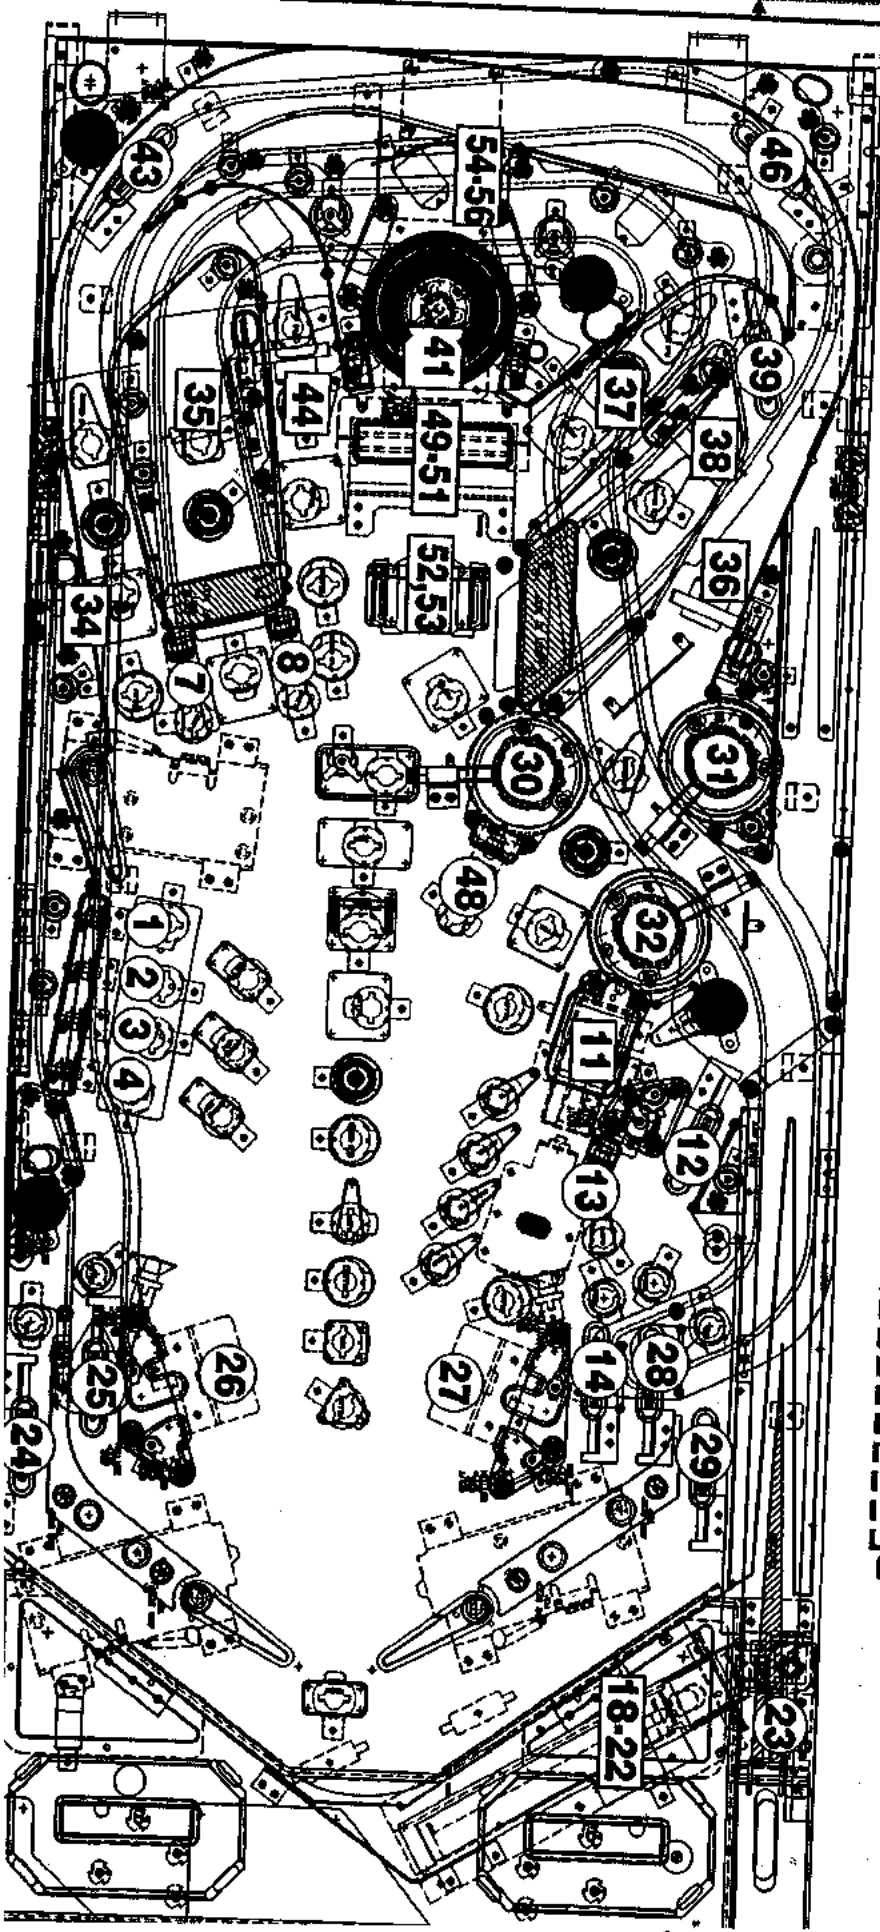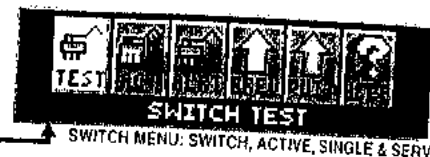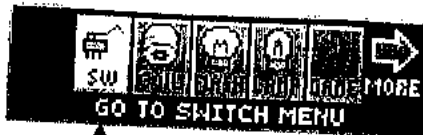

SWITCH LOCATIONS {Switch Matrix Grid : previous page}

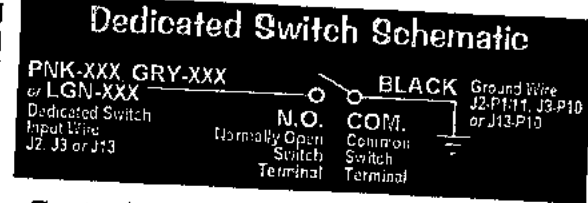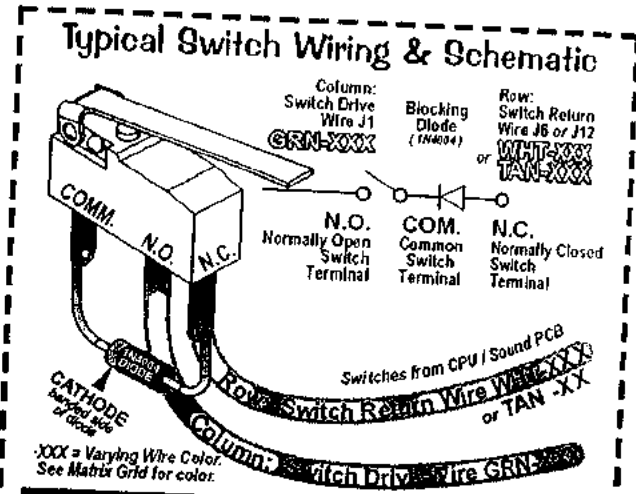

Typical Switch Wiring & Schematic ... with Switch Diode on a Terminal Strip (DOTS)


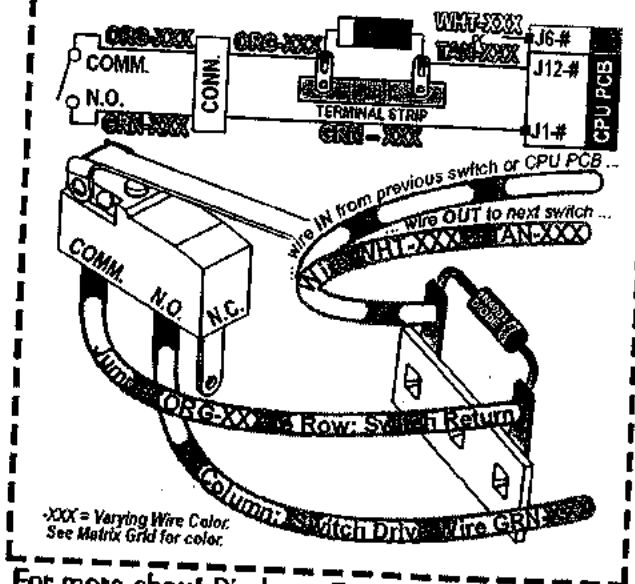


For more about Diode on Terminal Strips (DOTS), see the Yellow Pages (Schematics & Wiring).

COILS DETAILED CHART TABLE

High Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#1	TROUGH UP-KICKER	Q1	I/O Power Driver	▲	YEL-VIO	J10-P9/10	50VDC	BRN-BLK	J8-P1	28-1200 090-5044-NB
#2	AUTO LAUNCH	Q2			YEL-VIO	J10-P9/10	50VDC	BRN-RED	J8-P3	24-940 090-5038-NB
#3	4-BANK DROP TARGET	Q3			YEL-VIO	J10-P9/10	50VDC	BRN-ORG	J8-P4	25-1270 090-5034-NB
#4	VIDEO GAME EJECT	Q4			YEL-VIO	J10-P9/10	50VDC	BRN-YEL	J8-P5	28-1200 090-5044-NB
#5	DISC MOTOR POWER	Q5			BRN	J7-P1	50VDC	BRN-GRN	J8-P6	RELAY 190-5004-00
#6	RECOGNIZER 3-BANK MTR / RELAY	Q6			BRN	J7-P1	50VDC	BRN-BLU	J8-P7	RELAY 190-5004-00
#7	ORBIT UP / DOWN POST	Q7			YEL-VIO	J10-P9/10	50VDC	BRN-VIO	J8-P8	28-1200 090-5044-NB
#8	SHAKER MOTOR (OPTIONAL)	Q8			RED-WHT	J17-P7	16VAC	BRN-GRY	J8-P9	S. MOTOR KIT 502-5027-00
High Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#9	LEFT POP BUMPER	Q9	I/O Power Driver	▲	YEL-VIO	J10-P9/10	50VDC	BLU-BRN	J8-P1	28-1200 090-5044-NB
#10	RIGHT POP BUMPER	Q10			YEL-VIO	J10-P9/10	50VDC	BLU-RED	J8-P2	28-1200 090-5044-NB
#11	BOTTOM POP BUMPER	Q11			YEL-VIO	J10-P9/10	50VDC	BLU-ORG	J8-P4	28-1200 090-5044-NB
#12	UPPER LEFT FLIPPER	Q12			BLU-BRN	J10-P6/7	50VDC	BLU-YEL	J8-P5	23-1500 090-5082-NB
#13	LEFT SLINGSHOT	Q13			YEL-VIO	J10-P9/10	50VDC	BLU-GRN	J8-P6	28-1200 090-5044-NB
#14	RIGHT SLINGSHOT	Q14			YEL-VIO	J10-P9/10	50VDC	BLU-BLU	J8-P7	28-1200 090-5044-NB
#15	LEFT FLIPPER (50V RED/YEL)	Q15			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-GRY	J8-P8	23-1500 090-5082-NB
#16	RIGHT FLIPPER (50V RED/YEL)	Q16			GRY-YEL-3A Fuse-RED-YEL	J10-P6/7	50VDC	ORG-VIO	J8-P9	22-1080 090-5032-NB
Low Current Coils Group 1			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#17	ZEN FLASHER	Q17	I/O Power Driver	▲	ORG	J6-P10	20VDC	VIO-BRN	J7-P2	#89 BULB 165-5000-89 U/E
#18	FLASH: VIDEO GAME	Q18			ORG	J6-P10	20VDC	VIO-RED	J7-P3	#161 BULB 165-5000-89 U/E
#19	FLASH: RIGHT DOMES (X2)	Q19			ORG	J6-P10	20VDC	VIO-ORG	J7-P4	#88 BULB 165-5000-88 U/E
#20	FLASH: BOTTOM ARCH (LEFT)	Q20			ORG	J6-P10	20VDC	VIO-YEL	J7-P6	#89 BULB 165-5000-89 U/E
#21	FLASH: BOTTOM ARCH (RIGHT)	Q21			ORG	J6-P10	20VDC	VIO-GRN	J7-P7	#89 BULB 165-5000-89 U/E
#22	DISC DIRECTION RELAY	Q22			BRN	J7-P1	20VDC	VIO-BLU	J7-P8	RELAY 190-5004-00
#23	RECONIZER RELAY	Q23			BRN	J7-P1	20VDC	VIO-BLK	J7-P9	RELAY 190-5004-00
#24	OPTIONAL (e.g. COIN METER)	Q24			RED	J16-P4-8	5VDC	VIO-GRY	J7-P10	OPTIONAL 5VDC
Low Current Coils Group 2			Drive Transistor	Driver Output PCB	Power Line Color	Power Line Connection	Power Voltage	Drive Transistor Control Line Color	D.T. Control Line Connect	Coil GA-Turn or Bulb Type
#25	FLASH: LEFT DOMES (X2)	Q25	I/O Power Driver	▲	ORG	J6-P10	20VDC	BLK-BRN	J6-P1	#89 BULB 165-5000-89 U/E
#26	FLASH: DISC (LEFT)	Q26			ORG	J6-P10	20VDC	BLK-RED	J6-P2	#89 BULB 165-5000-89 U/E
#27	FLASH: DISC (RIGHT)	Q27			ORG	J6-P10	20VDC	BLK-ORG	J6-P3	#89 BULB 165-5000-89 U/E
#28	FLASH: BACKPANEL (X2)	Q28			ORG	J6-P10	20VDC	BLK-YEL	J6-P4	#89 BULB 165-5000-89 U/E
#29	FLASH: RECOGNIZER	Q29			ORG	J6-P10	20VDC	BLK-GRN	J6-P5	#89 BULB 165-5000-89 U/E
#30	DISC MOTOR RELAY	Q30			BRN	J7-P1	20VDC	BLK-BLU	J6-P6	RELAY 190-5004-00
#31	FLASH: RED DISC (LEFT) (X2)	Q31			ORG	J6-P10	20VDC	BLK-VIO	J6-P7	#161 BULB 165-5032-00
#32	FLASH: RED DISC (RIGHT) (X2)	Q32			ORG	J6-P10	20VDC	BLK-GRY	J6-P8	#161 BULB 165-5032-00

L/E

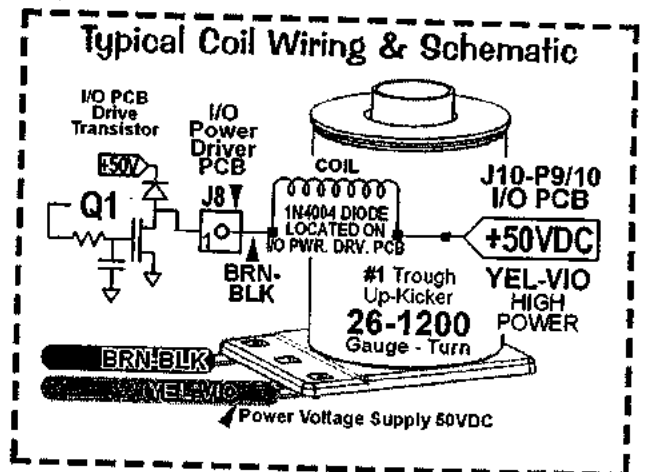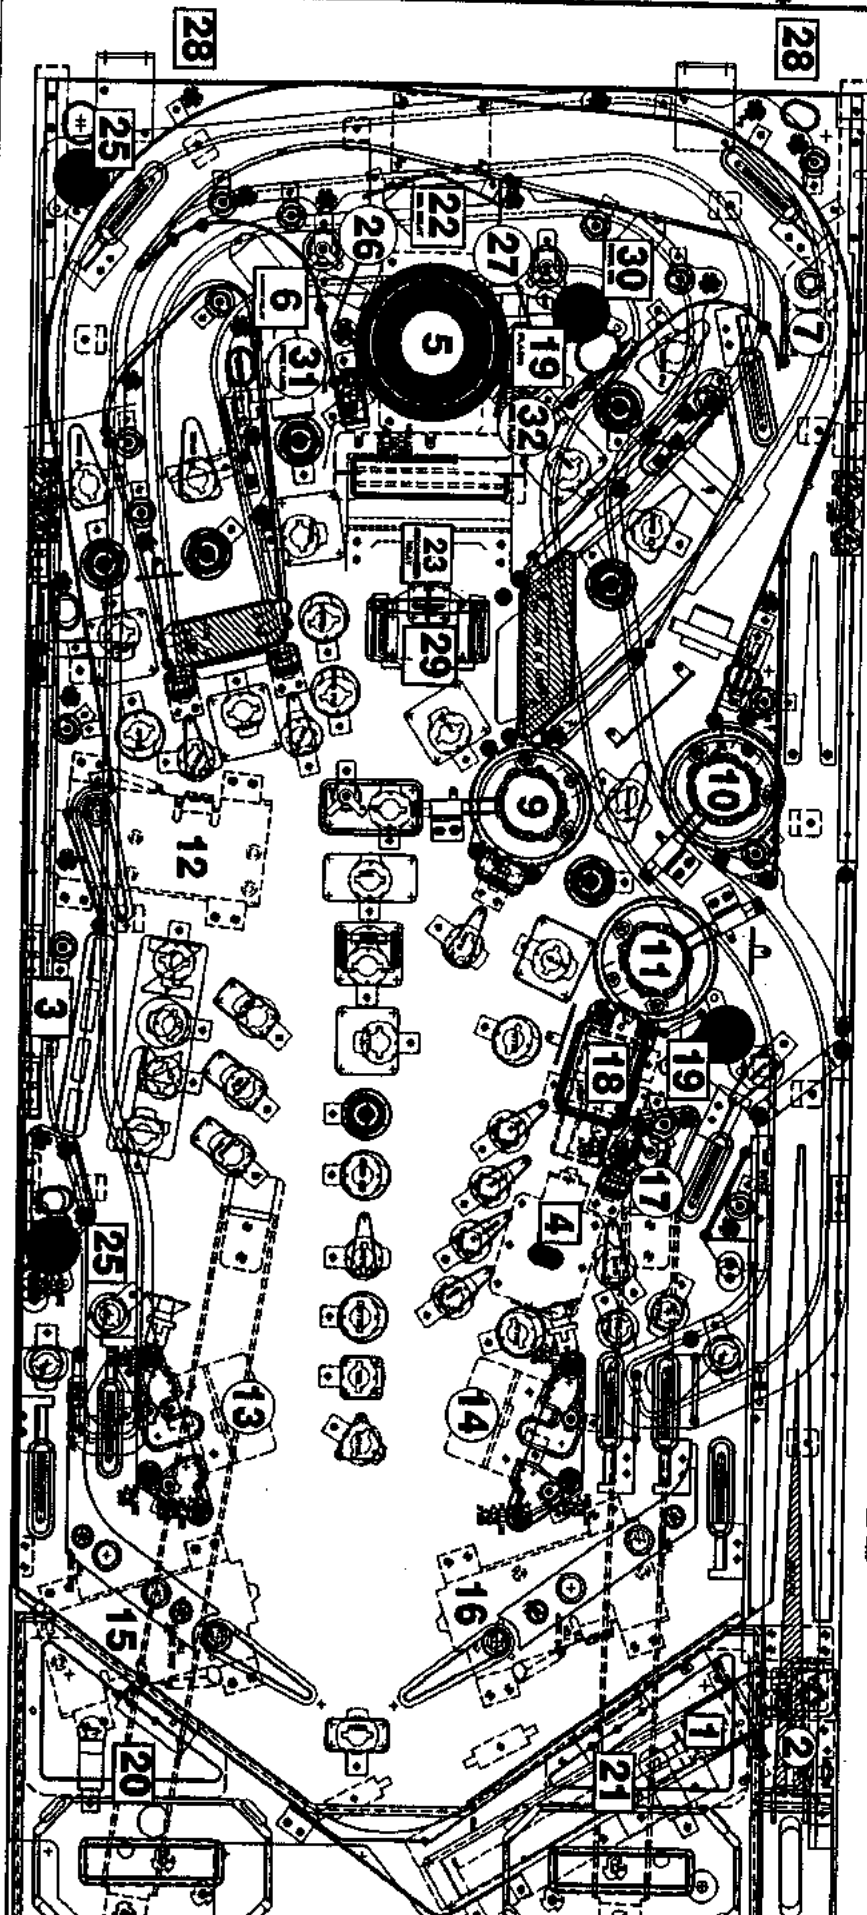

L/E


LAMP MATRIX GRID [#1 - #80] (Lamp Locations : next page)

LED BD. #4 L.P. #1	LED BD. #4 L.P. #2	LED BD. #4 L.P. #3	LED BD. #4 L.P. #4	LED BD. #4 L.P. #5	LED BD. #4 L.P. #6	LED BD. #4 L.P. #7	LED BD. L.P. #8
TRO(N) LED BD. L.P. #9 520-5315-04	TR(O)N LED BD. L.P. #10 520-5315-04	T(R)ON LED BD. L.P. #11 520-5315-04	(T)RON LED BD. L.P. #12 520-5315-04	TRON DOUBLE SCORING LED BD. L.P. #13 520-5315-04	BUMPERS LED BD. L.P. #14 520-5315-04	SPINNERS LED BD. L.P. #15 520-5315-04	LED BD. L.P. #16 520-5315-04
(C)LU LED BD. #3 L.P. #17 520-5307-00	Z(U)SE LED BD. #3 L.P. #18 520-5307-00	(Z)USE LED BD. #3 L.P. #19 520-5307-00	LED BD. #3 L.P. #20 520-5307-00	LED BD. #3 L.P. #21 520-5307-00	LED BD. #3 L.P. #22 520-5307-00	LED BD. #3 L.P. #23 520-5307-00	LED BD. #3 L.P. #24 520-5307-00
CENTER PORTAL LED BD. #3 L.P. #25 520-5315-03	CENTER TRON LED BD. #3 L.P. #26 520-5315-03	CENTER RECOGNIZER LED BD. #3 L.P. #27 520-5315-03	CENTER LIGHT CYCLE LED BD. #3 L.P. #28 520-5315-03	CENTER DISC LED BD. #3 L.P. #29 520-5315-03	CENTER QUORRA LED BD. #3 L.P. #30 520-5315-03	CENTER ZUSE LED BD. #3 L.P. #31 520-5315-03	CENTER CLU LED BD. #3 L.P. #32 520-5315-03
CENTER GEM LED BD. #3 L.P. #33 520-5315-03	SHOOT AGAIN LED BD. #3 L.P. #34 520-5307-00	CENTER FLYNN LED BD. #3 L.P. #35 520-5307-00	EJECT CLU LED BD. #3 L.P. #36 520-5307-00	LED BD. #2 L.P. #37 520-5307-00	LED BD. #2 L.P. #38 520-5307-00	LED BD. #2 L.P. #39 520-5307-00	LED BD. #2 L.P. #40 520-5307-00
R. LOOP ARROW LED BD. #2 L.P. #41 520-5315-02	RIGHT ORBIT (DISC) LED BD. #2 L.P. #42 520-5315-02	RIGHT ORBIT (LIGHT CYCLE) LED BD. #2 L.P. #43 520-5315-02	RIGHT ORBIT (CLU) LED BD. #2 L.P. #44 520-5315-02	EJECT EXTRA BALL LED BD. #2 L.P. #45 520-5315-02	EJECT LIGHT CYCLE LED BD. #2 L.P. #46 520-5315-02	EJECT QUORRA LED BD. #2 L.P. #47 520-5315-02	EJECT PORTAL LED BD. #2 L.P. #48 520-5315-02
L.P. #49	R. RAMP (LIGHT CYCLE) LED BD. L.P. #50 520-5307-00	Z(U)SE LED BD. L.P. #51 520-5307-00	L.P. #52	FLYNN'S ARCADE LED BD. L.P. #53 520-5307-00	LEFT BUMPER LED BD. L.P. #54 112-5024-08	RIGHT BUMPER LED BD. L.P. #55 112-5024-08	BOTTOM BUMPER LED BD. L.P. #56 112-5024-08
LEFT RAMP ARROW LED BD. L.P. #57 520-5307-00	LEFT RAMP (DISC) LED BD. L.P. #58 520-5307-00	RECOGNIZER RIGHT LED BD. L.P. #59 520-5307-00	RECOGNIZER CENTER LED BD. L.P. #60 520-5307-00	RECOGNIZER LEFT LED BD. L.P. #61 520-5307-00	RECOGNIZER 3-BANK LED BD. L.P. #62 520-5307-00	RECOGNIZER (DISC) LED BD. L.P. #63 520-5307-00	R. RAMP ARROW LED BD. L.P. #64 520-5307-00
R. INNER LOOP ARROW LED BD. L.P. #65 520-5307-00	R. INNER LOOP (DISC) LED BD. L.P. #66 520-5307-00	R. INNER LOOP (LIGHT CYCLE) LED BD. L.P. #67 520-5307-00	ADVANCE QUORRA LED BD. L.P. #68 520-5315-01	L. INNER LOOP (CLU) LED BD. L.P. #69 520-5315-01	L. INNER LOOP (LIGHT CYCLE) LED BD. L.P. #70 520-5315-01	L. INNER LOOP (DISC) LED BD. L.P. #71 520-5315-01	L. INNER LOOP ARROW LED BD. L.P. #72 520-5315-01
START BUTTON LED L.P. #73 112-5024-08	TOURN START BUTTON LED L.P. #74 112-5024-08	L.P. #75	L.P. #76	L.P. #77	L.P. #78	L.P. #79	L.P. #80

U/L



LAMP MENU: ONE, ALL, ROW, COLUMN & ORDER

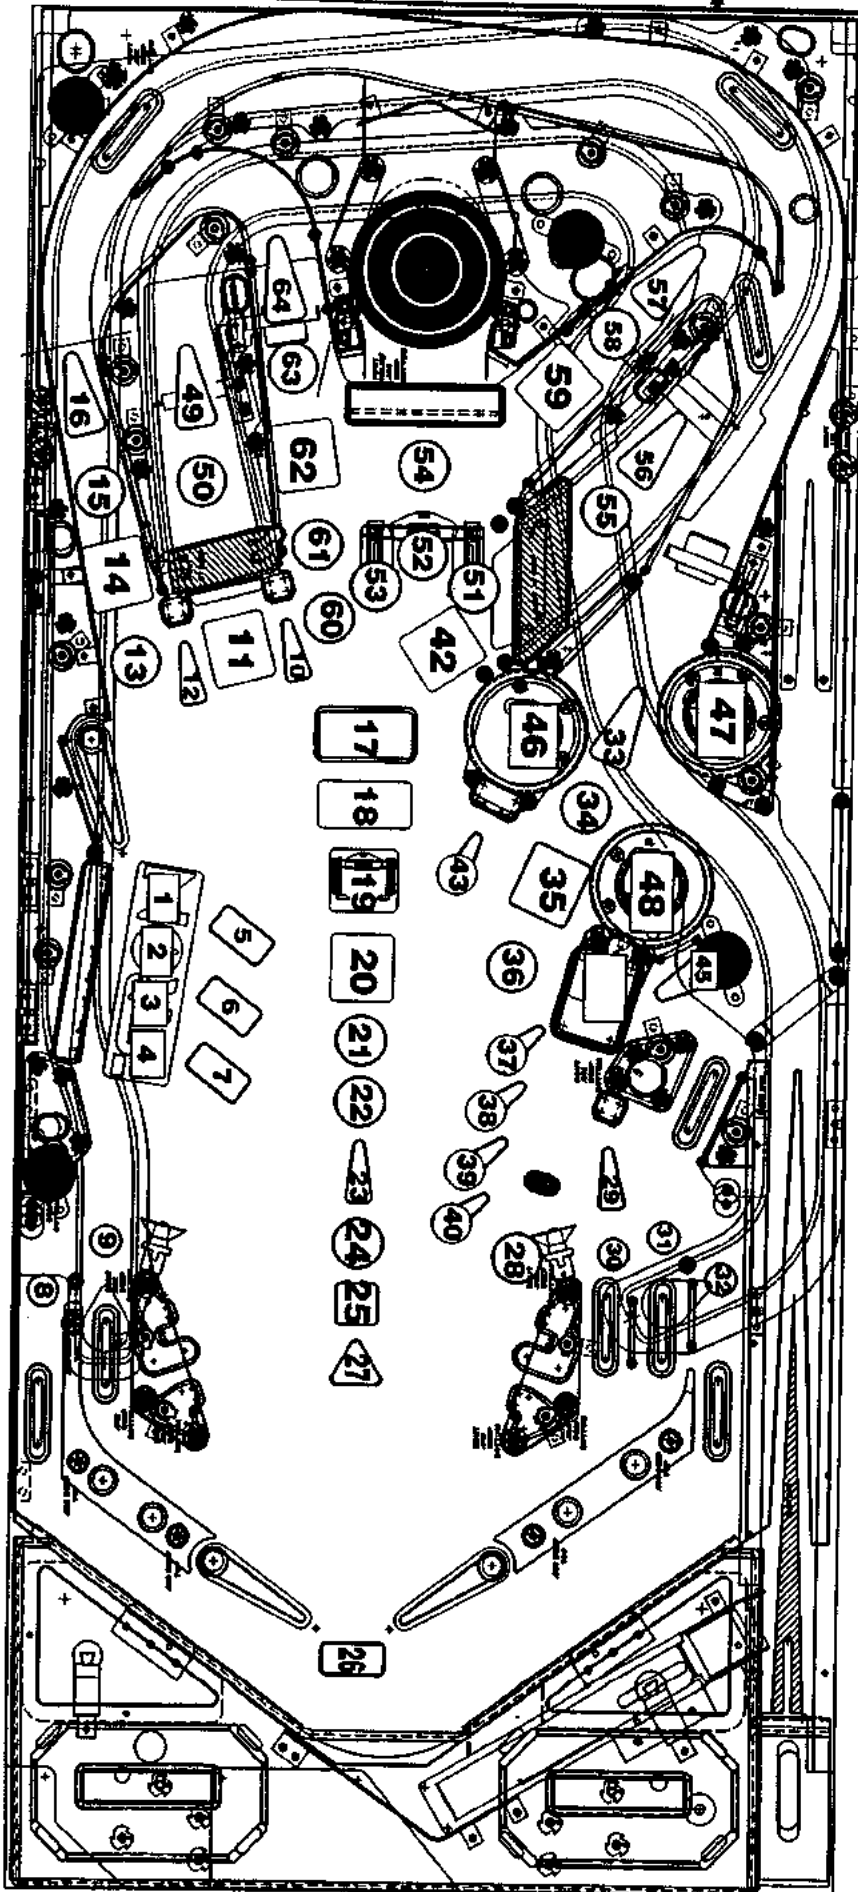

L/E



GO TO AUDITS MENU: EARNINGS AUDITS [#1 – #13] / STANDARD AUDITS [#1 – #59]

Perform the below steps to review the audits. Enter the **SERVICE MENU**, then enter the **EARNINGS AUDITS** or **STANDARD AUDITS MENUS**. For audit definitions or summary, review the Audits Section (**GO TO AUDITS MENU**). Try the "DUMP AUDITS TO USB" Feature to create a text file of your audits. Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See the Utilities Section (**GO TO UTILITIES MENU**).

Step 1 Press [**SELECT**].

Press [**BACK**] to exit for escape at any time.

Step 2 Press [**>**]. Go to the "AUD" icon.

Press [**SELECT**].

Step 3 Press [**>**]. Go to the "EARN" or "S.P.I." icon.

Press [**SELECT**].

Step 4 Press [**<**] [**>**] to move between audits.

Audit Number

Audit Name

Audit Result

EARNINGS AUDIT #1

TOTAL PAID CREDITS

0

EARNINGS AUDITS [#1 – #13] ▼

Nr.	EARNINGS AUDIT NAME	YOUR RESULT
1	TOTAL PAID CREDITS	
2	FREE GAME PERCENTAGE	
3	AVERAGE BALL TIME	
4	AVERAGE GAME TIME	
5	COINS THROUGH LEFT SLOT	
6	COINS THROUGH RIGHT SLOT	
7	COINS THROUGH CENTER SLOT	

Nr.	EARNINGS AUDIT NAME	YOUR RESULT
8	COINS THROUGH FOURTH SLOT	
9	COINS THROUGH FIFTH SLOT	
10	TOTAL COINS	
11	TOTAL EARNINGS	
12	METER CLICKS	
13	SOFTWARE METER	

STANDARD AUDITS [#1 – #59] ▼

Nr.	STANDARD AUDIT NAME	YOUR RESULT
1	TOTAL BALLS PLAYED	
2	TOTAL EXTRA BALLS	
3	EXTRA BALL PERCENTAGE	
4	REPLAY 1 AWARDS	
5	REPLAY 2 AWARDS	
6	REPLAY 3 AWARDS	
7	REPLAY 4 AWARDS	
8	TOTAL REPLAYS	
9	REPLAY PERCENTAGE	
10	TOTAL SPECIALS	
11	SPECIAL PERCENTAGE	
12	TOTAL MATCHES	
13	HIGH SCORE AWARDS	
14	HIGH SCORE PERCENT	
15	TOTAL FREE PLAYS	
16	TOTAL PLAYS	
17	0.0M – 1.99M SCORES	
18	2.0M – 3.99M SCORES	
19	4.0M – 5.99M SCORES	
20	6.0M – 7.99M SCORES	

Nr.	STANDARD AUDIT NAME	YOUR RESULT
21	8.0M – 9.99M SCORES	
22	10.0M – 12.49M SCORES	
23	12.5M – 14.99M SCORES	
24	15.0M – 17.49M SCORES	
25	17.5M – 19.99M SCORES	
26	20.0M – 24.99M SCORES	
27	25.0M – 29.99M SCORES	
28	30.0M – 39.99M SCORES	
29	40.0M – 49.99M SCORES	
30	50.0M – 74.99M SCORES	
31	75.0M – 99.99M SCORES	
32	100.0M – 149.99M SCORES	
33	150.0M+ SCORES	
34	AVERAGE SCORES	
35	SERVICE CREDITS	
36	BALL SEARCH STARTED	
37	LOST BALL FEEDS	
38	LOST BALL GAME STARTS	
39	LEFT DRAINS	
40	CENTER DRAINS	

Nr.	STANDARD AUDIT NAME	YOUR RESULT
41	RIGHT DRAINS	
42	TILTS	
43	TOTAL BALLS SAVED	
44	LEFT FLIPPER USED	
45	RIGHT FLIPPER USED	
46	0 – 1 MINUTE GAMES	
47	1 – 1.5 MINUTE GAMES	
48	1.5 – 2 MINUTE GAMES	
49	2 – 2.5 MINUTE GAMES	
50	2.5 – 3 MINUTE GAMES	
51	3 – 3.5 MINUTE GAMES	
52	3.5 – 4 MINUTE GAMES	
53	4 – 5 MINUTE GAMES	
54	5 – 6 MINUTE GAMES	
55	6 – 8 MINUTE GAMES	
56	8 – 10 MINUTE GAMES	
57	10 – 15 MINUTE GAMES	
58	15+ MINUTE GAMES	
59	RECENT REPLAY PERCENT	

Note: Audits are subject to change (with or without notice).

POWER REQUIREMENTS



This game **must be connected to a properly grounded outlet to reduce shock hazard and insure proper game operation.** See the Yellow Pages (Schematics & Wiring), for transformer connections required for **Normal, High, and Low Line** conditions.



Normal Line: 110v AC - 125v AC @ 60Hz		
Domestic use an 8AMP 250v Slo-Blo Fuse.	AVG OPERATION	MAX OPERATION
	CURRENT: 2.8AMP WATTAGE: 329w	CURRENT: 8AMP WATTAGE: 940w
High Line: 218v AC - 240v AC @ 50Hz		
Export use 2x 5AMP 250v Slo-Blo Fuses. (*England & Hong Kong use an 8AMP 250v S/B Fuse.)	AVG OPERATION	MAX OPERATION
	CURRENT: 1.8AMP WATTAGE: 412w	CURRENT: 5AMP 8AMP* WATTAGE: 1145w 1832w*
Low Line: 95v AC - 108v AC @ 50Hz / 60Hz		
Export Japan Only use an 8AMP 250v Slo-Blo Fuse.	AVG OPERATION	MAX OPERATION
	CURRENT: 2.6AMP WATTAGE: 264w	CURRENT: 8AMP WATTAGE: 812w


GAME DIMENSIONS

TRANSPORTATION

The overall **Front / Back Height** dimensions include the added 1" with the **Leg Levelers** turned all the way in.

*** PLEASE NOTE:**
The **TOURNAMENT PLAY** Sign or **betaBRITE Color Dot Display** will add up to $4\frac{3}{8}"$ to the overall **Back Height** for a total of $79\frac{1}{8}"$.

Ceiling Height Requirement:
An additional $1\frac{1}{2}"$ is required for the rotation (↗) of the **Backbox** to the upright position.
The complete **Back Height** required with **Sign** or **Dot Display** and rotation: **81"**

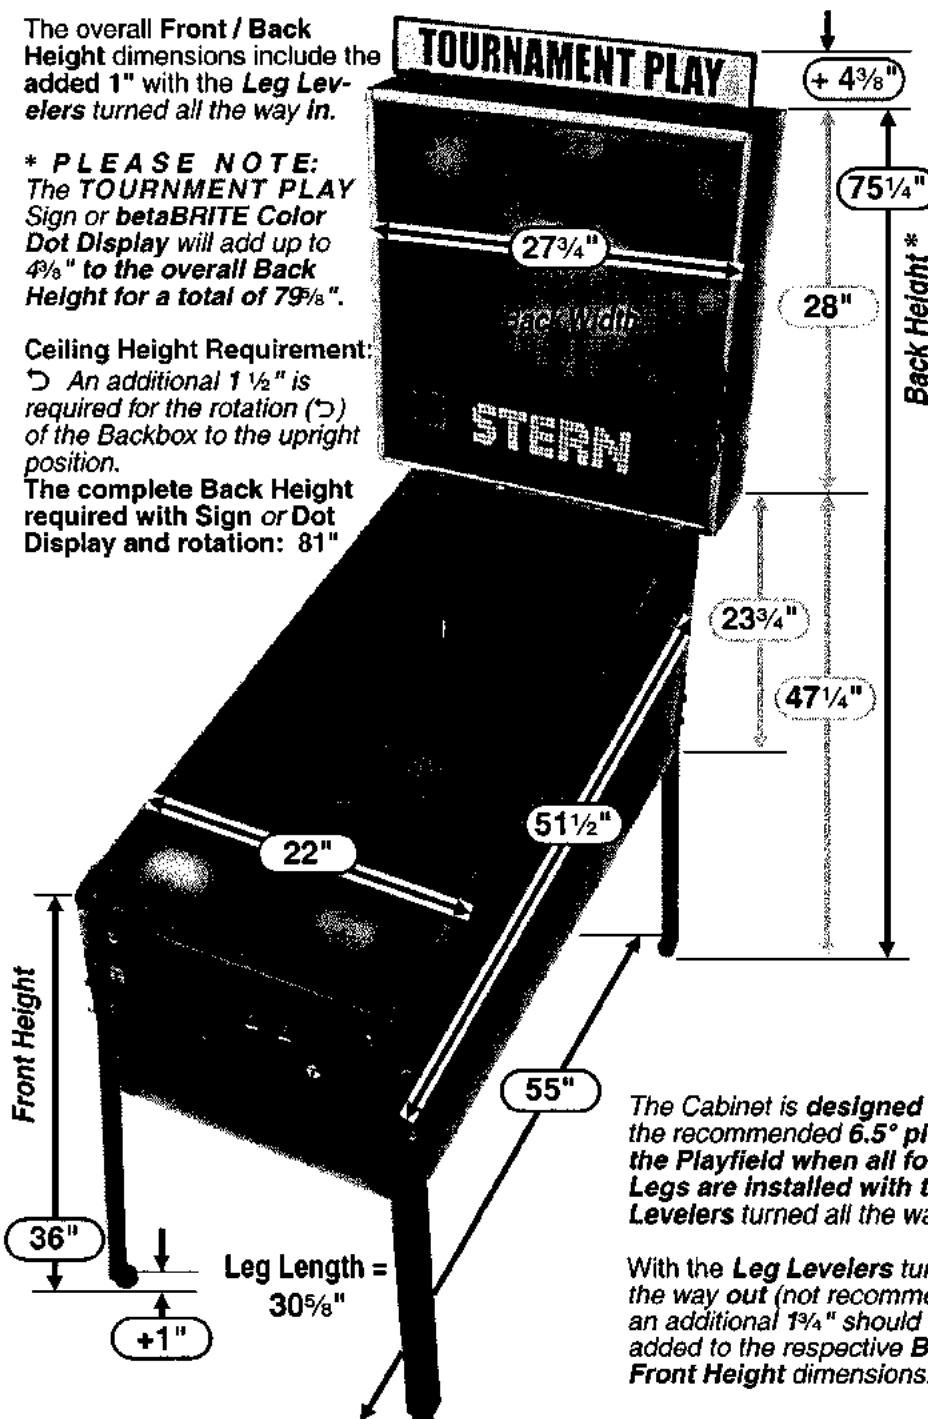


BEFORE TRANSPORTING



To reduce the possibility of damage, observe **ALL** precautions whenever transporting the game.


Read & follow the next page on How to Secure the Backbox for Transporting.
Remove the legs and secure the game within the transporting vehicle.

SAVE AND RETAIN ALL PRINTED INFORMATION INSIDE THE CABINET !

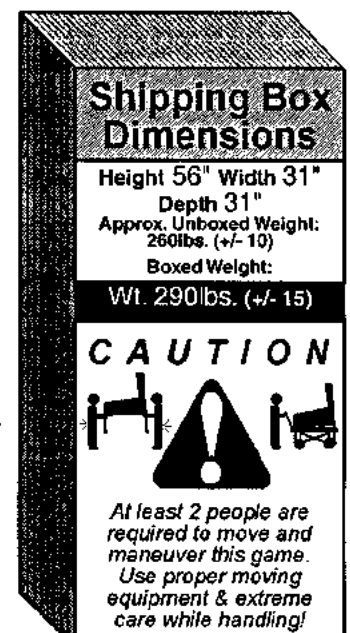


How to Secure the Backbox for Transporting

For more Backbox details & part numbers, see the Pink Pages (*Parts Identification & Location, Backbox ...*).

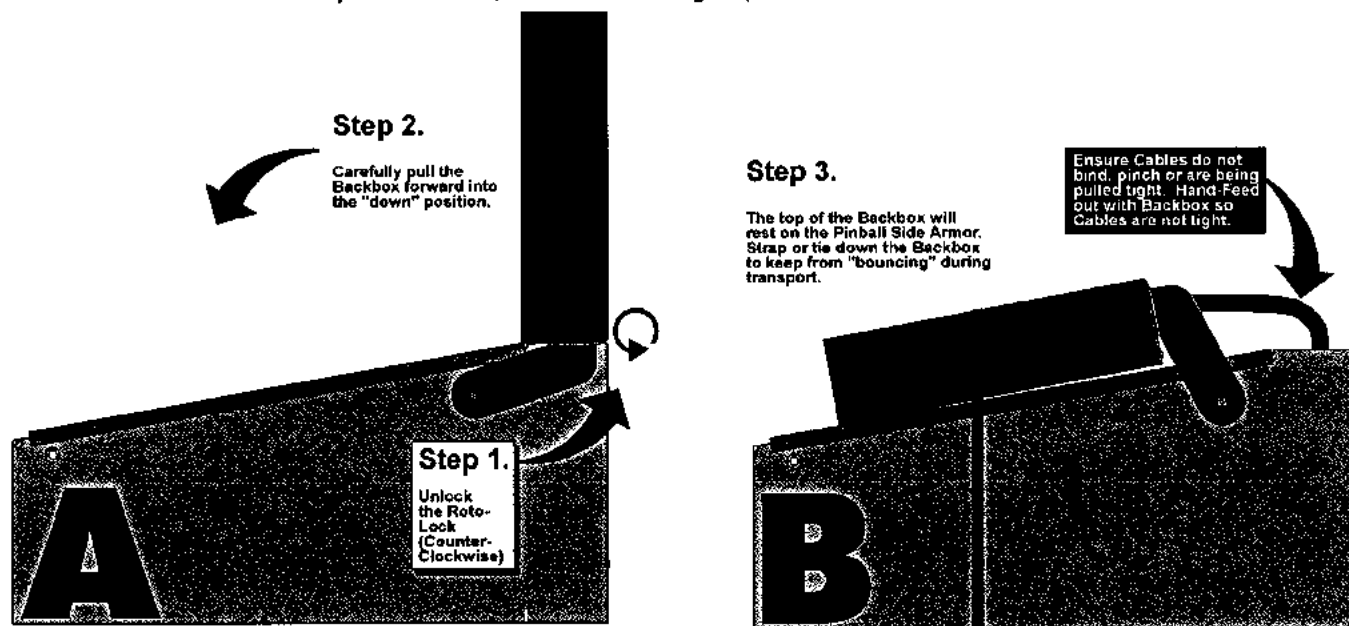

Leg Leveler Adjustment

Attach the four (4) Leg Assemblies to cabinet corners with the eight (8) leg bolts provided.

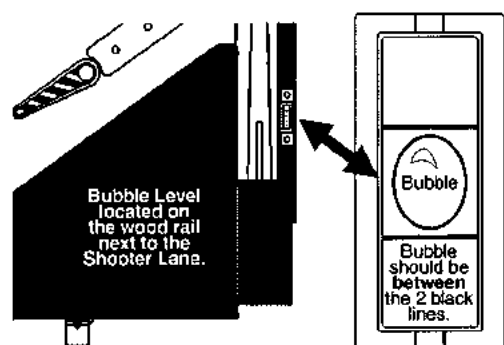


Start adjustment with the leg levelers turned all the way in.

View the bubble in the level provided on the right side wood rail.

Adjust the front or rear levelers as necessary to cause the bubble to float between the two (2) black lines.

Use a pinball to roll down the center of the playfield for side-to-side leveling.

YOUR PLAYFIELD PITCH IS NOW AT 6.5° AS REQUIRED FOR PROPER GAME PLAY!

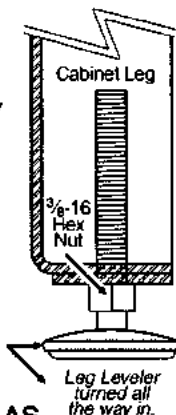


Note: For custom adjustment greater than >6.5° can be achieved by turning out the rear leg leveler(s), however, it is not recommended.

Easy Access Service System - 2 Positions

With the front molding & glass removed, carefully lift the playfield (take care when using the Bottom Arch to hoist).


Position 1

When lifted high enough, the **Playfield Support Slide Brackets** (Fig. 1A) can be seen and can clear the cabinet front (Fig. 1B). At this time, pull the playfield toward the front of the cabinet, checking that the mechanical components clear the cabinet front, then rest the playfield on the **Playfield Support Slide Brackets** at the front channel of cabinet (Fig. 1C);

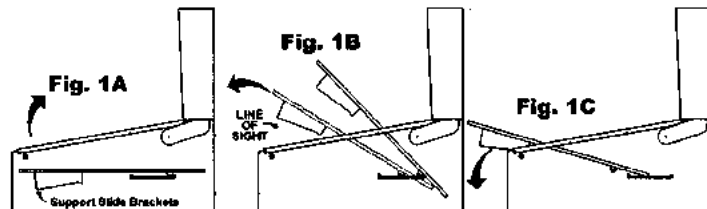

Position 2

With the playfield at rest, hold the sides & pull toward the front of the cabinet (approx. 6" to 8"), until resistance is felt from **Edge Slide Brackets** stopping against the **Slide & Pivot Support Brackets** located on either side of the cabinet (Fig. 2A). At this time, swivel the playfield toward the Backbox, then rest on the top edge (Fig. 2B & 2C).

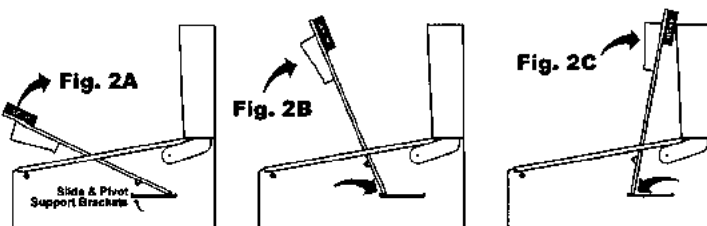

Service Menu Introduction


Important: The **Switch Bracket** holds the **Playfield Power Interlock**. It is located just inside the **Coin Door** frame (see pictorial of the **Coin Door** on the previous page). The **Button Switch** for the **Playfield Power Interlock Switch** must be pulled out for electro-mechanical device testing or diagnostic purposes (this is required). If this button is pushed in, the **Playfield Power** is disabled while the **Coin Door** is **OPEN**.

To get into the **SERVICE MENU MODE** review "Function 3: SERVICE MENU" on the next page. After Power-Up, push down the **Black [SELECT] Button** to begin. Looking at the display you will momentarily see "SERVICE MENU" followed by the **MAIN MENU**:



Use the **Red [</-] / [+/>] Buttons** to move the selected **Icon** left or right, and the **Black [SELECT] Button** to activate the selected **Icon**.

The **MAIN MENU** now appears with the "DIAG" **Icon** (**GO TO DIAGNOSTICS MENU**) highlighted:

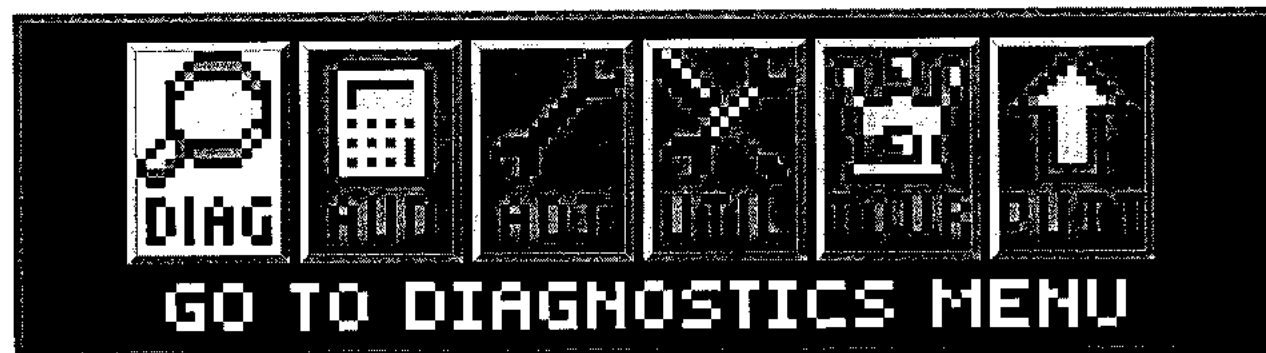

As the operator views the Menu Screen(s), the **MORE MORE** symbols indicates that there are more **Icons** to select in each direction. The **Icon** selected will blink. Pushing the **Black [SELECT] Button** will select the **Icon** and the Menu Screen will change to the menu selected. Select the **Green [BACK] Button** to move backwards through the menu levels. Press the **Green [BACK] Button** repeatedly or select the "QUIT" **Icon** to completely exit the **SERVICE MENU Mode**.

View the **SERVICE MENU Icon Tree** on the next pages for a complete overview of all menus used in this system. The "HELP" **Icon** provides an explanation of **ICON** usage or any other information in the Menu where the "HELP" **Icon** was selected (when available).

DIAG: GO TO DIAGNOSTICS MENU
AUD: GO TO AUDITS MENU
ADJ: GO TO ADJUSTMENTS MENU
UTIL: GO TO UTILITIES MENU
 (INSTALLS, CUSTOM MSG., CUSTOM PRICING, SET TIME, RESET & USB)
TOUR: GO TO TOURNAMENT MENU (START TOURNAMENT, VIEW TOURNAMENT DATA, SIGN MESSAGES)


>> TO UPDATE THE GAME CODE, REVIEW THE STEPS ON THE INSIDE FRONT COVER OF THIS MANUAL.

Use both the manual and the display to help customize, troubleshoot and/or diagnose faults, if any.




Service Switch X4 Set Access & Use

The 4-Button Service Switch Set provides access for **three (3) functions** available for your use: 1: **SERVICE CREDIT**, 2: **VOLUME [-] / [+]** and 3: **SERVICE MENU**.

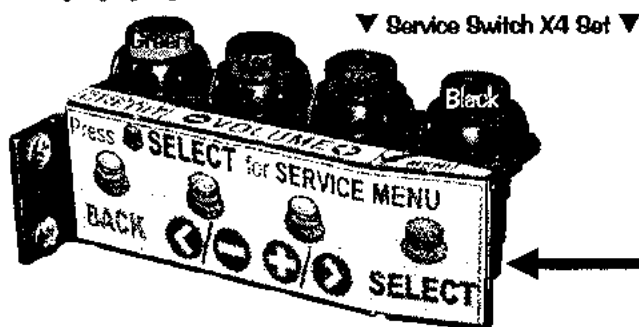


Inside Coin Door

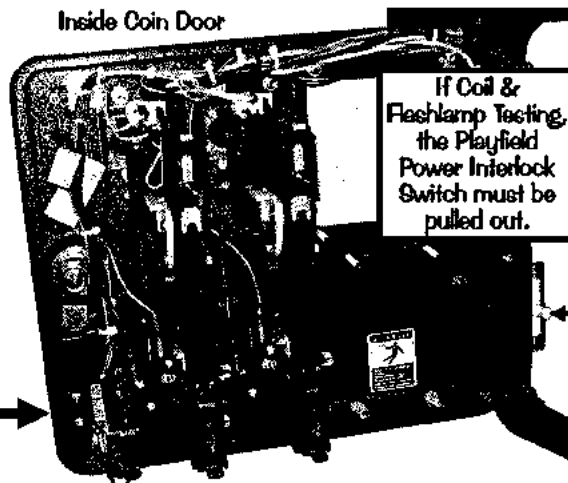

If Coil & Flashlamp Testing, the Playfield Power Interlock Switch must be pulled out.

To access any of these **three (3) functions** you must first open the **Coin Door** (see pictorial above) with the Game in the **Attract Mode** (not already in any Function or Menu stated below) and then follow below.

Pushing the **GREEN** BUTTON first.

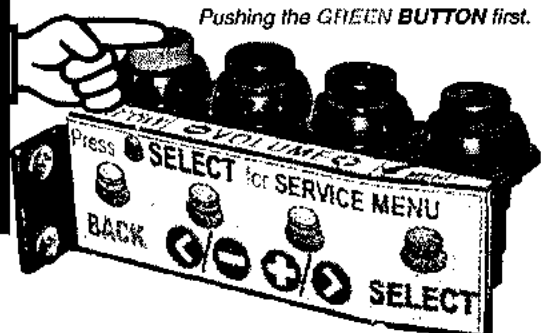


◀ Function 1: SERVICE CREDITS MENU

Pushing the **Green [SERVICE CREDIT] Button** first, adds a **Service Credit** per push (will not affect your audits as "paid" credits). This is useful for the technician to test games in regular play without affecting the game audits. Each depression adds 1 credit; up to 50 credits can be applied. **Standard Adjustment 23, Credit Limit**, determines this, however, it can be changed from 04-50; for details see the **Adjustments Section**.


Note: Once your credits are added, this menu will **automatically exit** a few seconds after the last button depression or when the **Green [BACK]** or **Black [SELECT] Button** is pushed. This function is disabled if **Standard Adjustment 23, Credit Limit**, determines this, however, it can be changed from 04-50; for details see the **Adjustments Section**.

38, **Free Play**, is set to **YES**. The **Service Credits** are limited to the **Credit Limit** in addition to any paid credits present in the game (e.g. if the **Credit Limit** is 30, with 8 paid credits present, only 22 Credits can be applied.).

Pushing either **RED** BUTTON first.

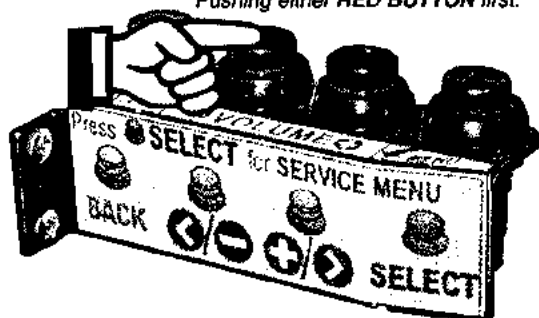

Pushing either **RED** BUTTON first.

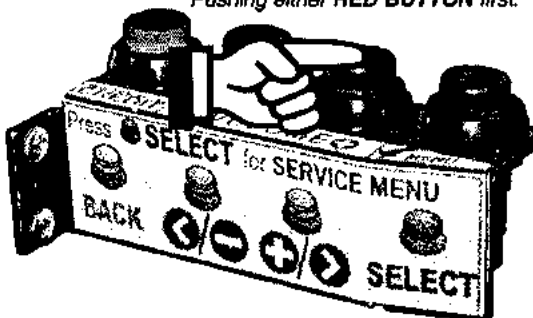

▲ Function 2: VOLUME MENU ▲

Pushing either of the **Red [VOLUME] Buttons** first, enters the **VOLUME MENU**. While in this Mode, to **DECREASE** the volume, hold down or depress the **1st Red [< / -] Button** until desired the volume is achieved; to **INCREASE** the volume, hold down or depress the **2nd Red [+ / >] Button** until the desired volume is achieved.

Note: The volume can be set between 0-63; Once your adjustments are made, this menu will **automatically exit** a few seconds after the last button depression or when the **Green [BACK]** or **Black [SELECT] Button** is pushed.

Pushing the **BLACK** BUTTON first.




◀ Function 3: SERVICE MENU

Pushing the **Black [SELECT] Button** first, enters the **SERVICE MENU**. Once in, navigate through all menus by depressing the **Service Menu Buttons**. Use the **Red [< / -]** or **[+ / >] Buttons** to move **LEFT / RIGHT, NEXT/PREVIOUS (audits/adjustments)** or to **INCREASE / DECREASE** an adjustment (setting). Use the **Black [SELECT] Button** to select a highlighted **Icon**, move to the next line of text or to answer "OK" where applicable. Use the **Green [BACK] Button** to exit or escape back.



Exit Service Menu

In the **MAIN MENU** and in all **SUB-MENUS** (where the "QUIT" Icon is present), if the "QUIT" Icon is selected and activated, or the Green [BACK] Button is selected repeatedly (depending on which sub-menu you're in...), the **SERVICE MENU** Session will be exited and returned to the **Attract Mode**.

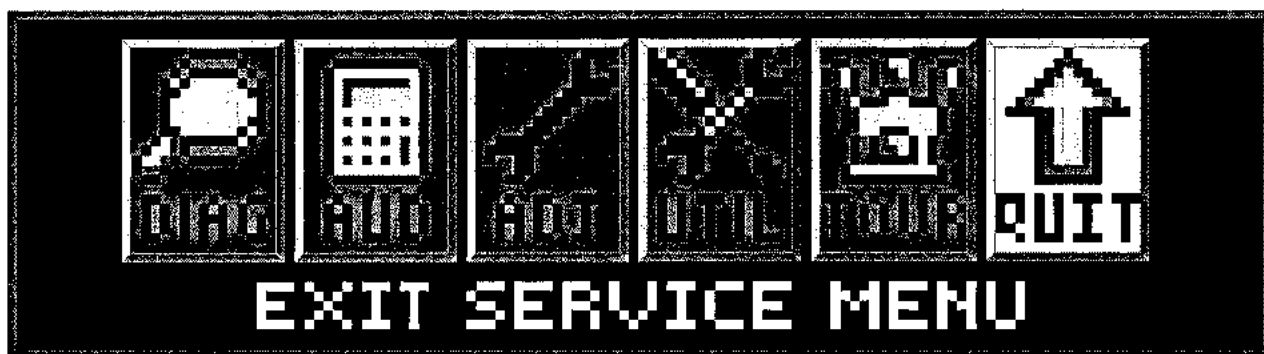

Turning the game on/off will start the *Power-Up Routine*. Upon **Power-Up**, the **DISPLAY** will indicate the **COUNTRY**, **FILE VERSION** and **LANGUAGE(S)** installed. **LANGUAGE/COUNTRY**: change via Dip Switch.




The below **Problem / Solution Table** was designed to answer some common problems frequently asked.

Problem / Solution Table


PROBLEM	SOLUTION
Will not enter the SERVICE MENU after depressing the Black [SELECT] Button .	<ul style="list-style-type: none"> Check the Service Switches [GREEN, RED (x2) & BLACK Buttons] for loose connections or bad ground. Check the associated wiring harness to/from the CPU/Sound Board, Connector J13. Check CPU/Sound Board for possible failure.
All Service Buttons [•••• Buttons] appear nonfunctional.	<ul style="list-style-type: none"> Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Green Button in the Attract Mode will not enter the SERVICE CREDITS MENU to add Service Credits.	<ul style="list-style-type: none"> Check to make sure the Game is not in "Free Play." <i>If the game is set to Free Play, adding Service Credits is not required.</i> Check the Service Switches wiring harness for poor or no connection and/or broken wires.
The Display "blanks out."	<ul style="list-style-type: none"> Check the Dot Matrix Display for loose wiring harness for poor or no connection and/or broken wires. Check F1 (3/4A Fuse) on the Display Power Supply Board. <i>Refer to the Yellow Pages (SCHEMATICS & TROUBLESHOOTING).</i>
Icons "scroll" along continuously in the MAIN MENU .	<ul style="list-style-type: none"> Check for a stuck switch on either of the Red Buttons.
The Start and Flipper Buttons do not select or activate icons in the SWITCH TEST MENU .	<ul style="list-style-type: none"> This is normal. These switches are deactivated, as they are a part of the Switch Test. <i>Refer to the Diagnostics Section (GO TO DIAGNOSTICS MENU, Switch Test).</i>
Can't move selection of icon with the Left and/or Right Flipper Buttons .	<ul style="list-style-type: none"> Check the Flipper Buttons for loose connections or bad Ground and refer to Section 5, Chapter 2, Playfield Wiring, #-Flipper Circuit Wiring Diagram. This is normal <i>only in Diagnostic's Switch & Active Switch Tests (see previous Problem).</i>
Some icons appear non-functional in the MENU or missing.	<ul style="list-style-type: none"> Some functionality of the Service Menu may not have been completed during development. If exists, it should only be a non-critical function, such as the "HELP" icon, which will explain the usage of icons. When completed, a software update will correct the problem. Software updates are announced via Service Bulletins (if critical) and on our website http://www.sternpinball.com/GAME-code.shtml; view the Game Code Library Message Board Marquee or click Previous Messages for past announcements.
In COIL TEST MENU , the coils and flashlamps <i>do not</i> fire after pressing the Black [SELECT] Button .	<ul style="list-style-type: none"> Ensure the POWER INTERLOCK SWITCH <i>is pulled out</i> (see the start of this Chapter).
In the SERVICE MENU , the volume cannot be adjusted with either of the Red Buttons .	<ul style="list-style-type: none"> The Volume adjustment can only be made when in the Attract Mode (see the start of this Chapter).
In the SERVICE MENU , the display seems to lock up, or the Help Display appears to be non-functional.	<ul style="list-style-type: none"> If you cannot clear the situation by exiting back one Menu, exit completely out of the SERVICE MENU, and re-enter. If the problem persists, call Technical Support for additional help.

IF YOU NOTE ANY OTHER PROBLEMS or HAVE ANY SYMPTOMS NOT DESCRIBED ABOVE, PLEASE CALL TECHNICAL SUPPORT 800-542-5377 (708-345-7700 OPTION #1), SO WE MAY ASSIST YOU.

Pinball Service Menu Icon Tree

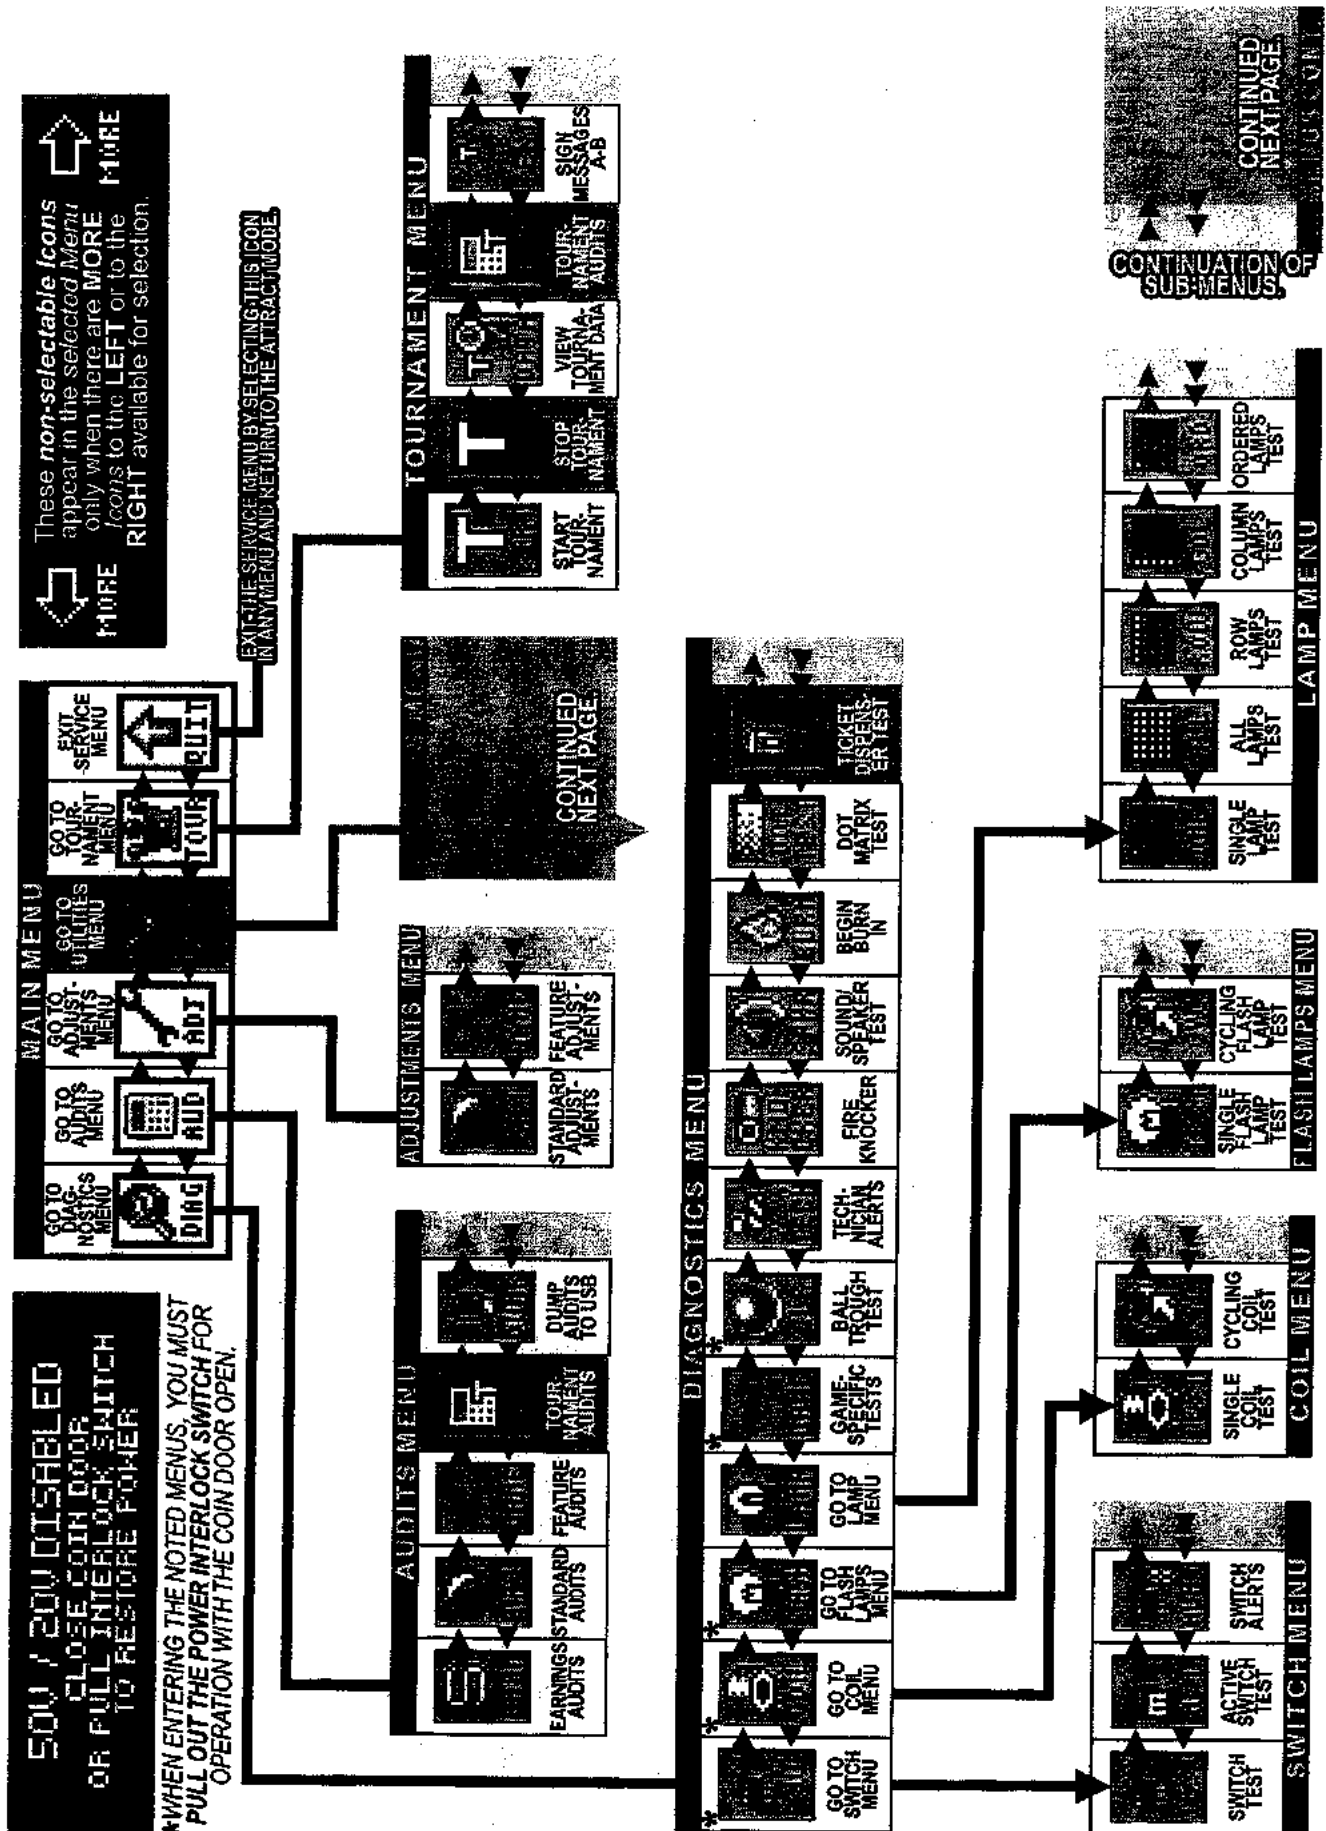

Pinball Service Menu Icon Tree Continued

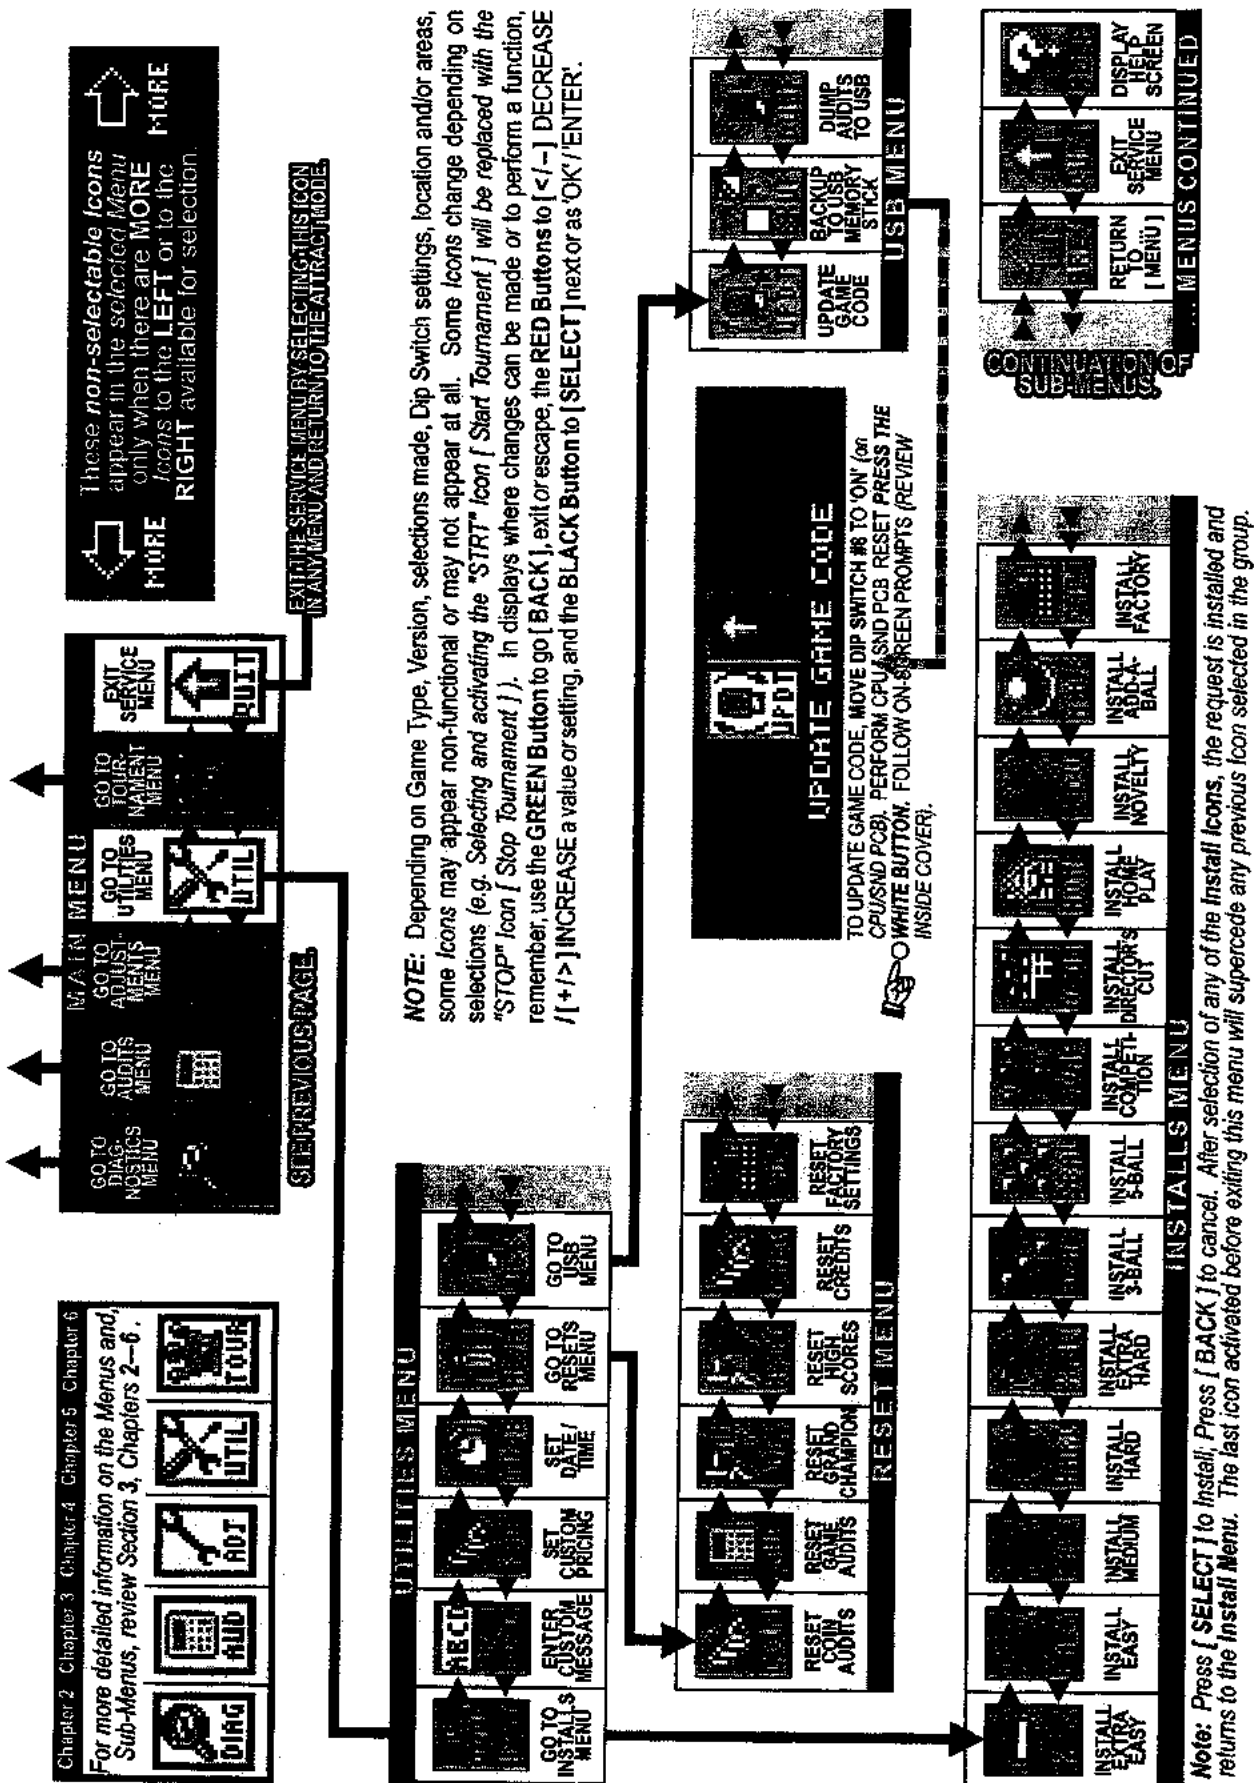

This page is intentionally blank.



To initiate, from the **MAIN MENU**, select the "DIAG" *Icon*. The **DIAGNOSTICS MENU** provides tests for switches, coils, flash lamps, lamps, sounds and dots in the Dot Matrix Display. Each feature may be tested manually or automatically after entering the **SERVICE MENU** (see *Service Menu Introduction Section*).

The [**CYCLING COIL TEST**] / [**FLASH LAMP TEST**] may be used for a quick verification of automatic test functions. The [**SWITCH TEST**] / [**SINGLE COIL TEST**] / [**SINGLE LAMP TEST**] / [**ALL LAMPS TEST**] / [**ROW LAMPS TEST**] / [**COLUMN LAMPS TEST**] / [**FLASH LAMP TEST**] may be used for troubleshooting.

All **DIAGNOSTICS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some *Icons* may appear non-functional or may not appear at all. Some *Icons* change depending on selections (e.g. Selecting and activating the "STRT" *Icon* [Start Tournament] will be replaced with the "STOP" *Icon* [Stop Tournament]). *Icons* and/or *functions*, *order* and *operation* are **subject to change**.

In displays where changes can be made or to perform a function, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [< / -] **MOVE BACK / LEFT / DECREASE** / [+ / >] **MOVE FORWARD / RIGHT / INCREASE** a value or setting, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER / ENERGIZE."

Important: Upon **Power-Up** (Game CPU Reset) or opening the **Coin Door** watch the **Display** for any **Alerts**.*

50V / 20V DISABLED
CLOSE COIN DOOR
OR PULL INTERLOCK SWITCH
TO RESTORE POWER

This **audible / visual alert display** is shown when the 50V / 20V Power is disabled (by opening the Coin Door). **PULL OUT THE INTERLOCK SWITCH ONLY WHILE IN THE SERVICE MENU FOR COIL OR SWITCH TESTING & BURN-IN WHEN THE COIN DOOR IS REQUIRED TO STAY OPEN FOR SERVICE BUTTON USE!** Pulling out the Power Interlock Switch or

pressing the 'escape' Green [**BACK**] Button will remove the alert display. Initial display presentation is accompanied by 3 audible tones (the bright display warning will go dim after approximately 30 seconds).

OPERATOR ALERT!
AUTO PLUNGER
DEVICE MALFUNCTION

This **alert display** is shown momentarily during **Game Mode** or **Power-Up** to alert the operator of a device malfunction (device or mechanism doesn't energize or is energized repeatedly).

OPERATOR ALERT! works by monitoring any switch activated device that has the potential to trap a ball when disabled (e.g. in the Shooter Lane, Scoop or Eject Holes, etc.). This alert can

also appear if a switch associated with a device (e.g. Ball Trough, Auto Plunger, etc.) is stuck closed (caused by a switch jam or stuck ball); the game will activate the device a predetermined number of times and if the problem is still detected, this device or switch will be noted in **Switch Alerts** (next page) and/or **Technician Alerts**.

VO.00 GAME NAME
SYS. 0.00 HDW. 0
SERVICE MENU *
USE -/+ TO VIEW TECH. ALERTS

Upon entering the **SERVICE MENU**, if an asterisk " *" is displayed after the words "SERVICE MENU," the game has detected possible faulty devices, switches and/or missing pinballs. Press the either of the **Red Buttons** (short-cut to the **TECHNICIAN ALERTS MENU**) or continue into the **SERVICE MENU** (press the **Black Button** again), select the "DIAG" *Icon*

and "TECH" *Icon* for the **Technician Alerts** information.



CAUTION! Remove all pinballs from the Ball Trough prior to lifting the playfield to it's full upright position for servicing. **PULL OUT** the **Power Interlock Switch** for operation. To eject pinballs, select the "DIAG" *Icon* from the **MAIN MENU** to enter the **DIAGNOSTICS MENU**. Select the "CLR" *Icon* to enter the **BALL TROUGH TEST MENU**. Press the **Black [SELECT] Button**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. This feature also useful to retrieve a pinball for game testing in **Switch** or **Coil Tests**.



Go To Switch Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "SW" Icon. Switches are configured in an 4 X 16 Matrix of Rows [Switch Drives] and Columns [Sw. Returns] with up to 64 possible switches. Dedicated Switches are configured in a 2 X 16 Matrix of Rows [Dedicated Sw. Drives / Ground] and Column [Ded. Switch Returns] with up to 32 possible dedicated switches (includes the 8 dip switch positions). The **SWITCH TEST MENU** consists of three (3) parts: **Switch & Active Switch Tests** and **Switch Alerts** to test *all* switches.

Reminder: The **Flipper & Start Buttons** (part of Switch Tests) are temporarily disabled as **Service Menu Navigation Buttons** during these test(s) so they can be tested and shown on-screen. Pressing the **Green [BACK] Button** (Dedicated Switch D-21), **Light Green-Black / Black (GND)**, will exit **Switch Test** or **Active Switch Test**.



Switch Test

To initiate, from the **SWITCH MENU**, select the "TEST" Icon. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open and the activation of coils is required. Upon entering **Switch Test**, you will notice that some switches are already indicated as closed. In the examples, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough), along with the Flipper E.O.S. Dedicated Switches D-10 & D-12 (End-of-Stroke Switches are 'normally closed'). If the game has more flippers with E.O.S. Dedicated Switches, CPU Dip Switch Setting *other than 1-8 OFF* or switches stuck closed, more dots will be indicated (enter **Active Switch Test** to reveal the names).

In **Switch Test**, close each switch and observe the display (switch closure is accompanied by a short audible tone). In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed. The Dot Matrix Display will light up (highlight) the corresponding dot in the on-screen matrix, display the switch name, switch number and the Switch Drive / Return wire colors. When not closing a switch, the display indicates **NONE** and the last switch number closure. For the Switch Matrix Grid and Dedicated Switch Grid, see **Find-It-In-Front: Dr. Pinball, DR. 4** or escape out of this test and enter **Active Switch Test** (described below) to view the names of the switches closed. **Note:** Pressing the **Green [BACK] Button** (Ded. Switch D-21), **Lt. Green-Black / Black (GND)**, will exit the **Switch Test**.

CAUTION! COIL MECHANISMS WHEN ACTIVATED HAVE FAST MOVING PARTS! While performing **Switch Test** with the Coin Door closed or open (with the **Power Interlock Switch** is pulled out), **DO NOT USE YOUR FINGER** to test switches which are associated with a coil mechanism such as a Vertical Up-Kicker (hole with a switch), Slingshots, Bumpers, etc..



Active Switch Test

To initiate, from the **SWITCH MENU**, select the "ACT" Icon. In **Active Switch Test**, if any switches are stuck closed (or normally closed from the presence of pinball(s) as in the Ball Trough), the display will flash the corresponding dot(s) in the on-screen matrix, display the name and the Switch Drive / Return wire colors. If more than one switch is closed, the switch information will change with each switch. This cycle continues until all switches are cleared or until **Active Switch Test** is exited. In the example, the **Black [SELECT] Button** Dedicated Switch D-24 is pressed and held down. The display will cycle and flash each dot, naming each switch which is closed. To determine the switch number, compare the highlighted dot to the same position in the Switch Matrix Grid at the beginning of this manual.



Switch Alerts

To initiate, from the **SWITCH MENU**, select the "ALRT" Icon. In **Switch Alerts Menu**, possible inoperable switches are marked with an "X" (OUT OF SERVICE). Mark switches **IN** or **OUT OF SERVICE** by pressing the **Black Button** while the intended switch is highlighted and change with either of the **Red Buttons**. Switches which are determined as "OUT OF SERVICE" by the game or manually, will be automatically marked as "IN SERVICE" as soon as the game determines a valid switch closure (after adjusting, fixing or replacing the switch, then testing/actuating the switch). **Note:** A **Factory Reset** will also put the switch back "IN SERVICE" in which the game will need to redetermine if the switch should be marked **OUT OF SERVICE**.

Upon entering Switch Test, you will notice that some switches are already indicated as 'closed'.




D-24 position is highlighted and accompanied by a short audible tone when pressed.




After pressing the switch (to make it close), the display will indicate the last switch number.



Typical Switch Wiring & Schematic

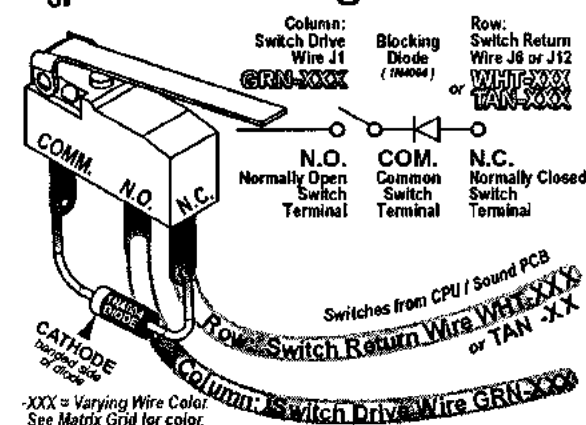

Dedicated Switch Schematic

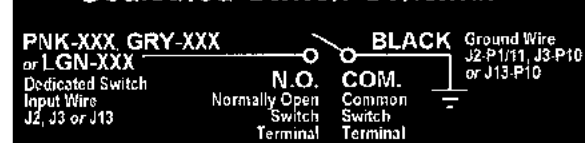

D-24 is held down. The display will cycle and flash each dot, naming each switch ... closed.





Go To Coil Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "COIL" *Icon*. Coils #01 – #16 are typically High Current Coils (although Low Current Coils may be used in these positions & will be noted). Coils #17 – #32 are typically Low Current Coils. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted). Auxiliary Coils may be used in positions #33 – #35.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**< / -**] GO BACK / [**+ / >**] GO FORWARD, and the **BLACK Button** to [**SELECT**] ENERGIZE the coil (solenoid) or flash lamp.



Single Coil Test

To initiate, from the **COIL MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering

Single Coil Test, you will notice the #1 coil is shown. The Dot Matrix Display will indicate the coil or flash lamp name, coil (solenoid) or flash lamp number and the Coil or Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board, the Coil Voltage Gauge-Turns (e.g. 23-800) or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (Schematics & Wiring).




Cycling Coil Test

To initiate, from the **COIL MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each regular coil or flash lamp sequentially (cycling) on the Playfield and in the Backbox (if coils or flash lamps are used). The Dot Matrix Display indicates the same information you will find in **Single Coil Test**.

COIL TEST
TROUGH UP-KICKER
#1
YEL-VIO BRN-BLK

Typical Coil Wiring & Schematic

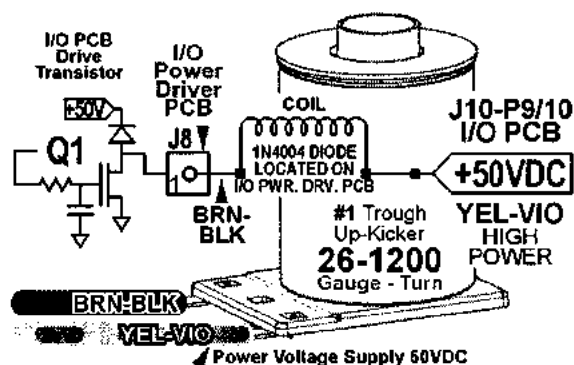

Go To Flash Lamps Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "FLASH" *Icon*. The two tests allows the technician to easily spot any burned-out flash lamps and replace them. Unlike **Single Coil Test**, which tests *all* coil (solenoids), including flash lamps, **Single and Cycling Flash Lamp Tests**, test only the flash lamps used in the game. Flash Lamps are typically used in positions #25 – #32 (although Flash Lamps may be used in any position and will be noted).

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**< / -**] GO BACK / [**+ / >**] GO FORWARD, and the **BLACK Button** to [**SELECT**] ENERGIZE the flash lamp.




Single Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "TEST" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. Upon entering **Single Flash Lamp Test**, you will notice the first Flash Lamp is shown. The Dot Matrix Display will indicate the flash lamp name, flash lamp number and the Flash Lamp Power Line / Drive Transistor Control Line wire colors. To determine the "Pin-Outs" from the I/O Power Driver Board or lamp type (e.g. #89 or #906 Bulb), view the Coils Detailed Chart Table at the beginning of this manual or for more on troubleshooting and diagnosing, see the Yellow Pages (Schematics & Wiring).

FLASH LAMP TEST
FLASH: NAME OF FLASHER
#25
ORG BLK-BRN

Bulb Types used for Flash Lamps

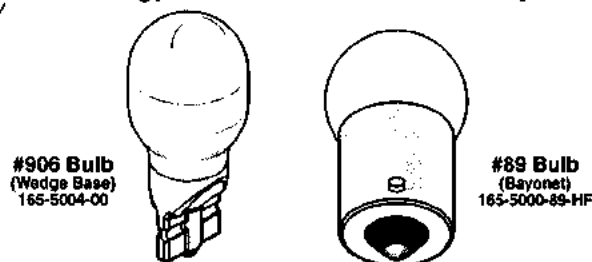

Cycling Flash Lamp Test

To initiate, from the **FLASH LAMPS MENU**, select the "CYC" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. The test pulses each flash lamp sequentially (cycling) on the Playfield and in the Backbox (if flash lamps are used). The Dot Matrix Display indicates the same information you will find in **Single Flash Lamp Test**.



Go To Lamp Menu

To initiate, from the **DIAGNOSTICS MENU**, select the "LAMP" *Icon*. Controlled lamps are configured in and 8 X 10 Matrix of Rows [Lamp Returns / Ground] and Columns [Lamp Drives / 18VDC] with up to 80 lamps possible. The **LAMP TEST MENU** consists of five (5) parts: **Single Lamp Test**, **Test All Lamps**, **Row Lamps Test**, **Column Lamps Test** and **Ordered Lamps Test*** to test *all* lamps.

Remember, use the **GREEN Button** to go [**BACK**], exit or escape, the **RED Buttons** to [**</>**] GO BACK / LEFT / [**+/>**] GO FORWARD / RIGHT, and the **BLACK Button** to [**SELECT**] next or as "OK / ENTER."

Upon entering Single Lamp Test, ... the #1 lamp is shown. Display will light up ... the dot ... ▶



Single Lamp Test

To initiate, from the **LAMP MENU**, select the "ONE" *Icon*. As each lamp is selected, the lamp will light at it's location on the playfield as well as the Dot Matrix

Display. Upon entering **Single Lamp Test**, you will notice the #1 lamp is shown. The Dot Matrix Display will light up (*highlight*) the corresponding *dot* in the on-screen matrix, display the *lamp name*, *lamp number* and the *Lamp Return / Drive wire colors*. For the Lamp Matrix Grid, see the beginning section of this Service Game Manual.

Upon entering All Lamps Test, ... the Dot Matrix Display is flashing "ALL LAMPS ON" ... ▶



All Lamps Test

To initiate, from the **LAMP MENU**, select the "ALL" *Icon*. Upon entering **All Lamps Test**, you will notice the Dot Matrix Display is flashing **ALL LAMPS ON** and the lamps on the playfield will be lit, alternating between the rows in the Lamp Matrix Grid. The Dot Matrix Display will light up (*highlight*) all of the *dots* in the on-screen matrix.

Upon entering Row Lamps Test, you will notice the #1 lamp row is shown ▶



Row Lamps Test

To initiate, from the **LAMP MENU**, select the "ROW" *Icon*. As each lamp row is selected, the lamps in the row will light on the playfield as well as the Dot Matrix

Display. Upon entering **Row Lamps Test**, you will notice the #1 lamp row is shown. The Dot Matrix Display will light up (*highlight*) the corresponding row of *dots* in the on-screen matrix, display the *lamp row number*, the *Lamp Return wire colors*, the *I/O PCB Connector* and *transistor number*.

Upon entering Column Lamps Test, you will notice the #1 lamp column is shown. ▶




Column Lamps Test

To initiate, from the **LAMP MENU**, select the "COL" *Icon*. As each lamp column is selected, the lamps in the column will light on the playfield as well as the Dot

Matrix Display. Upon entering **Column Lamps Test**, you will notice the #1 lamp column is shown. The Dot Matrix Display will light up (*highlight*) the corresponding row of *dots* in the on-screen matrix, display the *lamp column number*, the *Lamp Drive (18VDC) wire colors*, the *I/O PCB Connector* and *IC number*.



Bulb Types used for Control Lamps

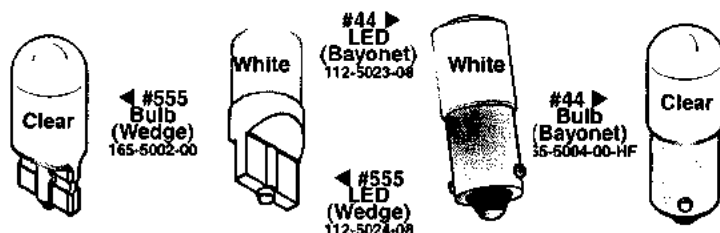

* If not required in this game, Icon will not be shown.




Ordered Lamps Test

To initiate, from the **LAMP MENU**, select the "ORD" *Icon*.

If required, this *Icon* will appear in the **LAMP MENU**. Identical to **Single Lamp Test**, however, the lamps lit are not in the Lamp Matrix numeric order, but ordered or arranged in separate localized grouping(s) for easier lamp checking.

Typical Lamp Wiring & Schematic

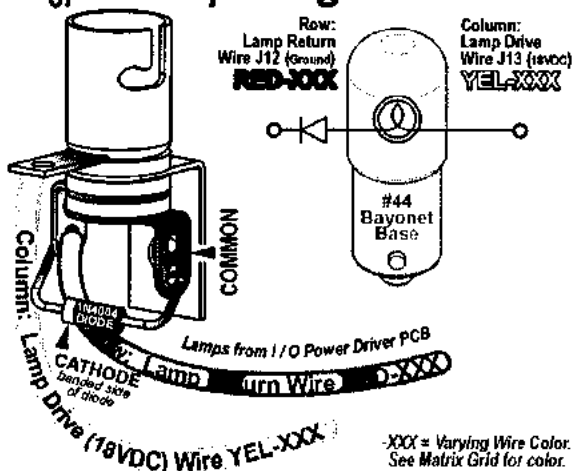

-XXX = Varying Wire Color.
See Matrix Grid for color.



Game-Specific Tests

To initiate, from the **DIAGNOSTICS MENU**, select the "GAME" *Icon*. Ensure the **Power Interlock Switch** is pulled out when testing with the Coin Door open. This Menu is provided to allow the technician a simple method of testing game specific coils and/or switches, if required. If used, select the *Icon* (and Sub-Menu *Icons*, if any) and follow on-screen prompts.



Ball Trough Test

To initiate, from the **DIAGNOSTICS MENU**, select the "CLR" *Icon*. Ensure the **Power Interlock Switch** is pulled out if testing with the Coin Door open. This Menu is provided to allow the technician a simple method of removing the balls from the trough and also, to test functionality of the trough, ensuring proper trough operation. Upon entering **Ball Trough Test**, you will notice that four switches are already indicated as closed. In the example, the 4-Ball Trough Switches #18, #19, #20 & #21 are shown closed (pinballs at rest in the ball trough). To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



Press the **Black [SELECT] Button** to eject the ball in the first position Switch #21 (VUK OPTO Trough #1 (R)). Simultaneously, the Dot Matrix Display and the playfield will eject the ball to the Trough Up-Kicker, eject from the Trough Up-Kicker into the Shooter Lane, momentarily closing Switch #23 (Shooter Lane), and is ejected onto the playfield where the technician can easily

retrieve the pinball or allow the ball(s) to re-enter the trough to continue **Ball Trough Test**. The Dot Matrix Display indicates Switch #18 (4-Ball Trough #4 (L)) as open as the remaining three (3) pinballs shift over one (1) position to the right. If the technician allows the ejected pinball to reenter the ball trough, the Dot Matrix Display will indicate Switch #18 as closed. **REMINER:** Switch #22 is the stacking OPTO switch; if more than five (5) pinballs are used, the additional switches will be noted. Typically, four (4) pinballs are used and required for proper operation; if this amounts differs, it will be noted on the front page of this Service Game Manual.



CAUTION! Continuous use off the above test may overheat the Trough Up-Kicker Coil.



Technician Alerts

To initiate, from the **DIAGNOSTICS MENU**, select the "TECH" *Icon*. This Menu is provided to show any switch or solenoid problems and/or missing pinballs. If upon entering the **SERVICE MENU** the display indicated an asterisk (*) and "USE +/- TO VIEW TECH. ALERTS", alerts are present.

TECHNICIAN ALERT - (0/0)

NO TECHNICIAN ALERTS

PRESS 'BACK' TO EXIT

Diagnostics



After pressing either **Red [</-] / [+/>] Button** or selecting this *Icon* in the **DIAGNOSTICS MENU**, the display will indicate the alert(s). If there are 2 alerts present, the display will indicate (1/2) with the 1st alert on the display. Press the **Red [+/>] Button** to view the second alert (2/2). The second number in the parenthesis () after the slash (/) indicates how many alerts are

present. Refer to the start of this chapter regarding "Upon entering the **SERVICE MENU ***" indication and to **SWITCH ALERTS**. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**. **Note:** While in this menu, an option may be present to jump (short-cut) to the appropriate Testing Menu (e.g. Coil Test, Switch Test, Game Specific Test or Ticket Dispenser Test, if installed).

NOTE ON SWITCH DETECTION : During game play, activation of switches are continuously monitored. For a switch to be determined as inoperable or **OUT OF SERVICE**, up to twenty games or so must be played for a switch to be automatically marked as **OUT OF SERVICE**. In programming, if a switch is determined to be faulty, game play is compensated. Switches noted as **OUT OF SERVICE** are determined to be stuck closed or open depending on switch usage. Free up the switch actuator, adjust or replace, if necessary. Performing a valid switch closure will put the switch back "IN SERVICE."

Determination of switch usage can be checked in **Audits** (review the *Audits Section*). Find the associated Audit with the switch in question and check usage; compare the numbers to commonly used switches. After any switch is checked and repaired or replaced, it's suggested to test the switch in the **Switch Test** or **Single Coil Test** (reviewed earlier in this section) where the associated coil to the switch can be tested as well. After correcting the problem, the switch will marked "IN SERVICE" and the switch is again monitored as specified above. Only you can determine if a switch marked **OUT OF SERVICE** is actually inoperable, or if it is just not getting actuated during game play.

NOTE ON PINBALL DETECTION :

While in **TECHNICIAN ALERTS MENU**, if the following is displayed, the game has detected one (1) or more pinball(s) missing and has compensated for the lost pinball(s) to provide normal game play.

Technician Alerts continued on the next page.



Ticket Dispenser Test

To initiate, from the **DIAGNOSTICS MENU**, select the "TIX" Icon. This Menu (Icon) will only appear if Standard Adjustment 56, **Ticket Dispenser**, is set to **YES** (Default = **NO***). ***Note:** Some games shipped from the factory with a unique Dip Switch Setting will default to **YES**. To view and/or change your setting, see Adjustments Section (**GO TO ADJUSTMENTS MENU**). Please remember, if you install an optional Ticket Dispenser, and your default setting is "NO," you will have to reset it back to "YES" if a **Factory Reset** is performed.

After selecting this Icon, the **Ticket Dispenser Test** will start. With the Ticket Dispenser properly installed, manually feed your tickets into the dispenser. The dispenser will activate and pull in the first ticket. Press the **Black [SELECT] Button** (which energizes Coil #35, Aux 3: Switched Ground) to advance a ticket. Feeding your Tickets into the dispenser works because Coil #33, Aux 1: Ticket Advance (Enable) is always 'energized'. With a Ticket Meter installed, as one Ticket Passes through the Ticket Dispenser, one 'click' is fired to the Meter (Coil #34, Aux 2: Ticket Meter) for each ticket passing through. Dedicated Switch **D-19, Ticket Notch**, will also be indicated on-screen (in combination with a audible sound) as "closing" as the notch between the tickets passes through. In this test you can clear ticket jams and check and/or clear tickets in Escrow, if necessary. To return to the **DIAGNOSTICS MENU**, press the **Green [BACK] Button**.



To initiate, from the **MAIN MENU**, select the "AUD" Icon. The **AUDITS MENU** provides 99* Audits for accounting purposes and for evaluation of *Game Programming*. The Audits are divided into 4 groups: • **Earnings Audits** [#1 – #13], • **Standard Audits** [#1 – #59], • **Feature Audits (Programming Use Only)** [#1 – #+] and • **Tournament Audits** [#1 – #14], "T AUD" Icon provided as an alternate access to Tournament Audits (*if data is available). For more information on the **TOURNAMENT MENU**, review the *Tournament Section (GO TO TOURNAMENT MENU)*. Try the "DUMP AUDITS TO USB" feature to create a text file of your audits. Don't forget to set the **DATE & TIME** in the **UTILITIES MENU**. See the *Utilities Section (GO TO UTILITIES MENU)*, for more information.

Audits which are named **Proprietary** are also for **Future Expansion** or **Programming**. Game code may get upgraded during production; compare all Audits in the Dot Matrix Display with the manual and make any corrections, as necessary. Audits are subject to change (with or without notice).

All **AUDITS MENU** Icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some Icons may appear non-functional or may not appear at all. **Icons and/or functions, order and operation are subject to change.**

In displays where changes can be made or to perform a function, use the **GREEN** Button to go [**BACK**], exit or escape, the **RED** Buttons to [< / -] **MOVE BACK / LEFT** / [+ / >] **MOVE FORWARD / RIGHT** to view the next audit in the group, and the **BLACK** Button to [**SELECT**] the sub-menus.



Earnings Audits [#1 – #13]

To initiate, from the **AUDITS MENU**, select the "EARN" Icon. The Dot Matrix Display will indicate the audit number (in this group), audit name and the audit total or value. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 **TOTAL PAID CREDITS [0]**: Total number of *Paid Credits*.
- #2 **FREE GAME PERCENTAGE [0%]**: Percentage value is 'Total Free Plays' (Standard Audit 15) divided by 'Total Plays' (Standard Audit 16).
- #3 **AVERAGE BALL TIME [0:00]**: In seconds, the average ball time is derived from the total play time divided by Standard Audit 1, Total Balls Played.
- #4 **AVERAGE GAME TIME [0:00]**: The average game time is expressed in minutes and seconds.
- #5 **COINS THROUGH LEFT SLOT [0]**: Total 'Left Coin Slot' Dedicated Switch (D-1) closures.
- #6 **COINS THROUGH RIGHT SLOT [0]**: Total 'Right Coin Slot' Dedicated Switch (D-3) closures.
- #7 **COINS THROUGH CENTER SLOT [0]**: Total 'Center Coin Slot' Dedicated Switch (D-2) closures.
- #8 **COINS THROUGH FOURTH SLOT [0]**: Total '4th Coin Slot' Dedicated Switch (D-4) closures.
- #9 **COINS THROUGH FIFTH SLOT [0]**: Total '5th Coin Slot' Dedicated Switch (D-5) closures.
- #10 **TOTAL COINS [0]**: Total amount of coins registered through all the *Coin Slots*.
- #11 **TOTAL EARNINGS [USD 0.00]**: Total cash value accumulated since the last Factory Reset occurred (review the *Utilities Section (GO TO RESET MENU)*, **Reset Coin Audits**).
- #12 **METER CLICKS [0]**: Total number of money clicks accumulated.
Based on the country's lowest coin denomination used for the game credit.
- #13 **SOFTWARE METER [0]**: Continuing total of Meter Clicks.
This audit cannot be reset; the display shows the constant addition of Meter Clicks.



Standard Audits [#1 - #59]

To initiate, from the **AUDITS MENU**, select the "S.P.I." icon. The Dot Matrix Display will indicate the *audit number (in this group)*, *audit name* and the *audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

- #1 **TOTAL BALLS PLAYED [0]**: Total number of *Regular* and *Extra Balls*.
- #2 **TOTAL EXTRA BALLS [0]**: Total number of *Extra Balls* awarded.
- #3 **EXTRA BALLS PERCENTAGE [0%]**: Percentage value is 'Total Extra Balls' (Standard Audit 2) divided by 'Total Plays' (Standard Audit 16).
- #4 **REPLAY 1 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 1.
- #5 **REPLAY 2 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 2.
- #6 **REPLAY 3 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 3.
- #7 **REPLAY 4 AWARDS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for Level 4.
- #8 **TOTAL REPLAYS [0]**: Total Awards (*Credits, Extra Balls or Scores*) for exceeding *Replay Score Levels*.
- #9 **REPLAY PERCENTAGE [0%]**: Percentage value is 'Total Replays' (Standard Audit 8) divided by 'Total Plays' (Standard Audit 16). *The percentage reflects replay total awards for exceeding replay score levels.*
- #10 **TOTAL SPECIALS [0]**: Total Awards (*Credits, Extra Balls, or Scores*) for making *Specials*.
- #11 **SPECIAL PERCENTAGE [0%]**: Percentage value is 'Total Specials' (Standard Audit 10) divided by 'Total Plays' (Standard Audit 16).
- #12 **TOTAL MATCHES [0]**: Total *Credits* awarded for matching the last two digits of the score with the *System-Generated Match Number* at the end of the game. Percentage of *Match Credits* is adjustable from 0% to 10% or OFF by Standard Adjustment 19, *Match Percentage, if enabled (review the Adjustments Section (GO TO ADJUSTMENTS MENU), Standard Adjustments)*.
- #13 **HIGH SCORE AWARDS [0]**: Total Awards (*Credits, Extra Balls, or Scores*) for exceeding the *High-Score-To-Date* scores.
- #14 **HIGH SCORE PERCENT [0%]**: Percentage value is 'High Score Awards' (Standard Audit 13) divided by 'Total Plays' (Standard Audit 16).
- #15 **TOTAL FREE PLAYS [0]**: Total *Free Credits* for *Replays, High-Score-To-Date, Specials and Match*.
- #16 **TOTAL PLAYS [0]**: This total is derived by adding the sum of 'Total Paid Credits' (Earnings Audit 1) and 'Total Free Plays' (Standard Audit 15). *Note: Free credits are not recorded in the Audit until actually used.*
- #17 **0.0M-1.99M SCORES [00]**: Total number of games the Player's final score was between 0 and 1,999,990 points.
- #18 **2.0M-3.99M SCORES [00]**: Total number of games the Player's final score was between 2,000,000 and 3,999,990 points.
- #19 **4.0M-5.99M SCORES [00]**: Total number of games the Player's final score was between 4,000,000 and 5,999,990 points.
- #20 **6.0M-7.99M SCORES [00]**: Total number of games the Player's final score was between 6,000,000 and 7,999,990 points.
- #21 **8.0M-9.99M SCORES [00]**: Total number of games the Player's final score was between 8,000,000 and 9,999,990 points.
- #22 **10.0M-12.49M SCORES [00]**: Total number of games the Player's final score was between 10,000,000 and 12,499,990 points.
- #23 **12.5M-14.99M SCORES [00]**: Total number of games the Player's final score was between 12,500,000 and 14,499,990 points.
- #24 **15.0M-17.49M SCORES [00]**: Total number of games the Player's final score was between 15,000,000 and 17,499,990 points.
- #25 **17.50M-19.99M SCORES [00]**: Total number of games the Player's final score was between 17,500,000 and 19,999,990 points.
- #26 **20.0M-24.99M SCORES [00]**: Total number of games the Player's final score was between 20,000,000 and 24,999,990 points.
- #27 **25.0M-29.99M SCORES [00]**: Total number of games the Player's final score was between 25,000,000 and 29,999,990 points.

Standard Audits 28-59 continued on the next page.



Standard Audits Continued

- #28 **30.0M–39.99M SCORES [00]**: Total number of games the Player's final score was between 30,000,000 and 39,999,990 points.
- #29 **40.0M–49.99M SCORES [00]**: Total number of games the Player's final score was between 40,000,000 and 49,999,990 points.
- #30 **50.0M–74.99M SCORES [00]**: Total number of games the Player's final score was between 50,000,000 and 74,999,990 points.
- #31 **75.0M–99.99M SCORES [00]**: Total number of games the Player's final score was between 75,000,000 and 99,999,990 points.
- #32 **100.0M–149.99M SCORES [00]**: Total number of games the Player's final score was between 100,000,000 and 149,999,990 points.
- #33 **150.0+M SCORES**: Total number of games the Player's final score was 150,000,000 points and over.
- #34 **AVERAGE SCORES [00]**: This total is derived by adding the Final Score of each game to a table and dividing this sum by 'Total Plays' (Standard Audit 16).
- #35 **SERVICE CREDITS [0]**: Total 'Green [SERVICE CREDIT] Button' Dedicated Switch (D-21) closures in *Attract Mode* (not while in the **SERVICE MENU**). See the *Service Menu Section, Service Switch X4 Set Access & Use*, for how to receive Service Credits. See the *Utilities Section (GO TO RESET MENU)*, *Reset Credits*, for how to delete credits.
- #36 **BALL SEARCH STARTED [0]**: Total number of times the game performed a *Ball Search*.
- #37 **LOST BALL FEEDS [0]**: Total number of times the game added a pinball to play when it could not find a pinball after *Ball Search* (review the *Diagnostics Section (GO TO DIAGNOSTICS MENU)*, *Technicians Alert [Pinball Detection]*).
- #38 **LOST BALL GAME STARTS [0]**: Total number of times the game started with a pinball missing from the ball trough at the start of a game (review the *Diagnostics Section (GO TO DIAGNOSTICS MENU)*, *Technicians Alert [Pinball Detection]*).
- #39 **LEFT DRAINS [0]**: Total 'Left Outlane' Switch (24) closures.
- #40 **CENTER DRAINS [0]**: Total number of times the pinball had drained when the last switch closed was not the 'Left Outlane' (24) or the 'Right Outlane' Switch (29).
- #41 **RIGHT DRAINS [0]**: Total 'Right Outlane' Switch (29) closures.
- #42 **TILTS [0]**: Total 'Tilt Pendulum' Dedicated Switch (D-17) closures.
- #43 **TOTAL BALLS SAVED [0]**: Total number of times this feature was used. This feature is adjustable from 0:01–0:15, **AUTO** or **NO BALL SAVES** (review the *Adjustments Section (GO TO ADJUSTMENTS MENU)*, *Standard Adj. 48, Ball Save Time*). This feature is enabled at the start of each pinball and is disabled as soon as a predetermined number of switches are "closed" or the allocated time has expired.
- #44 **LEFT FLIPPER USED [0]**: Total 'Left Flipper Button' Dedicated Switch (D-9) closures in **Game Mode**.
- #45 **RIGHT FLIPPER USED [0]**: Total 'Right Flipper Button' Dedicated Switch (D-11) closures in **Game Mode**.
- #46 **0 - 1 MINUTE GAMES [0]**: Total games in which the total game time was between 0:00 and 1:00 minute.
- #47 **1 - 1.5 MINUTE GAMES [0]**: Total games where play time was between 1:00 and 1:30 minutes.
- #48 **1.5 - 2 MINUTE GAMES [0]**: Total games where play time was between 1:30 and 2:00 minutes.
- #49 **2 - 2.5 MINUTE GAMES [0]**: Total games where play time was between 2:00 and 2:30 minutes.
- #50 **2.5 - 3 MINUTE GAMES [0]**: Total games where play time was between 2:30 and 3:00 minutes.
- #51 **3 - 3.5 MINUTE GAMES [0]**: Total games where play time was between 3:00 and 3:30 minutes.
- #52 **3.5 - 4 MINUTE GAMES [0]**: Total games where play time was between 3:30 and 4:00 minutes.
- #53 **4 - 5 MINUTE GAMES [0]**: Total games where play time was between 4:00 and 5:00 minutes.
- #54 **5 - 6 MINUTE GAMES [0]**: Total games where play time was between 5:00 and 6:00 minutes.
- #55 **6 - 8 MINUTE GAMES [0]**: Total games where play time was between 6:00 and 8:00 minutes.
- #56 **8 - 10 MINUTE GAMES [0]**: Total games where play time was between 8:00 and 10:00 minutes.
- #57 **10 - 15 MINUTE GAMES [0]**: Total games where play time was between 10:00 and 15:00 minutes.
- #58 **15+ MINUTE GAMES [0]**: Total games in which the total game time was 15:00 minutes and over.
- #59 **RECENT REPLAY PERCENT [0%]**: Percent figured with programming thresholds for a determined number of games. The % reflects replay total awards for exceeding replay score levels.



Feature Audits [#1 – #+]

To initiate, from the **AUDITS MENU**, select the "GAME" Icon. The Dot Matrix Display will indicate the *audit number (in this group)*, *audit name* and the *audit total or value*. The current audit will remain on the display until the next audit is viewed or when this sub-menu is exited.

Feature Audits Definition: Programming Use Only. The proprietary information *Total number of times a feature was started, awarded, lit, played and/or completed (awarded)*; also, the *total number of Switch Closures during certain modes or features are tracked (a predetermined single/multiple variations of switch closures are used to determine the lighting and/or completion of the feature stated)*. **SEE THE DOT MATRIX DISPLAY FOR CURRENT FEATURE AUDITS.**

Feature Audits are subject to change (with or without notice). View Feature Audits on the Dot Display only. To export all audits to your memory stick (creating a text file), perform the following. Enter the **AUDITS MENU**, then enter the **DUMP AUDITS TO USB**. **Note:** The "DUMP" Icon can also be accessed in the **USB MENU** via the **UTILITIES MENU** (see the Utilities Section (GO TO USB MENU) for details).



Tournament Audits [#1 – #14] subject to change

"T AUD" Icon provided as an alternate access to Tournament Audits (if data is available). For more information on the **TOURNAMENT MENU**, review the *Tournament Section (GO TO TOURNAMENT MENU)*.



Dump Audits To USB (Memory Stick)

To initiate, from the **USB MENU**, select the "DUMP" Icon. Follow the on-screen prompts to perform a **Data Dump (download)**. A dated text file will be created on your USB Memory Stick.



GO TO AUDITS MENU



DUMP AUDITS TO USB




Step 1 Insert your **USB Compatible Memory Stick** into the USB port on the CPU/Sound Board (S.A.M. System). If the Memory Stick has space available and is free of errors, a dated file* is generated (* ensure your Date & Time is set prior to selecting or the dated file will have the default date of 20XX_01_01; see the Utilities Section (SET DATE / TIME) for details).

Step 2 Press [**SELECT**] to save the file to your Memory Stick. Press [**SELECT**] again to continue or [**BACK**] to exit or escape at any time.

Step 3 Remove the Memory Stick and insert into your PC or Mac to save the file (which can then be copied, printed or emailed). The audits are numbered sequentially **without** a number restart between the three types of audits (Earnings, Standard and Feature).

Note: The "DUMP" Icon can also be accessed in the **USB MENU** via the **UTILITIES MENU** (see the Utilities Section (GO TO USB MENU) for details).

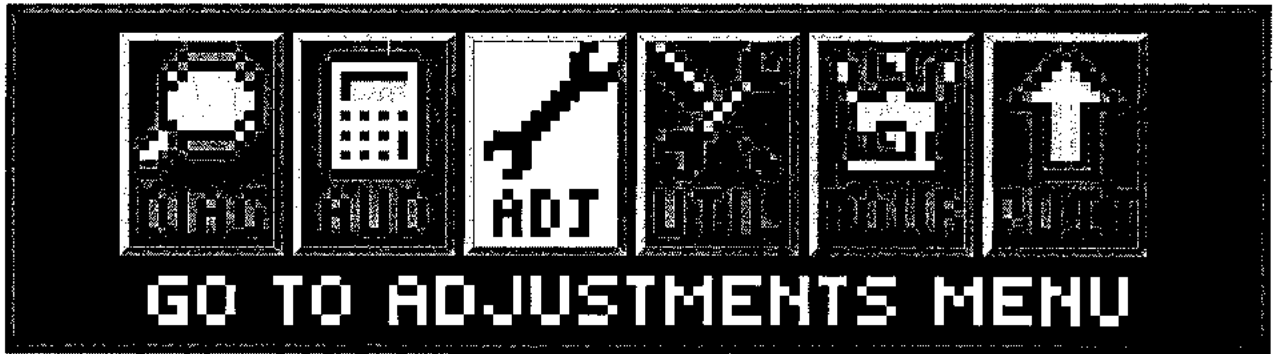

To initiate, from the **MAIN MENU**, select the "ADJ" *Icon*. The **ADJUSTMENTS MENU** provides 64+/- Adjustments to vary Game Functions to customize for your particular needs. The Adjustments are divided into 2 groups:
 • **Standard Adjustments** [#1 – #63] and • **Feature Adjustments** (Programming Use Only) [#1 – #+].
 For quick and easy customization of **Game Play Difficulty** or **Game Play Type** or how to **RESET ONLY** the Adjustments, review the Utilities Section (**GO TO INSTALLS MENU**). **Shortcut: Enter Custom Message** (Standard Adj. 41) and **Set Custom Pricing** (via Standard Adjustment 18, Game Pricing) can be quickly accessed via the **UTILITIES MENU**. See the Utilities Section (**GO TO UTILITIES MENU**), for more information.

Adjustments which are named **Proprietary** are also for **Future Expansion** or **Programming**. Game code may get upgraded during production; compare all Adjustments in the Dot Matrix Display with the manual and make any corrections, as necessary. Adjustments are subject to change (with or without notice).

All **ADJUSTMENTS MENU** *Icons* and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some Adjustments may appear non-functional or may not appear at all. **Adjustments and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings.**

In displays where changes can be made or to perform a function, use the **GREEN** Button to go [**BACK**], exit or escape, the **RED** Buttons to [**< / -**] **SELECT PREVIOUS** [**+ / >**] **SELECT NEXT** when the adjustment name or setting is flashing and the **BLACK** Button to [**SELECT**] toggle between the **ADJUSTMENT** and **SETTING**.



Standard Adjustments [#1 – #63]

To initiate, from the **ADJUSTMENTS MENU**, select the "S.P.I." *Icon*. The Dot Matrix Display will indicate the *adjustment number (in this group), adjust. name, adjust. setting and comment line*. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

- #1 **REPLAY TYPE:** Set to **AUTO**, **NONE**, **FIXED** or **DYNAMIC**. Factory Default = **AUTO**. **AUTO & DYNAMIC** are based on the **Replay Percentage** (Standard Adjustment 2). • Select **FIXED** to give the player a **Replay Award** (Standard Adjustment 3) as the **Replay Levels** (Standard Adjustments 7-10) are reached. The **Replay Level(s)** (Standard Adjustments 7-10) will not adjust up or down. • Select **AUTO** to give the player a **Replay Award** (Standard Adjustment 3) as the **Auto Replay Start** (Standard Adjustment 5) score level is reached. This *score threshold* will automatically adjust up or down based on the **Replay Percentage** chosen (Standard Adjustment 2). The game periodically adjusts based upon the **Player Base Skill Level**. • Select **DYNAMIC** to give the player a **Replay Award** (Standard Adjustment 3) as the **Dynamic Replay Start** (Standard Adjustment 6) score level is reached. This *score threshold* will go down every game based on the **Replay Percentage** (Standard Adjustment 2) selected. • Select **NONE** to turn off Standard Adjustments 2-11.
- #2 **REPLAY PERCENTAGE:** Set between **1% – 50%**. Factory Default = **10%**. Adjustable only if **AUTO** or **DYNAMIC** is installed in **Replay Type**, Standard Adjustment 1. For [**DYNAMIC**] example, if the *score threshold* is 50,000,00 and the **Replay Percentage** selected is **10%**, every game a player does not reach the *score threshold*, the score to reach will drop by 5,000,000 (10% of 50M). This will continue every game until the *threshold score* is reached. Thus, if the score then drops to 15,000,000 after 7 games and is then achieved, the **Replay Award** (Standard Adjustment 3) is given. The original *score threshold* is added to 15,000,000 and is now 65,000,000. It will then take the same player 10 games to reach 15,000,000. This adjustment is shown only if **AUTO** or **DYNAMIC** is installed in **Replay Type** (Standard Adjustment 1).

Standard Adjustments 3-18 continued on the next page.



Standard Adjustments continued.

- #3 **REPLAY AWARD:** Set to **CREDIT**, **TICKET***, **TOKEN*** or **EXTRA BALL**. Factory Default = **CREDIT**. Set the type of award to be given to the player when the appropriate Replay Score threshold or level is achieved. If awarding a **CREDIT**, **TICKET** or **TOKEN** is prohibited in your area, select **EXTRA BALL**. This adjustment is not shown if **NONE** is installed in **Replay Type** (Standard Adjustment 1).
- * Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #4 **REPLAY LEVELS:** Set between 1 – 4 for the number of Replay Levels to be active. Factory Default = 1. This adjustment is not shown if **NONE** is installed in **Replay Type** (Standard Adjustment 1).
- #5 **AUTO REPLAY START:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000) for the Auto Replay Start threshold. Factory Default = __,000,000. This adjustment is shown only if **AUTO** is installed in **Replay Type** (Standard Adjustment 1).
- #6 **DYNAMIC REPLAY START:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000) for the Dynamic Replay Start threshold. Factory Default = __,000,000. This adjustment is shown only if **DYNAMIC** is installed in **Replay Type** (Standard Adjustment 1).
- #7 **REPLAY LEVEL #1:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the first or only Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1).
- #8 **REPLAY LEVEL #2:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the second Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 2 is installed in **Replay Levels** (Standard Adjustment 4).
- #9 **REPLAY LEVEL #3:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the third Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 3 is installed in **Replay Levels** (Standard Adjustment 4).
- #10 **REPLAY LEVEL #4:** Set between 5,000,000 – 150,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the fourth Replay Level. This adjustment is shown only if **FIXED** is installed in **Replay Type** (Standard Adjustment 1) and 4 is installed in **Replay Levels** (Standard Adjustment 4).
- #11 **REPLAY BOOST:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, while **FIXED** or **AUTO** maintains the Replay Levels, Replay Boost works as follows: If the Replay Level is 7,000,000 (regardless of the Replay Percentage), and the Player scores 20M, and receives the Replay Award, the next game the Current Replay Level is added to this base. Thus the next game, the Replay Level is 14,000,000. The Player again scores 20M. The next game the Player will need to achieve 21,000,000 to earn the Replay Award. If the Player does not achieve 21,000,000, the next game reverts back to the original 7,000,000 or the new adjusted level maintained by the Fixed or Autopercentaging Feature. This adjustment is shown only if **AUTO** or **FIXED** is installed in **Replay Type** (Standard Adjustment 1).
- #12 **SPECIAL LIMIT:** Set between 1 – 5, **UNLIMITED** or **NO SPECIALS**. Factory Default = 1. Set the maximum number of *Specials* that may be accumulated per game.
- #13 **SPECIAL PERCENTAGE:** Set between 1% – 50%. Factory Default = 10%. This adjustment allows the operator to adjust how frequently the **Special Feature** is made available to the player. This adjustment is not shown if **NO SPECIALS** is installed in **Special Limit** (Standard Adjustment 12).
- #14 **SPECIAL AWARD:** Set to **CREDIT**, **TICKET***, **TOKEN***, **POINTS** or **EXTRA BALL**. Factory Default = **CREDIT**. Select **EX. BALL** or **POINTS** if awarding a **CREDIT** or **TICKET / TOKEN** is prohibited in your area. This adjustment is not shown if **NO SPECIALS** is installed in **Special Limit** (Standard Adjustment 12).
- * Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #15 **FREE GAME LIMIT:** Set between 1 – 9, **UNLIMITED** or **NO FREE GAMES**. Factory Default = 5. Set the maximum number of *Free Games* that may be accumulated per game.
- #16 **EXTRA BALL LIMIT:** Set between 1 – 9, **UNLIMITED** or **NO EXTRA BALLS**. Factory Default = 5. Set the number of *Extra Balls* that may be accumulated per game.
- #17 **EXTRA BALL PERCENTAGE:** Set between 1% – 50%. Factory Default = 25%. This adjustment allows the operator to adjust how frequently the **Extra Ball Feature** is made available to the player. This adjustment is not shown if **NO EXTRA BALLS** is installed in **Extra Ball Limit** (Standard Adjustment 16).
- #18 **GAME PRICING:** There are two (2) methods available for *Coin Switch Programming*: **Standard & Custom**. Set between **AUSTRALIA 1 – UK 6** or **CUSTOM**. Factory Default = **USA 10**. **Shortcut: Set Custom Pricing** and instructions, review the *Utilities Section*, **Set Custom Pricing**. The appropriate Dip Switch Setting (Dip Sw. 1-8 location CPU/Sound PCB SW1) in relationship to the Pricing Scheme selected is important (view the tables on the following pages for more information).

Standard Adjustment 18, Game Pricing, continued on the next page.



Standard Adjustment 18, Game Pricing, continued.

USA & International (non-Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP SWITCH SW1 SETTING								COUNTRY SETTING OPTION(S)	COIN MECHANISMS (SWITCHES) COINS THRU ... SLOT: LEFT CENTER RIGHT 4TH				PRICING SCHEME Number of Plays (Credits) for Price Amount Shown See "Appendix J" for Coin Cards Examples & Info!				Requires SPI Coin Card(s) Part Number		
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON									USA 1	0.25	1.00	0.25		USD // UNITED STATES DOLLAR // (\$)			755-5400-01-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	USA 2					1/0.25			755-5400-09-Y		
HIGHLIGHTED = Factory Default									USA 3					1/0.50	2/0.75	3/1.00	755-5400-02-Y		
HIGHLIGHTED = Not Shown on Coin Card									USA 4					1/0.50	For USA 6 and USA 7 coin: 755-5400-02-Y USA 6 Note: 3 plays; coin 1/4 25¢ quarters = 2 plays; however, \$1 bill = 3 plays		755-5400-02-Y		
									USA 5					1/0.50	2/1.00	3/1.50	5/2.00	755-5400-08-Y	
									USA 6					1/0.50	2/4 X 25¢	3/1.00 Bill	Used to promote the Bill Validator		
									USA 7					1/0.50	2/1.00	4/1.50	6/2.00	755-5400-00-Y	
									USA 8					1/0.50	3/1.00			755-5400-07-Y	
									USA 9					1/1.00				755-5400-11-Y	
									USA 10					1/0.75	2/1.50	3/2.00			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					AUSTRALIA 1	0.20	1.00	2.00		AUD // AUSTRALIAN DOLLARS // (\$AUS)			755-5406-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	AUSTRALIA 2					1/1.00	3/2.00		(1 Side)		
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲							CANADA 1	0.25	0.25	1.00	2.00	CAD // CANADIAN DOLLARS // (\$CAN)			755-5400-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	CANADA 1 [25¢ door]					1/0.50	2/0.75	3/1.00	-01-Y or -02-Y		
ON	▲	▲	▲	▲					CANADA 2	1.00		2.00		1/1.00	3/2.00	755-5400-10-Y			
OFF	▼	▼	▼	▼	▼	▼	▼	▼	CANADA 2 [dollar door]										
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					CROATIA	1	2	5		HRK // CROATIAN KUNA // (Kuna)			755-5410-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼						1/3	2/5	(2-Sided)			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					DENMARK 1	1	5	10	20	DKK // DANISH KRONER // (Kr)			755-5402-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	DENMARK 2					1/2	2/4	3/5	4/7	5/9	7/10
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					JAPAN 1	100		100		JPY // JAPANESE YEN // (¥)			755-5408-01-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	JAPAN 2					1/100	3/200		(2-Sided)		
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					LITHUANIA	1	2	5		LTL // LITHUANIA LITAI // (Lt)			755-5416-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼						1/2		(1 Side)			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					MIDDLE EAST	token		token		TOKEN // Middle East currency used to buy token // (TOKEN)			755-5416-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼						1/1		(use Side 1)			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON					▲				NEW ZEALAND 1	1		2		NZD // NEW ZEALAND DOLLAR // (\$NZD)			755-5406-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	NEW ZEALAND 2					1/1	3/2		(Side 2)		
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲						NORWAY 1	10	5	20		NOK // NORWEGIAN KRONE // (Kr)			755-5403-01-Y or -02-Y // (2-Sided)		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	NORWAY 2					1/10	3/20		755-5403-03-Y		
									NORWAY 3					1/20	3/40		(2-Sided)		
									NORWAY 4										
Pos.	1	2	3	4	5	6	7	8	Default Highlighted	▼ LEFT SWITCH CAN BE WIRED TO BILL ACCEPTOR ▼									
ON	▲	▲	▲	▲					RUSSIA	10	5	1		RUB // RUSSIAN RUBLE // (Ruble)			755-5411-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼						1/5		(2-Sided)			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					SO. AFRICA 1	0.50	1.00	2.00	5.00	ZAR // SOUTH AFRICAN RAND // (R)			755-5409-01-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	SO. AFRICA 2					1/2.00	2/5.00		(2-Sided)		
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲						SWEDEN 1	1	5	10		SEK // SWEDISH KRONOR // (Kr)			755-5404-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	SWEDEN 2	1/10	2/15	3/20		(2-Sided)					
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON	▲	▲	▲	▲					SWITZERLAND 1	1	2	5		CHF // SWISS FRANCS // (Sf)			755-5405-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼	SWITZERLAND 2					1/1	2/2	3/3	4/4	6/5	(2-Sided)
Pos.	1	2	3	4	5	6	7	8	Default Highlighted										
ON					▲				TAIWAN	10		10		TWD // TAIWANESE DOLLAR // (TWD)			755-5412-00-Y		
OFF	▼	▼	▼	▼	▼	▼	▼	▼						1/10		(use Side 1)			
Pos.	1	2	3	4	5	6	7	8	Default Highlighted	▼ 5TH COIN SLOT NOT AVAILABLE WITH CUSTOM PRICING ▼									
ON	▲	▲	▲						UK 1	0.10	0.50	1.00	0.20	2£	GBP // UNITED KINGDOM POUNDS // (£)			755-5407-00-Y	
OFF	▼	▼	▼	▼	▼	▼	▼	▼	UK 2						3/1.00	7/2.00		755-5407-01-Y*	
									UK 3						4/1.00			755-5407-01	
									UK 4						1/0.50	2/1.00	3/1.50	5/2.00	755-5407-01-Y*
									UK 5						1/0.30	2/0.60	3/0.90	4/1.00	755-5407-01
									UK 6						1/1.00	3/2.00			755-5407-01-Y*
									UK 6	3/2.00				*use blank side	755-5407-01-Y*				

Adjustments

Standard Adjustment 18, Game Pricing, continued on the next page.



Standard Adjustment 18, Game Pricing, continued.

Euro 1-12 Summary & International (Euro) Standard Pricing Select Table

CPU/SOUND PCB DIP SWITCH SW1 SETTING		COUNTRY SETTING OPTION(S)	COIN MECHANISMS (SWITCHES) COINS THRU ... SLOT:				PRICING SCHEME Number of Plays (Credits) for Price Amount Shown See "Appendix J" for Coin Cards Examples & Info!	Requires SPI Coin Card(s) Part Number
Pos.	1 2 3 4 5 6 7 8	Default Highlighted	LEFT	CENTER	RIGHT	4TH		
ON	SEE BELOW	Euro 1	0.50	1.00	2.00	0.20 optional	EUR // EUROPEAN UNION EUROS // 1 € 1	755-5401-01-Y
OFF	SETTINGS	Euro 2					1/0.50	755-5401-02-Y
		Euro 3					1/0.50 2/1.00 3/1.50 5/2.00	755-5401-03-Y
		Euro 4					1/0.50 2/1.00 3/1.50 6/2.00	755-5401-04-Y
		Euro 5					1/0.50 3/1.00 4/1.50 7/2.00	755-5401-05-Y
		Euro 6					2/0.50	755-5401-06-Y
		Euro 7					1/1.00 2/2.00 3/3.00 5/4.00	755-5401-07-Y
		Euro 8					1/1.00 3/2.00	755-5401-08-Y
		Euro 9					1/1.00 2/1.50 3/2.00	755-5401-09-Y
		Euro 10					1/1.00 3/2.00 7/3.00	755-5401-10-Y
		Euro 11					1/1.00 4/2.00	755-5401-11-Y
		Euro 12					2/1.00 4/2.00 6/3.00 9/4.00	755-5401-12-Y

For a different Euro Pricing Scheme (other than Factory Default listed below), scroll through Standard Adjustment 18: Euro 1-12 or CUSTOM* for new setting (reference above Euro 1-12 Summary). Keep the Country Dip Switch Setting the same as listed below.

Pos.	1 2 3 4 5 6 7 8	Default Highlighted	COINS THRU ... SLOT:	EUR // EUROPEAN UNION EUROS // 1 € 1	
ON	▲	AUSTRIA Euro 9	0.50 1.00 2.00	1/1.00 2/1.50 3/2.00	755-5401-09-Y
OFF	▼				
ON	▲	BELGIUM Euro 1	0.50 1.00 2.00	1/0.50	755-5401-01-Y
OFF	▼				
ON	▲	FINLAND Euro 8	0.50 1.00 2.00	1/1.00 3/2.00	755-5401-08-Y
OFF	▼				
ON	▲	FRANCE Euro 10	0.50 1.00 2.00	1/1.00 3/2.00 7/3.00	755-5401-10-Y
OFF	▼				
ON	▲	GERMANY 1	0.50 1.00 2.00	1/0.50	755-5401-01-Y
OFF	▼	GERMANY 2	0.50 1.00 2.00	1/0.50 2/1.00 3/1.50 5/2.00	755-5401-02-Y
		GERMANY 3		1/0.50 2/1.00 3/1.50 6/2.00	755-5401-04-Y
ON	▲	GREECE Euro 8	0.50 1.00 2.00	1/1.00 3/2.00	755-5401-08-Y
OFF	▼				
ON	▲	ITALY 1	0.50 0.50	1/0.50	755-5401-01-Y
OFF	▼	ITALY 2		1/1.00 3/2.00	755-5401-08-Y
ON	▲	NETHERLANDS Euro 3	0.50 1.00 2.00	1/0.50 3/1.00	755-5401-03-Y
OFF	▼				
ON	▲	PORTUGAL Euro 1	0.50 0.50	1/0.50	755-5401-01-Y
OFF	▼				
ON	▲	SPAIN Euro 8	0.50 1.00 2.00	1/1.00 3/2.00	755-5401-08-Y
OFF	▼				

HIGHLIGHTED = Factory Default

HIGHLIGHTED = Not Shown on Coin Card

For the associated Coinage Card required if the Factory Default Setting was changed, view on-line at:

<http://www.sternpinball.com/coinagecards.shtml>

You can download and print the replacement card. Adobe® Reader 5.0 or higher required (links on site). Use Yellow Card Stock: ASTROBRIGHTS® SOLAR YELLOW #65 FROM WAUSAU PAPER PRODUCTS (Stock #22731)

#19 MATCH PERCENTAGE: Set between 0% – 10% or OFF. Factory Default = 9%. At 0% the Match Animation Feature occurs at the end of the game but never awards the Match Award (Standard Adjustment 20). Set to OFF, no Match Animation Feature is shown.

#20 MATCH AWARD: Set to CREDIT, TICKET* or TOKEN*. Factory Default = CREDIT. This adjustment is not shown if OFF is installed in Match Percentage (Standard Adjustment 19).

*Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.

#21 BALLS PER GAME: Set between 1 – 10. Factory Default = 3. Set the number of balls per game.

Standard Adjustments 22-36 continued on the next page. Standard Adjustments continued.



- #22 **TILT WARNINGS:** Set between 0 – 3. Factory Default = 2. Set the number of Plumb Bob Tilt Switch closures before the ball in play is tilted. *Each closure generates an audible alert and/or display alert.*
- #23 **CREDIT LIMIT:** Set between 4 – 50. Factory Default = 30. Set the maximum credits allowed.
- #24 **ALLOW HIGH SCORES:** Set to YES or NO. Factory Default = YES. When set to YES, if a player exceeds the Default Grand Champion or 1-4 High Scores, the player may receive a **High Score Award** (Standard Adjustment 25) and enter their **3 Initials** or **10-Letter Name** (Standard Adjustment 36). Set to NO to disable this feature. *The following Standard Adjustments 25-37 are not shown if NO is installed.*
- #25 **HIGH SCORE AWARD:** Set to CREDIT, TICKET* or TOKEN*. Factory Default = CREDIT. Set the type of award to be given to the player when the appropriate **Grand Champion Score** or **High Score #1 – #4** threshold or level is achieved. If awarding a **CREDIT, TICKET** or **TOKEN** is prohibited in your area, install **NO** in **Allow High Scores** (Standard Adjustment 24). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- * Note: If TICKET or TOKEN is selected, the game will require an optional Ticket or Token Dispenser and then Q24 Option (Standard Adj. 55) must be changed accordingly.*
- #26 **GRAND CHAMPION AWARDS:** Set between 0 – 5. Factory Default = 1. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the Grand Champion Score (Standard Adjustment 31). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #27 **HIGH SCORE #1 AWARDS:** Set between 0 – 3. Factory Default = 1. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #1 (Standard Adjustment 32). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #28 **HIGH SCORE #2 AWARDS:** Set between 0 – 2. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #2 (Standard Adjustment 33). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #29 **HIGH SCORE #3 AWARDS:** Set between 0 – 1. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #3 (Standard Adjustment 34). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #30 **HIGH SCORE #4 AWARDS:** Set between 0 – 1. Factory Default = 0. Set the number of **High Score Award(s)** (Std. Adj. 25), awarded for exceeding the High Score #4 (Standard Adjustment 35). *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #31 **GRAND CHAMPION SCORE:** Set between 1,000,000 – 1,000,000,000 (increments of 1,000,000). Factory Default = __,000,000. Set the desired **Grand Champion Score** level a player needs to exceed to earn the **High Score Award** (Standard Adjustment 25). A score higher than the default, cannot be reset by Standard Adjustment 37, **HSTD Reset Count**. *The Grand Champion Score will revert to the Factory Default Score ONLY if a **Reset Grand Champion** is performed in the **RESET MENU** (via the **UTILITIES MENU**) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #32 **HIGH SCORE #1:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #1** level a player needs to exceed to earn the **High Score Award** (Standard Adjustment 25). A score higher than the default, will be reset by Standard Adjustment 37, **HSTD Reset Count**. *The High Score will revert to the Factory Default Score ONLY if a **Reset High Scores** is performed in the **RESET MENU** (via the **UTILITIES MENU**) or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*
- #33 **HIGH SCORE #2:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #2** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #34 **HIGH SCORE #3:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #3** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #35 **HIGH SCORE #4:** Set between 1,000,000 – 1,000,000,000. Factory Default = __,000,000. Set the desired **High Score #4** level a player needs to exceed ... (continued in Standard Adjustment 32 definition above).
- #36 **HSTD (HIGH SCORE TO DATE) INITIALS:** Set to 3 INITIALS or 10 LETTER NAME. Factory Default = 3 INITIALS. When set to 3 INITIALS, the player is allowed only 3 initials to input. When set to 10 LETTER NAME, the player is allowed to enter 10 initials to input. *This adjustment is not shown if NO is installed in Allow High Scores (Standard Adjustment 24).*

Standard Adjustments 37-50 continued on the next page.



Standard Adjustments continued.

- #37 HSTD (HIGH SCORE TO DATE) RESET COUNT:** Set between **100 – 9900** or **OFF** (increments of 100). Factory Default = **2000**. Set the number of games between "automatic resets" of High Scores back to the Factory Defaults for **ONLY** Standard Adj. **32 – 35, High Score #1 – #4**. The High Score will revert to the Factory Default Scores when the number of games stated is reached. **Reset High Scores** can be performed in the **RESET MENU** (via the **UTILITIES MENU**) anytime or if the game is without power for more than 12 hours after the CPU/Sound PCB Coin Cell Battery is expired or removed. This adjustment is not shown if **NO** is installed in **Allow High Scores** (Standard Adj. 24).
- #38 FREE PLAY:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, no coins are required for Game Play.
- #39 LANGUAGE:** Set to **ENGLISH, GERMAN, FRENCH, SPANISH** or **ITALIAN**. Factory Default = **ENGLISH**. Set the language for the game. Language of game is also shown in the Dot Display (along with the Game Title and code version) at the start-up routine which follows a game reset or power-up.
- #40 PLAYER LANGUAGE SELECT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, after the player presses the **Start Button** (to start a game with adequate credit), the player has the option to choose a language by pressing either **Flipper Button** before game start (options of languages installed are shown on the Dot Display). **Note:** If set to **NO** or if only one language is installed and the setting is set to **YES**, the game will start immediately after the **Start Button** press. Language(s) available are dependent on game destination from the factory. Other languages may be available on-line for download and installed on your game. With the proper dip switch installed, the language option(s) can be changed. For more information or help, call Technical Support at 800-542-5377 (708-345-7700).
- #41 CUSTOM MESSAGE:** Set to **ON, CHANGE** or **OFF**. Factory Default = **ON**. Shortcut: **Enter Custom Message** and instructions, review the Utilities Section, **Enter Custom Message**.
- #42 FLASH LAMP POWER:** Set to **NORMAL, OFF** or **DIM**. Factory Default = **NORMAL**. When set to **DIM**, the Flash Lamps impulse power is reduced by 25% and when set to **OFF** the Flash Lamps will not flash. For Flash Lamps used in this game, **Go To Flash Lamps Menu** via the **DIAGNOSTICS MENU** (see the Diagnostics Section).
- #43 COIL PULSE POWER:** Set to **NORMAL, HARD** or **SOFT**. Factory Default = **NORMAL**. When set to **HARD**, the coil pulse power is **increased** by 12.5% of the normal pulse rate. When set to **SOFT** the coil pulse power is **decreased** by 12.5% of the normal pulse rate. This adjustment is provided to compensate for **Low Line** or **High Line voltage** conditions where the solenoids (coils) appear to **kicking too weak** or **too hard**. Adjust as required.
- #44 KNOCKER VOLUME:** Set to **NORMAL, OFF** or **LOW**. Factory Default = **NORMAL**. When set to **LOW**, the volume is decreased 50%. When set to **OFF**, no sound is heard when the "knocker" is sounded. Test the knocker sound in the **Fire Knocker Test** via the **DIAGNOSTICS MENU** (see Section 3, Chapter 2, **GO TO DIAGNOSTICS MENU**, Page 19).
- #45 GAME RESTART:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, a new game may be started during any ball after the first ball is completed (if credits allow). Pressing the **Start Button** during the first ball will add additional players (up to 4, if credits allow). When set to **NO**, the game disables the **Start Button** after the first ball until the final ball is in play.
- #46 BILL VALIDATOR:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **YES**, in **Game Attract Mode** an "Insert Bill Animation" is shown in the display (or just the absence of the Coin Animation). When set to **NO**, an "Insert Coin Animation" is shown. (This adjustment will appear when implemented).
- #47 MUSIC VOLUME:** Set between **1 – 15**. Factory Default = **1**. After volume is set via Service Buttons this adjustment can be utilized to adjust the background music (1 all the way on, 15 all the way off) while keeping the Special Sound Effects at the same level.
- #48 BALL SAVE TIME:** Set between **0:01 – 0:15, AUTO** or **NO BALL SAVES**. Factory Default = **0:05**. When set to **NO BALL SAVES** this feature is unavailable. Set between **0:01** through **0:15** (single increments) for the ball to be sent back into play if the time set is not met (per ball). Set to **AUTO** to automatically adjust the Ball Save Timer based on the average ball time.
- #49 TIMED PLUNGER:** Set to **OFF** or **0:01 – 1:00**. Factory Default = **OFF**. The plunger will "Autoplunge" the ball (at the time set) when the ball is at the beginning of play, waiting for the player.
- #50 FLIPPER BALL LAUNCH:** Set to **OFF, LEFT FLIPPER, RIGHT FLIPPER, EITHER FLIPPER** or **BOTH FLIPPERS**. Default is **OFF**. This feature allows the player to operate the Auto Ball Launch with the Flipper Button(s) depending on which setting is chosen.

Standard Adjustments 51-63 continued on the next page.



Standard Adjustments continued.

- #51 **COINDOOR BALL SAVER:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. When set to **YES**, this feature allows the Coin Door to be opened during game play; the ball will drain but the game will be placed "on hold". When the Coin Door is closed, the pinball will return to the Shooter Lane, and the game will resume. *Useful at locations where technicians change the cash box regularly at exact times of the day where players can be on the game.*
- #52 **COMPETITION MODE:** Set to **YES** or **NO**. Factory Default = **NO**. When set to **NO**, this feature is not available. Set to **YES**, this feature will equalize random game features and global score values during multi-player games by predetermined competition rules set by programming. If an **Install Competition** was made via the **INSTALLS MENU** (which automatically changes this setting to **YES**), and this setting was changed back to **NO**, the **Competition Mode** will be turned **OFF** (cancelled).
- #53 **CONSOLATION BALL:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **YES**, the **EXTRA BALL** (lamp insert, location varies) will be lit on the last ball in play, if certain programming criteria is met.
- #54 **FAST BOOT:** Set to **YES** or **NO**. Factory Default = **YES**. When set to **NO** or if you hold both **Flipper Buttons** during Power-Up, this feature is not available and will display all normal Power-Up screens. When set to **YES**, the game will not display the normal informative Power-Up screens, specifically the CPU Version screen and the Location/Game ID screen. Regardless of the setting, normal Power-Up safety checks are still performed. *(This adjustment will appear when implemented).*
- #55 **Q24 OPTION:** Set to **COIN METER**, **TOKEN DISPENSER** or **KNOCKER**. Factory Default = **COIN METER**. This Coil (Solenoid) Location is left "open" at the Factory to allow for these optional Mechanisms to be added to the game. If selecting **TOKEN DISPENSER**, Standard Adjustments 3, 14, 20 & 25 should be changed to **TOKEN**. Call Tech. Support at 1-800-542-5377 if more information is required on this option.
- #56 **TICKET DISPENSER:** Set to **YES** or **NO**. Factory Default = **NO**. This adjustment is required only for games which have an optional Deltronics (DL-1275-2 PCB Style, SPI Part Nr. 515-7275-00) Ticket Dispenser installed. Unique CPU Sound Bd. Dip Switch Setting required, changes the Default to **YES**.
- #57 **PLAYER COMPETITION:** Set to **YES** or **NO**. Factory Default = **YES**. **Competition Mode** unrandomizes feature events, and standardizes game play and rule sets (varies from game to game) for fair competitions. With at least one credit posted, or with the game set for 'FREE PLAY', during the game-over Attract Mode, press the **Left Flipper Button** and hold it in for approximately one second. The following message will appear on the display for approximately 10 seconds: '**COMPETITION MODE READY ... PRESS START NOW**'. If a game is started (either by pressing the 'START' button for a regular game, or by pressing the 'TOURNAMENT START' button for a tournament game) while this message appears on the display, then competition mode will be enabled for all players during the game. General rules are covered in the Instruction Card. Other Hints and/or Rules can be made known on this game either visually (the Dot Display or Flashing Light Inserts) or can be audible.
- #58 **TEAM SCORES:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, then Team Play will be made available. *Team Play only works in a 4-Player Game.* The totals for Players 1 / 3 (Team 1) & Players 2 / 4 (Team 2) are then displayed individually **as well as** the combined score for **BOTH TEAMS** to enable **Team Play (Doubles)**. *(This adjustment will appear when implemented).*
- #59 **LOCATION ID:** Set between 0 to 9999. Factory Default = 0. This adjustment allows the operator to assign a location identification number to the audit print-out sheet. *(Will not be affected by a Factory Reset.)*
- #60 **GAME ID:** Set between 0 to 9999. Factory Default = 0. This adjustment allows the operator to assign a game identification number to the audit print-out sheet. *(Will not be affected by a Factory Reset.)*
- #61 **TIME FORMAT:** Set to **12-HOUR** or **24-HOUR**. Factory Default = **12-HOUR**. This adjustments determines how the time is displayed. *Time used for Tournament and Data Dumps where a time stamp is required.*
- #62 **COIN INPUT DELAY:** Set between 30 to 60 or **OFF**. Factory Default = 30. This adjustment creates a short time delay between the moment the coin is inserted into the **Coin Slot** to the moment the CPU/Sound PCB registers the coin (30 = approximately 1/2 second).
- #63 **LOST BALL RECOVERY:** Set to **YES** or **NO**. Factory Default = **NO**. Set to **YES**, at the start of the 5th consecutive ball search (with no scoring between searches), the game will consider any balls in play to be permanently lost and will attempt to recover from this situation by serving a new ball into play from the ball trough. Set to **NO** (to suppress this adjustment behavior) for the game to perform the "ball search" indefinitely until the lost balls are found or replaced.

STANDARD ADJUSTMENTS [#1 – #63] ▼

Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING	Nr.	STANDARD ADJUSTMENT NAME	USA DEFAULT	YOUR SETTING
1	REPLAY TYPE	AUTO		32	HIGH SCORE #1	____,000,000	
2	‡ REPLAY PERCENTAGE	10%		33	HIGH SCORE #2	____,000,000	
3	‡ REPLAY AWARD	CREDIT		34	HIGH SCORE #3	____,000,000	
4	‡ REPLAY LEVELS	1		35	HIGH SCORE #4	____,000,000	
5	‡ AUTO REPLAY START	____,000,000		36	HSTD INITIALS	3 INITIALS	
6	‡ DYNAMIC REPLAY START	____,000,000		37	HSTD RESET COUNT	2000	
7	‡ REPLAY LEVEL #1	____,000,000		38	FREE PLAY	NO	
8	‡ REPLAY LEVEL #2	____,000,000		39	LANGUAGE	ENGLISH	
9	‡ REPLAY LEVEL #3	____,000,000		40	PLAYER LANGUAGE SELECT	YES	
10	‡ REPLAY LEVEL #4	____,000,000		41	CUSTOM MESSAGE	ON	
11	‡ REPLAY BOOST	YES		42	FLASH LAMP POWER	NORMAL	
12	SPECIAL LIMIT	1		43	COIL PULSE POWER	NORMAL	
13	‡ SPECIAL PERCENTAGE	10%		44	KNOCKER VOLUME	NORMAL	
14	SPECIAL AWARD	CREDIT		45	GAME RESTART	YES	
15	FREE GAME LIMIT	5		46	BILL VALIDATOR	NO	
16	EXTRA BALL LIMIT	5		47	MUSIC VOLUME	1	
17	‡ EXTRA BALL PERCENTAGE	25%		48	BALL SAVE TIME	0:05	
18	GAME PRICING	USA 10		49	TIMED PLUNGER	OFF	
19	MATCH PERCENTAGE	9%		50	FLIPPER BALL LAUNCH	OFF	
20	MATCH AWARD	CREDIT		51	COINDOOR BALL SAVER	NO	
21	BALLS PER GAME	3		52	COMPETITION MODE	NO	
22	TILT WARNINGS	2		53	CONSOLATION BALL	YES	
23	CREDIT LIMIT	30		54	FAST BOOT	YES	
24	ALLOW HIGH SCORES	YES		55	Q24 OPTION	COIN METER	
25	HIGH SCORE AWARD	CREDIT		56	TICKET DISPENSER	NO	
26	GRAND CHAMPION AWARDS	1		57	PLAYER COMPETITION	YES	
27	HIGH SCORE #1 AWARDS	1		58	TEAM SCORES	NO	
28	HIGH SCORE #2 AWARDS	0		59	LOCATION ID	0	
29	HIGH SCORE #3 AWARDS	0		60	GAME ID	0	
30	HIGH SCORE #4 AWARDS	0		61	TIME FORMAT	12-HOUR	
31	GRAND CHAMPION SCORE	____,000,000		62	COIN INPUT DELAY	30	
				63	LOST BALL RECOVERY	YES	

Factory Defaults Settings are subject to change during production (especially Standard Adjustments 2, 4, 5, 13, 16-17, 19, 31-35 & 47).

‡ Not all Standard Adjustments are shown. Depending on the setting (whether Factory Default or if changed by the operator), associated adjustments do not appear, if not required. **Note:** If Game Dip Switch other than USA is installed, different Defaults will appear.

Feature Adjustments [#1 – #+]

GAME To initiate, from the **ADJUSTMENTS MENU**, select the "GAME" icon. The Dot Matrix Display will indicate the adjustment number (in this group), adjust. name, adjust. setting and comment line. The current adjustment will remain on the display until the next adjustment is viewed or when this sub-menu is exited.

>>> **FACTORY RESET or CODE UPDATE NOTE:** Don't forget, any changes you make to your adjustments will revert back to the Factory Default settings if you perform a Factory Reset or update your Game Code. See Utilities Section (**GO TO RESETS MENU** and **GO TO USB MENU**).

View the Coils Detailed Chart Menu to see if this game is Shaker Motor Enabled. If it is, set the options in the Feature Adjustment as seen below. (typically the last one).

SHAKER MOTOR (OPTIONAL) : Set to **NONE, MINIMAL USE, MODERATE USE** or **MAXIMAL USE**.
 Factory Default = **MODERATE USE**. Set to any of the varying "... USES" if an Optional Shaker Motor Kit (SPI Part Number 502-5027-00) was installed correctly in this pinball machine. See the assembly (kit) on the last page of Blue Pages (Major Assemblies). Also see Shaker Motor Coil (Q8) in the Coils Detailed Chart Table at the beginning of this Service Game Manual or the beginning of the Yellow Pages.



To initiate, from the **MAIN MENU**, select the **"UTIL"** icon. The **UTILITIES MENU** provides ways to quickly and easily customize your game with **Installs** (pre-sets for game **Standard & Feature Adjustments**), set-up a **Custom Message** (short-cut to **Standard Adjustment 41, Custom Message**), set-up **Custom Pricing** (short-cut to **Standard Adjustment 18, to the Custom Pricing Sub-Menu**), set-up the **Date and Time** (required if the date and time is needed to be accurate for data dumps and for tournaments), reset certain particular game data or perform a complete **Factory Reset** and to download game data, update or backup game code in the **USB MENU**.

All **UTILITIES, INSTALLS, RESETS MENU** and **USB MENU** icons and there usages are explained throughout this chapter in the same order as seen in the Dot Matrix Display. **NOTE:** Depending on Game Type, Version, selections made, Dip Switch settings, location and/or areas, some icons may appear non-functional or may not appear at all. **Installs (Adjustments), Icons and/or functions, order and operation are subject to change. If in doubt use the Factory Default Settings (review Install Factory on the next page).**

In displays where changes can be made or to perform a function, use the **GREEN** Button to go [**BACK**], exit or escape, the **RED** Buttons to [**< / -**] **MOVE BACK / LEFT** / [**+ / >**] **MOVE FORWARD / RIGHT** to view the next audit in the group, and the **BLACK** Button to [**SELECT**] the sub-menus.

Go To Installs Menu

To initiate, from the **UTILITIES MENU**, select the **"INST"** icon. The **INSTALLS MENU** provides 13 **Installs** to vary **Game Play Difficulty** (set with **Feature Adjustments**) or **Game Play Type** and **Install Factory** (restores all adjustments to **Factory Defaults**).

For detailed customization or to check current **Adjustments Defaults** (either changed by **YOU** in the **Adjustments Menu** or by this **INSTALLS MENU** or for **Factory Default Settings**), see **Section 3, Chapter 4, GO TO ADJUSTMENTS MENU**. After completing one or more of the **Installs** in this chapter, go back to the **ADJUSTMENTS MENU** to see which **Standard and/or Feature Adjustments** have changed (**Feature Adjustments and/or settings are subject to change during production, and may differ than what is described in the tables at the end of this chapter**). The Dot Display will indicate if a setting is a **Factory Default** or not. If the settings are not to your liking, perform one of the following:

- 1.: **Manually change the Standard & Feature Adjustments Settings** (perform this task in the **ADJUSTMENTS MENU**, see the **Adjustments Section**).
- 2.: **Install Factory** (see the last install) on how to reset all of the **Standard & Feature Adjustments** back to the **Factory Default Settings**.

Multiple **Installs** can be set to vary game play; however, for **Installs** that have one or more **Adjustments** in common, the **last "Install"** selected & **activated**, will **supersede** any previously changed **Adjustment(s)** from any prior **Installs**. Any adjustments which you changed and are not affected by the **Install** will remain as set.

For example, if you want a **5-BALL Game** set to **EXTRA EASY**: Select and **activate** the **"5BAL"** icon first (which will typically change any **Feature Difficulty Adjustments** to **HARD**), then select & **activate** the **"X.EZ"** icon to **change back** the **Difficulty Adjustments** to **EXTRA EASY**. However, if the **"X.EZ"** icon was selected & **activated** first, then the **"5BAL"** icon was selected & **activated**, the game will be set to a **5-BALL Game** set to **HARD**.

Remember, use the **GREEN** Button to go [**BACK**], exit or escape and the **BLACK** Button to [**SELECT**] to **INSTALL** your new setting(s).

Install Extra Easy

To initiate, from the **INSTALLS MENU**, select the **"X.EZ"** icon. The Dot Matrix Display will indicate the **INSTALL EXTRA EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.

Installs Menu continued on the next page.



Install Easy

To initiate, from the **INSTALLS MENU**, select the "EASY" *Icon*. The Dot Matrix Display will indicate the **INSTALL EASY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Medium (Normal or Factory Settings)

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL MEDIUM**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Hard

To initiate, from the **INSTALLS MENU**, select the "HARD" *Icon*. The Dot Matrix Display will indicate the **INSTALL HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install Extra Hard

To initiate, from the **INSTALLS MENU**, select the "X.HD" *Icon*. The Dot Matrix Display will indicate the **INSTALL EXTRA HARD**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Difficulty** level.



Install 3-Ball or 5-Ball

To initiate, from the **INSTALLS MENU**, select either the "3BAL" or "5BAL" *Icons*. The Dot Matrix Display will indicate the **INSTALL 3-BALL** or **5-BALL** depending on choice. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to 3 Balls per game (Factory Default is 3 Balls per game, not including extra balls earned by the player, if any).



Install Competition

To initiate, from the **INSTALLS MENU**, select the "COMP" *Icon*. The Dot Matrix Display will indicate the **INSTALL COMPETITION**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Tournament" Rules. *Programming varies and is subject to change.*



Install Director's Cut

To initiate, from the **INSTALLS MENU**, select the "DCUT" *Icon*. The Dot Matrix Display will indicate the **INSTALL DIRECTOR'S CUT**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to programmer's choice. *Programming varies and is subject to change.*



Install Home Play

To initiate, from the **INSTALLS MENU**, select the "HOME" *Icon*. The Dot Matrix Display will indicate the **INSTALL HOME PLAY**. Follow the on-screen prompts to perform the **Install**. Set the **Game Play Type** to "Home" Rules. *Programming varies and is subject to change.*



Install Novelty

To initiate, from the **INSTALLS MENU**, select the "NOV" *Icon*. The Dot Matrix Display will indicate the **INSTALL NOVELTY**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****
Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Add-A-Ball

To initiate, from the **INSTALLS MENU**, select the "A.A.B." *Icon*. The Dot Matrix Display will indicate the **INSTALL ADD-A-BALL**. Follow the on-screen prompts to perform the **Install**.

***** This setting is recommended where local laws restrict certain game features. *****
Set the **Game Play Type** to "Restricted" Rules. *Programming varies and is subject to change.*



Install Factory

To initiate, from the **INSTALLS MENU**, select the "FACT" *Icon*. The Dot Matrix Display will indicate the **INSTALL FACTORY**. Follow the on-screen prompts to perform the **Install**. **CAUTION!** All **Standard and Feature Adjustments** which were changed in the **INSTALLS MENU** or **ADJUSTMENTS MENU** are returned to the **Factory Defaults** (as indicated in the Dot Display in the **ADJUSTMENTS MENU**). *Note: To perform a complete Factory Reset, GO TO THE RESETS MENU. Escape back to the UTILITIES MENU, select the "RESET" Icon, then select the "FACT" Icon in the RESETS MENU (review the end of this section, Reset Factory Settings).*



Enter Custom Message

To initiate, from the **UTILITIES MENU**, select the "ABCD CUST MSG" icon. The **SET CUSTOM MESSAGE** (a short-cut for Standard Adjustment 41, *Custom Message*) provides an opportunity to have a text message appear in the the **Attract Mode**. Follow the on-screen prompts to complete [END].

Remember, use the **GREEN** Button to go [BACK], exit or escape, the **RED** Buttons to [</-] MOVE LEFT / CHOOSE NEXT [+/>] MOVE RIGHT / CHOOSE PREVIOUS, and the **BLACK** Button to [SELECT] as 'OK'.



Set Custom Pricing

To initiate, from the **UTILITIES MENU**, select the "PRIC" icon. The **CUSTOM PRICING MENU** (a short-cut for Standard Adjustment 18, *Game Pricing*, and setting selected is **CUSTOM**) provides an opportunity to set **Custom Pricing**.

Note ! MONETARY AMOUNT MUST BE SELECTED FIRST! Press [BACK] to - DECREASE or [SELECT] to + INCREASE the [< \$ >] monetary amount (e.g. look at the right side of the display from \$0.25 to \$0.50). Press [</-] to - DECREASE or [+/>] to + INCREASE the credit quantity (e.g. look at the left side of the display from 0 CREDITS AT: to 1 CREDIT AT:).

REMINDER
In these menus:

Press [BACK] to - DECREASE [< \$]

Press [SELECT] to + INCREASE [\$ >]

IF EXAMPLE CUSTOM PRICING SETTING DESIRED IS :

1 Play for \$0.50, 3 Plays for \$1.00 and 7 Plays for \$2.00

THEN YOU WILL NEED TO PERFORM THE FOLLOWING :

Step 1 The starting display appears as below if no prior Custom Pricing was installed.

```

CUSTOM PRICING
0 CREDITS AT:          $0.25
USE -/ + TO CHANGE CREDITS
    
```

Step 2 Press [SELECT] to + INCREASE to \$0.50.
Press [+/>] to + INCREASE to 1 CREDIT AT:

```

CUSTOM PRICING
1 CREDIT AT:          $0.50
1/0.50
USE -/ + TO 'INSTALL'
    
```

Step 3 Press [SELECT] to + INCREASE to \$1.00.
Press [+/>] to + INCREASE to 2 CREDITS AT:

```

CUSTOM PRICING
2 CREDITS AT:          $1.00
1/0.50 3/1.00
USE -/ + TO CHANGE CREDITS
    
```

Step 4 Press [SELECT] to + INCREASE to \$2.00.
Press [+/>] to + INCREASE to 4 CREDITS AT:

```

CUSTOM PRICING
4 CREDITS AT:          $2.00
1/0.50 3/1.00 7/2.00
USE -/ + TO CHANGE CREDITS
    
```

Step 5 Press [SELECT] to + INCREASE the amount once (example = \$2.25).

```

CUSTOM PRICING
0 CREDITS AT:          $2.25
1/0.50 3/1.00 7/2.00
USE -/ + TO 'INSTALL'
    
```

Press [</-] once or press [+/>] eleven times until **INSTALL** appears.

Step 6 Press [SELECT] to **INSTALL**.
Press [</-]/[+/>] or [BACK] to edit.

```

CUSTOM PRICING
INSTALL
1/0.50 3/1.00 7/2.00
PRESS 'SELECT' TO INSTALL
    
```

Step 7 Press [SELECT], press [BACK] twice to exit the **SERVICE MENU** with your **Custom Pricing** installed.

```

CUSTOM PRICING
INSTALLED
PRESS 'SELECT' TO CONTINUE
    
```

To correct or make new changes, reenter, which brings you to **Step 6**. Press [BACK] repeatedly until the monetary amount shown is the desired amount and then continue following the above steps with your new or corrected settings. If you are still having difficulty or if you have any questions, please call Technical Support 800-542-5377 or 708-345-7700, option 1.



Set Date / Time

To initiate, from the **UTILITIES MENU**, select the "TIME" *Icon*. The **SET TIME MENU** appears with the **MONTH** flashing. Setting the date and time is required for 'Data Dumps' and Tournament Start and End Dates. If the setting of Standard Adjustment 61, **Time Format**, is set to **12-HOUR** (*Factory Default*) the time will be expressed in the **AM / PM** format. If Standard Adjustment 61, **Time Format**, is set to **24-HOUR** the time will be expressed in the **24-hour** format.



Go To Resets Menu

To initiate, from the **UTILITIES MENU**, select the "RESET" *Icon*. The **RESETS MENU** provides six (6) functions to reset *only the Coin Audits*, reset *only the Game Audits*, reset *only the Grand Champion Score*, reset *only the High Score(s)*, reset *only the paid Credits (includes Service Credits)* or to reset **ALL DATA** back to the **Factory Default Settings**.



Reset Coin Audits

To initiate, from the **RESET MENU**, select the "COIN" *Icon*. **ONLY** the **Coin Audits** [Earnings Audits 5–12], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Game Audits

To initiate, from the **RESET MENU**, select the "AUD" *Icon*. **ONLY** the **Game Audits** [Earnings Audits 1–4, Standard Audits 1–59 and Feature Audits 1–XX*], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**. *varies per game title.



Reset Grand Champion (Score)

To initiate, from the **RESET MENU**, select the "GC" *Icon*. **ONLY** the **Grand Champion Score** [adjustable via Standard Adjustment 31], will be reset to *Factory Default Setting*. Follow the on-screen prompts to perform the **Reset**.



Reset High Scores

To initiate, from the **RESET MENU**, select the "HSTD" *Icon*. **ONLY** the **High Score(s)** [adjustable via Standard Adjustments 32–35], will be reset to *Factory Default Setting(s)*. Follow the on-screen prompts to perform the **Reset**. *Note: High Scores (but not Grand Champion Score) are reset automatically every 2,000 games (Factory Default Setting) [adjustable via Standard Adjustment 37, HSTD Reset Count].*



Reset Credits

To initiate, from the **RESET MENU**, select the "CRED" *Icon*. **ONLY** the **Credits** (*includes Service Credits*) [adjustable via Standard Adjustment 23, **Credit Limit**], will be reset to zero (0), *Factory Default Settings*. Follow the on-screen prompts to perform the **Reset**.



Reset Factory Settings

To initiate, from the **RESET MENU**, select the "FACT" *Icon*. **ALL GAME DATA IS RESET!** (*with the exception of Earnings Audit 13, Software Meter*). **NOTE: IF YOU HAD SET-UP CUSTOM PRICING OR HAD CHANGED ANY ADJUSTMENTS OR PERFORMED INSTALLS, IT IS SUGGESTED TO WRITE DOWN YOUR CHANGES PRIOR TO THE FACTORY RESET.** Follow the on-screen prompts to perform the **Reset**.



Go To USB Menu

To initiate, from the **UTILITIES MENU**, select the "USB" *Icon*. The **USB MENU** provides three (3) functions to download game data, update your game code or backup your code onto a USB Memory Stick. *Review the inside cover for information on how to update your game code.*



Update Game Code

To initiate, from the **USB MENU**, select the "UPDT" *Icon*. Follow the on-screen prompts or review the inside cover for more information.



Dump Audits to USB

To initiate, from the **USB MENU**, select the "DUMP" *Icon*. Follow the on-screen prompts to perform a **Data Dump** (download). *Note: If Icon is not present, access via the Audits Menu, see the Audits Section.*



Backup to USB Memory Stick

To initiate, from the **USB MENU**, select the "BKUP" *Icon*. Follow the on-screen prompts to perform a **Backup** (game code only). This backup feature does not retain adjustments and/or settings changes made.

Backbox Wiring

- ▶ Coils Detailed Chart Table
- ▶ Backbox I/O Power Driver Board Detailed Wiring Diagram
- ▶ Backbox Board Layout Wiring Diagram
 - ▷ 128 X 32 Dot Matrix Display PCB (USA)..... 520-5052-00
 - ▷ 128 X 32 Dot Matrix CES-LED // EURO ONLY RoHS //..... 520-5052-05



Playfield Wiring

- ▶ General Illumination Circuit Detailed Wiring Diagram
- ▶ Playfield Switch Wiring Diagram
- ▶ Playfield Lamp Wiring Diagram
- ▶ Playfield Terminal Strips, Fuses & Misc. Wiring Descriptions & Locations
- ▶ #-Flipper Circuit Wiring Diagram


Cabinet and Coin Door Wiring

- ▶ Transformer Power Wiring Diagram
- ▶ Cabinet Wiring Diagram
- ▶ Coin Door Wiring Diagram
- ▶ Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)


Backbox Board Layout Wiring Diagram

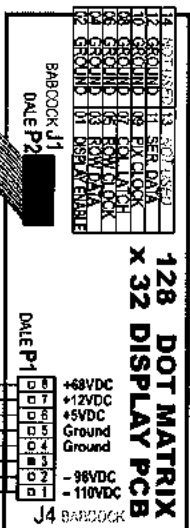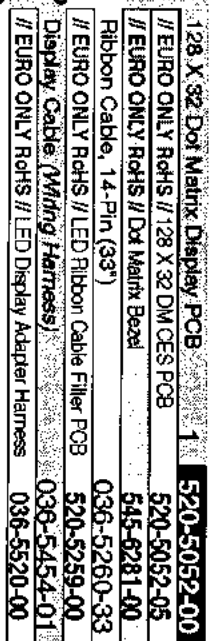

CN1 to Transformer (Cabinet)

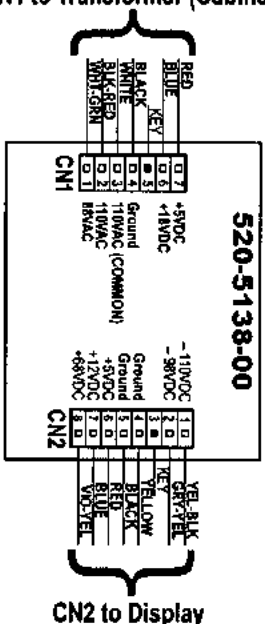

DISPLAY POWER SUPPLY PCB




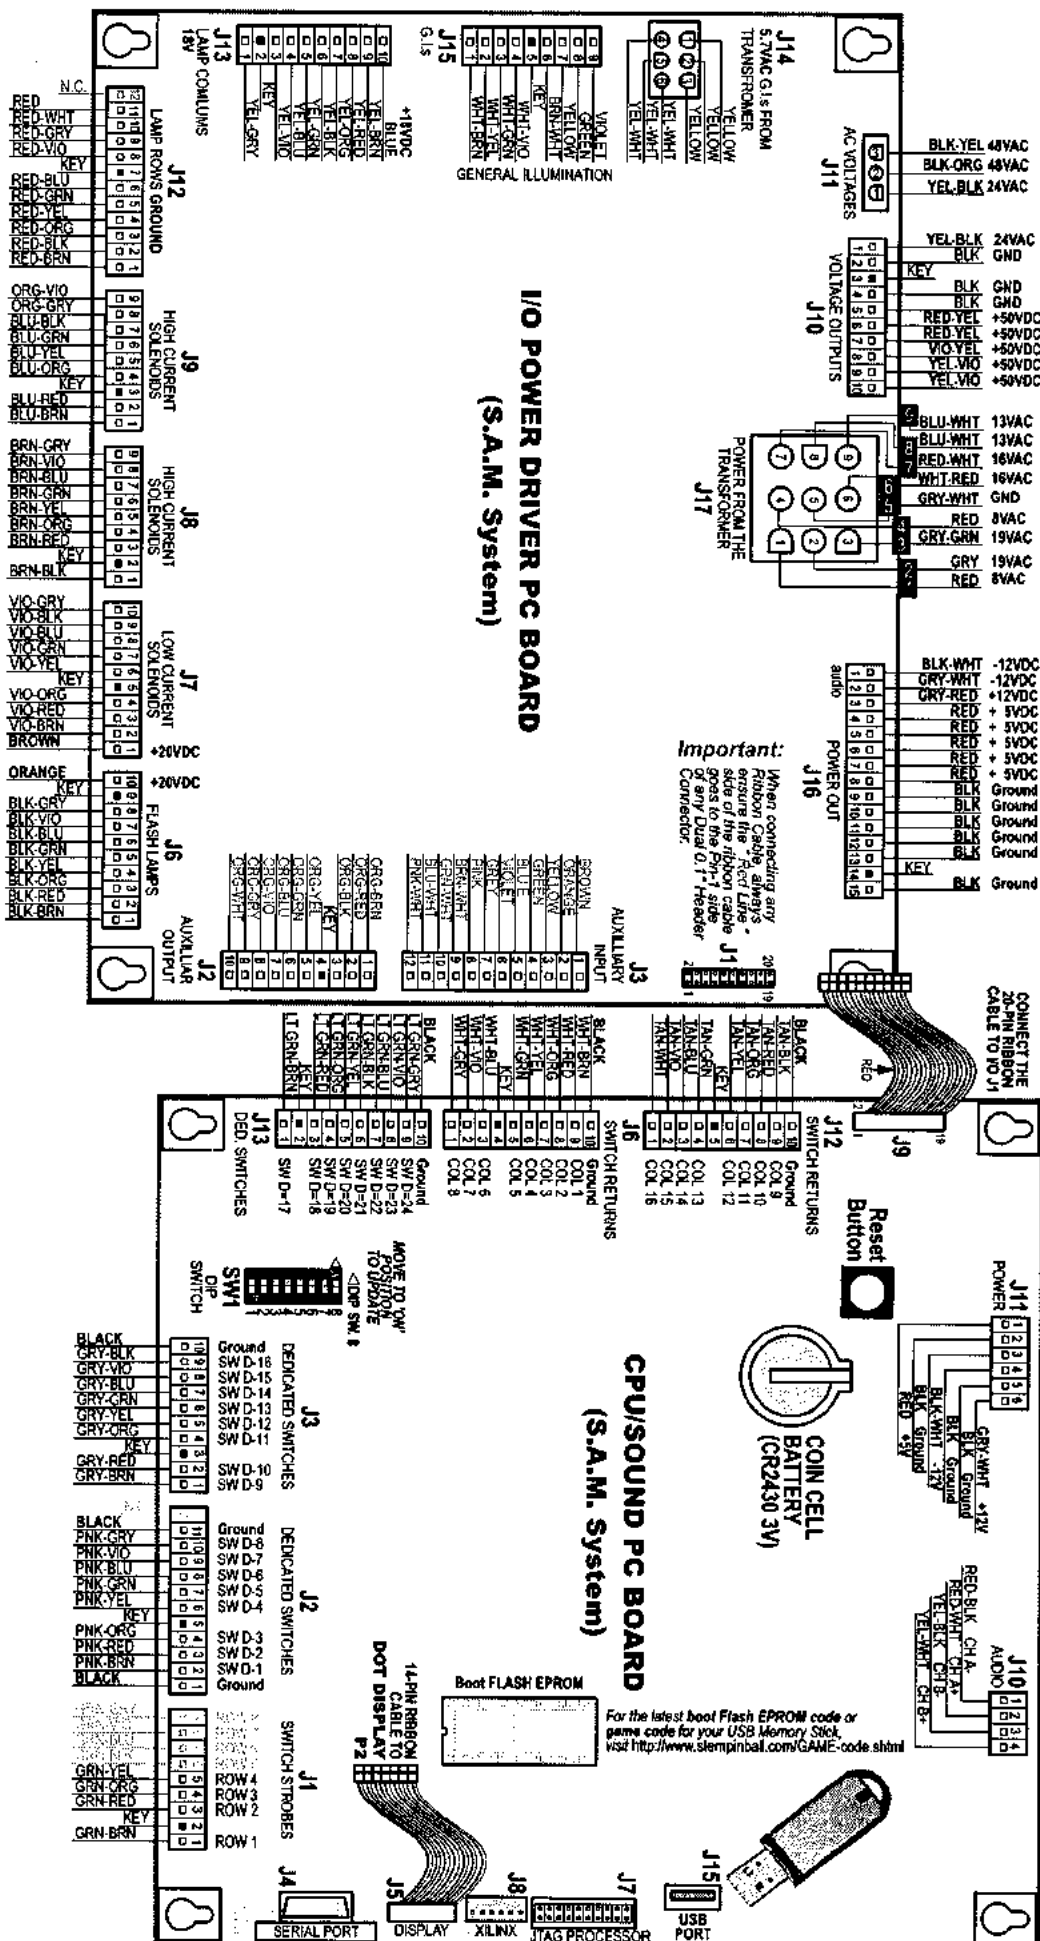


Backbox Wiring

CRIME SCENE INVESTIGATION


General Illumination Circuit Detailed Wiring Diagram

Partial View I/O Power Driver PCB
(520-5249-00)

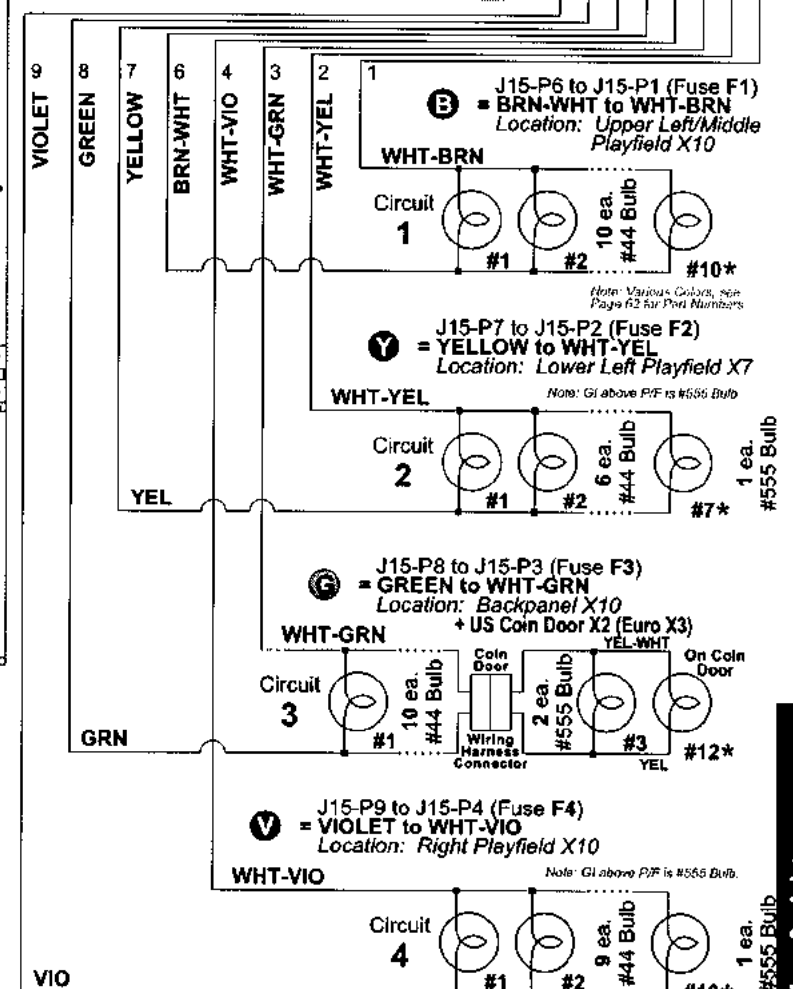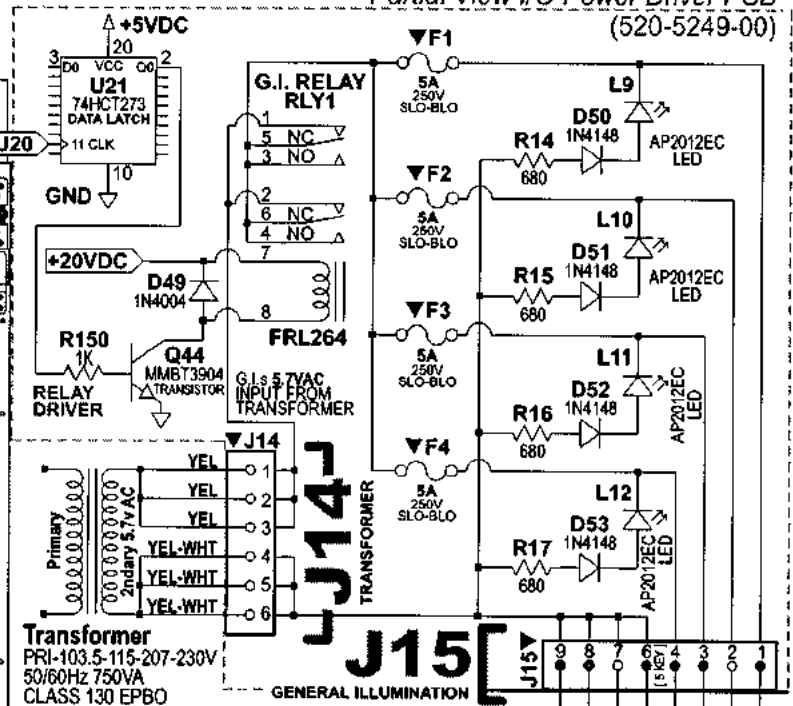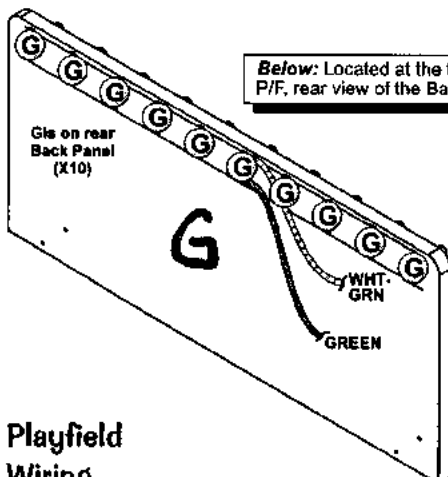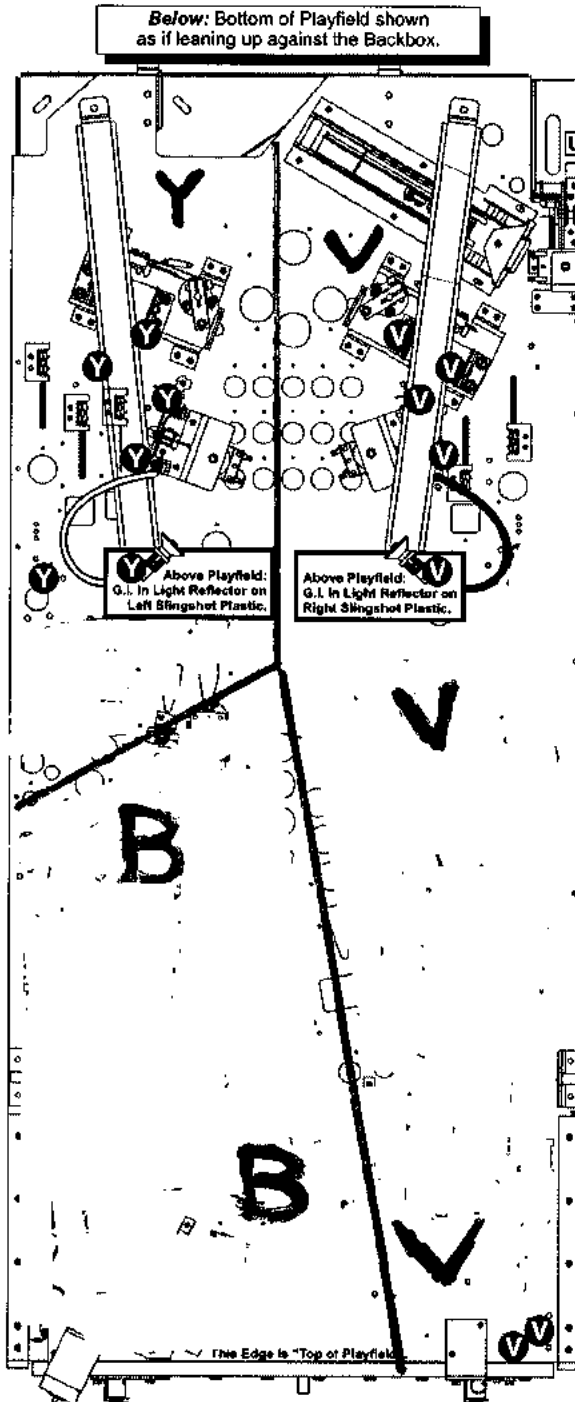

* G.I. Bulb quantities may change during production.

Playfield Switch Wiring Diagram

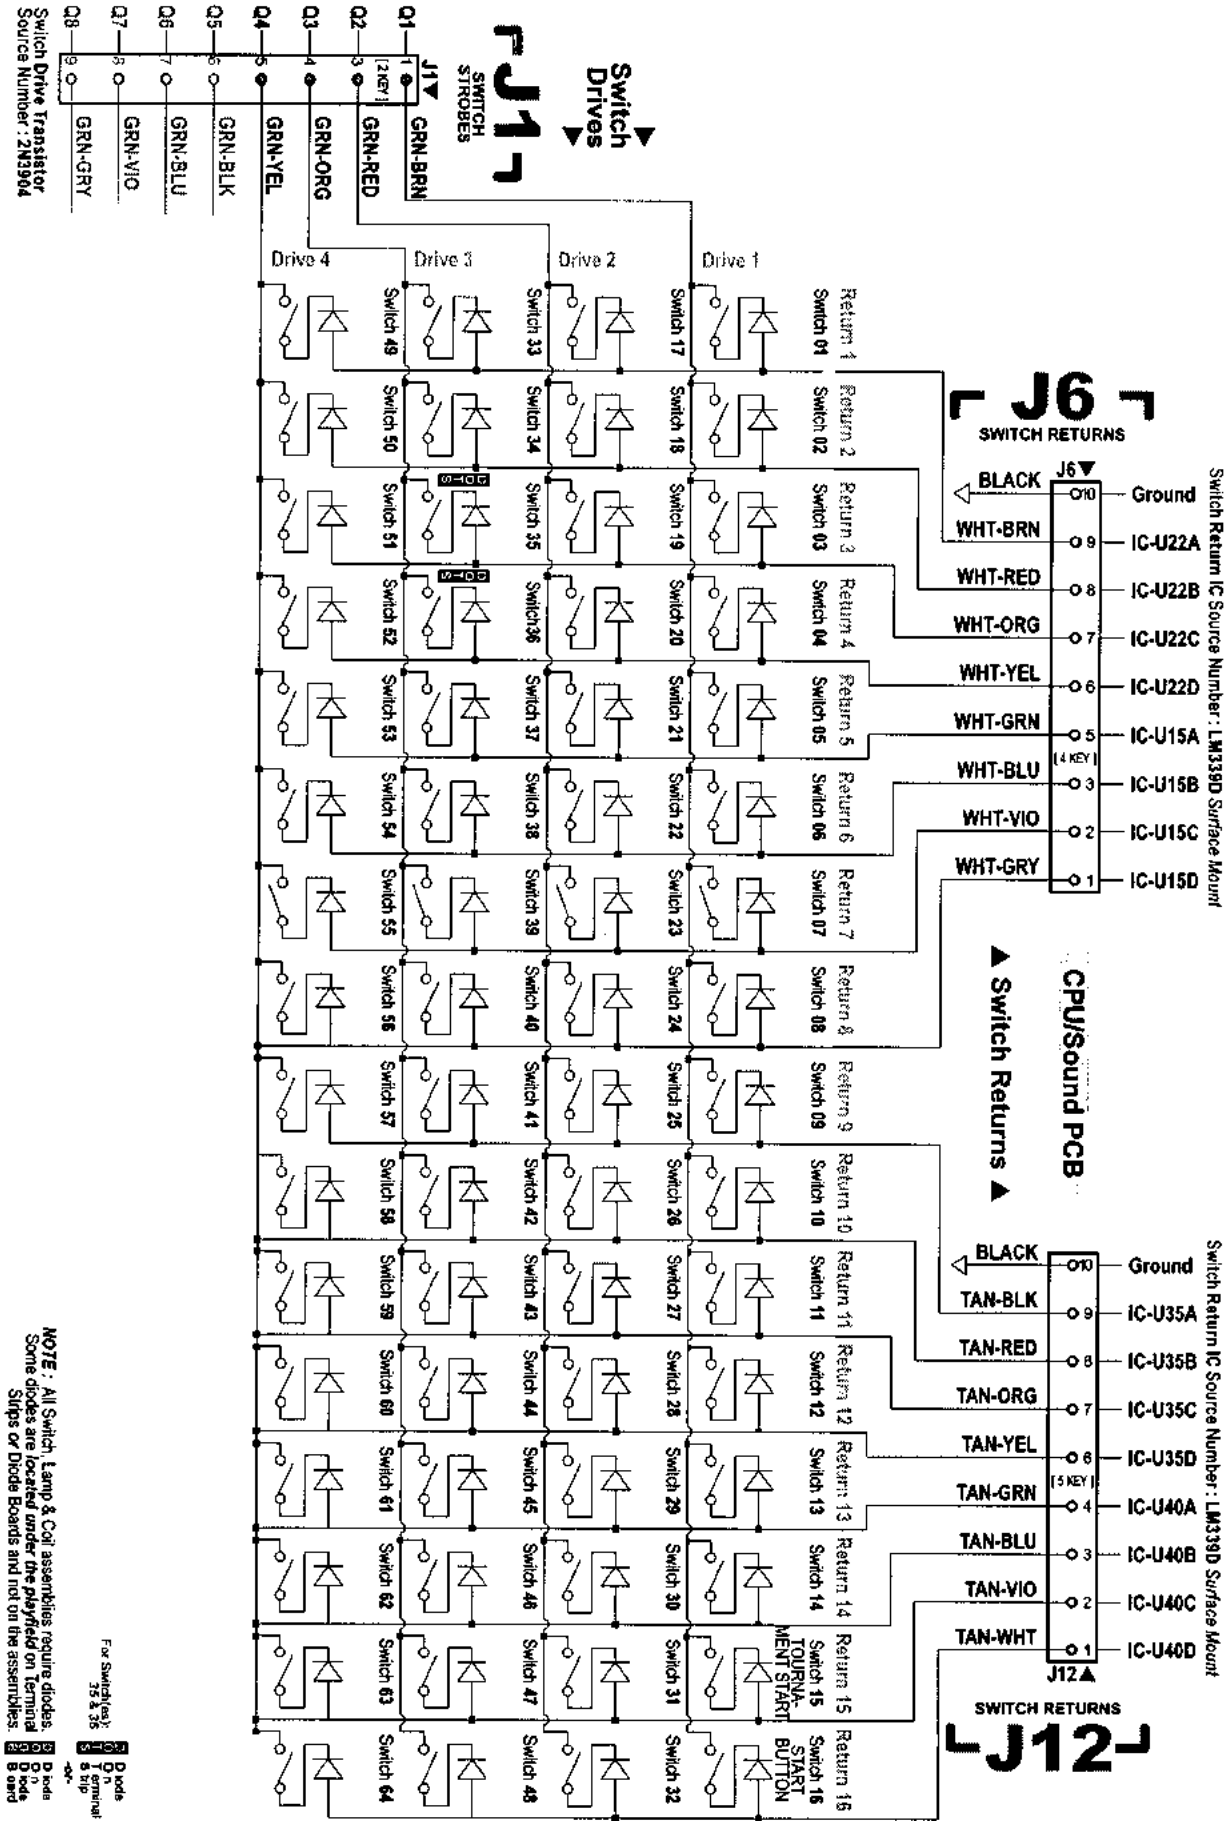


Please Note: Switch & Lamp Descriptions are subject to change without notice. The data is subject to change without notice.

Playfield Wiring



Playfield Wiring

Cabinet Wiring Diagram

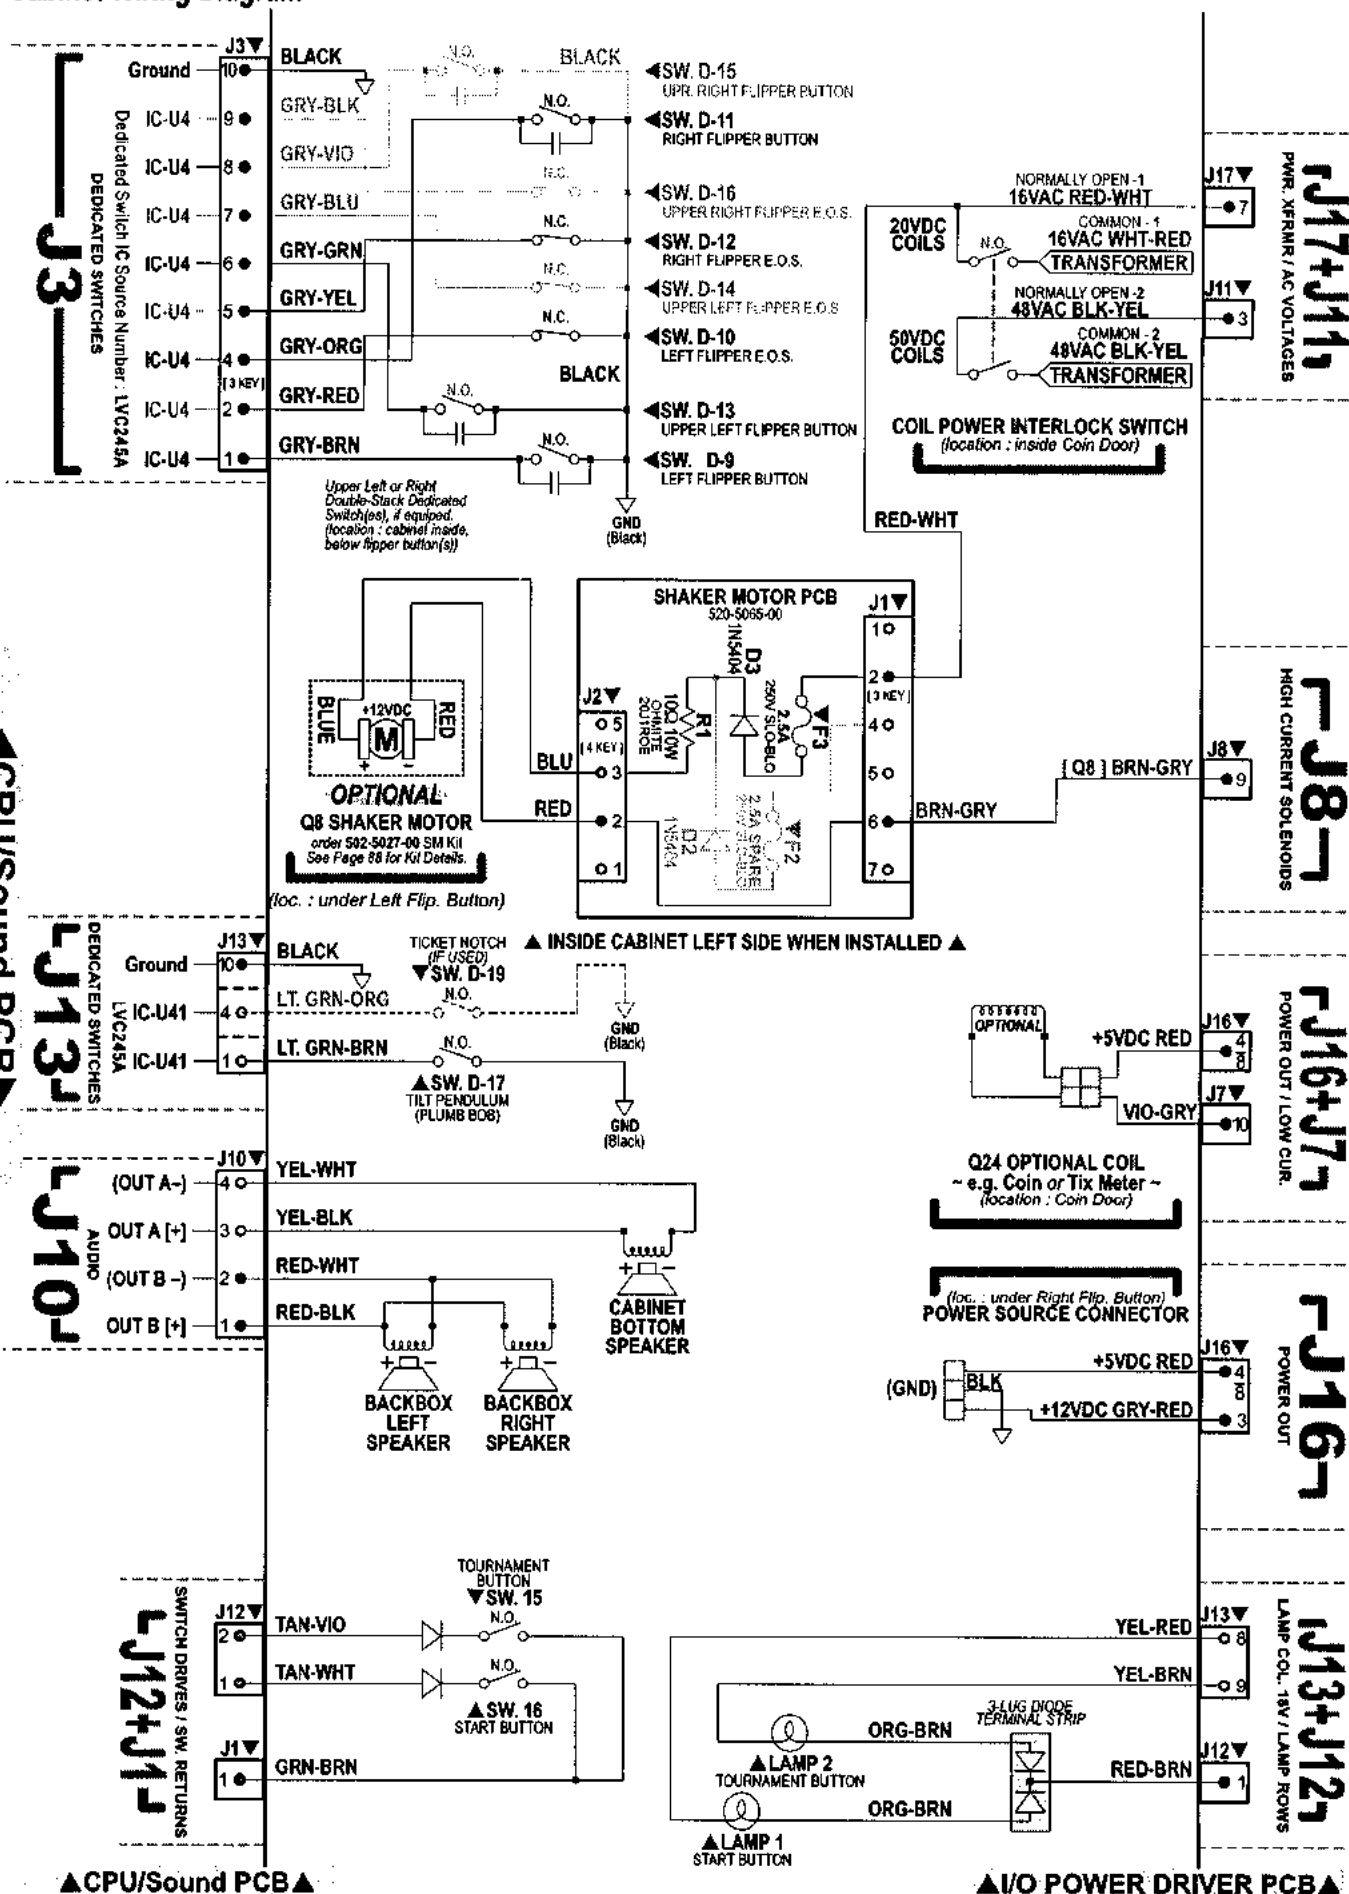

Cabinet and Coin Door Wiring

#-Flipper Circuit Wiring Diagram

Partial View CPU/Sound
PCB (520-5246-00)


Dedicated Switch IC
Source Number: LVC245A

J3

DEDICATED SWITCHES

CPU/Sound PCB

The Outside **LEFT FLIPPER BUTTON** located on the Cabinet operates both the Left Flipper & Upper Left Flipper, if used. The Outside **RIGHT FLIPPER BUTTON** located on the Cabinet operates both the Right Flipper & Upper Right Flipper, if used. **RIGHT & LEFT BUTTONS:** These switches are **Double-stacked**. Pressing half-way down operates the Lower Flippers (respectively); pressing full down operates both the Lower Flipper & Upper Flippers (respectively) simultaneously.

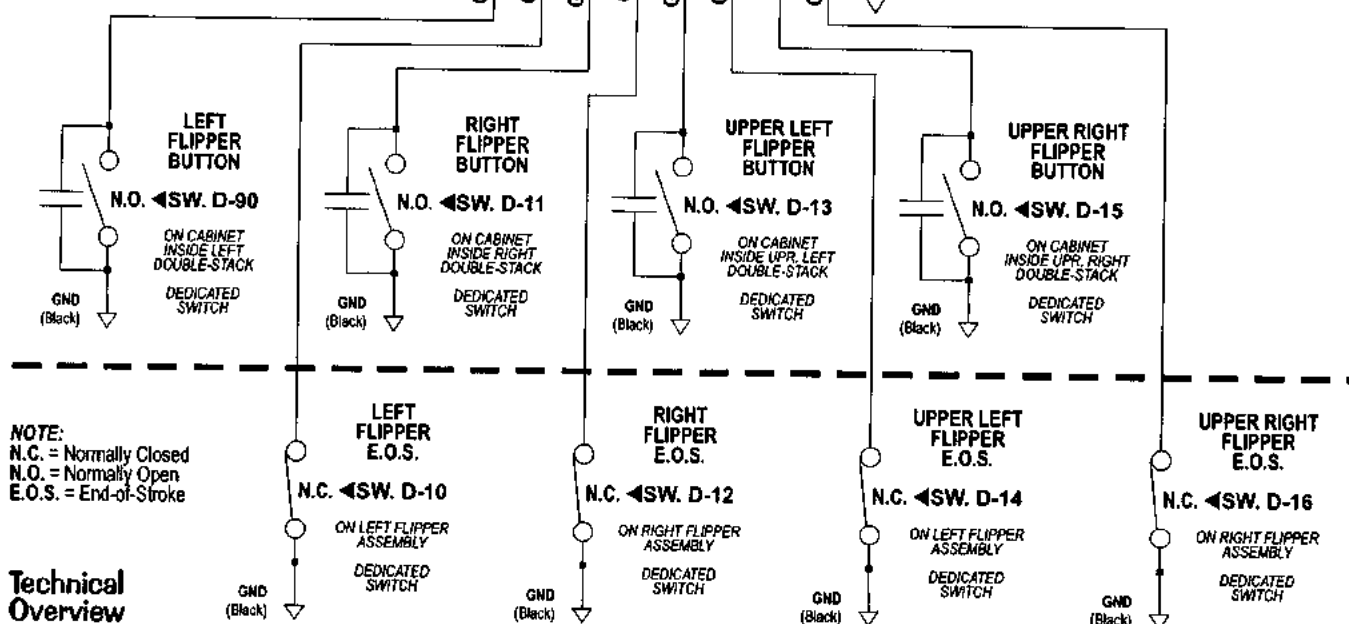

Technical Overview


Our **Flipper System** uses one supply voltage (+50VDC) for both **kick & hold**. Once the **Game CPU** detects a Flipper Cabinet Switch closure (*during game play*) it applies a 40msec pulse to the gate of the Flipper Drive Transistor (STP22NE10L). If it continues to detect a Flipper Cabinet Switch closure (*the player holding the button in*) it will continue to pulse the flipper drive transistor 1msec every 12msecs for the duration of the hold cycle.

J10
VOLTAGE OUTPUTS

The **E.O.S. (End-Of-Stroke) Switch** serves the same function as before as it prevents foldback when the player has the flipper energized to capture balls. The **E.O.S. Dedicated Switch** is a normally closed switch which opens approximately 1/16" when the flipper is energized. The **Game CPU** will detect a switch closure if the flipper bat is forced back by a high velocity shot or rebound on the playfield and will apply another 40msec pulse of 50VDC to the coil.

Partial View I/O
Power Driver PCB
(520-5249-00)

I/O POWER DRIVER PCB

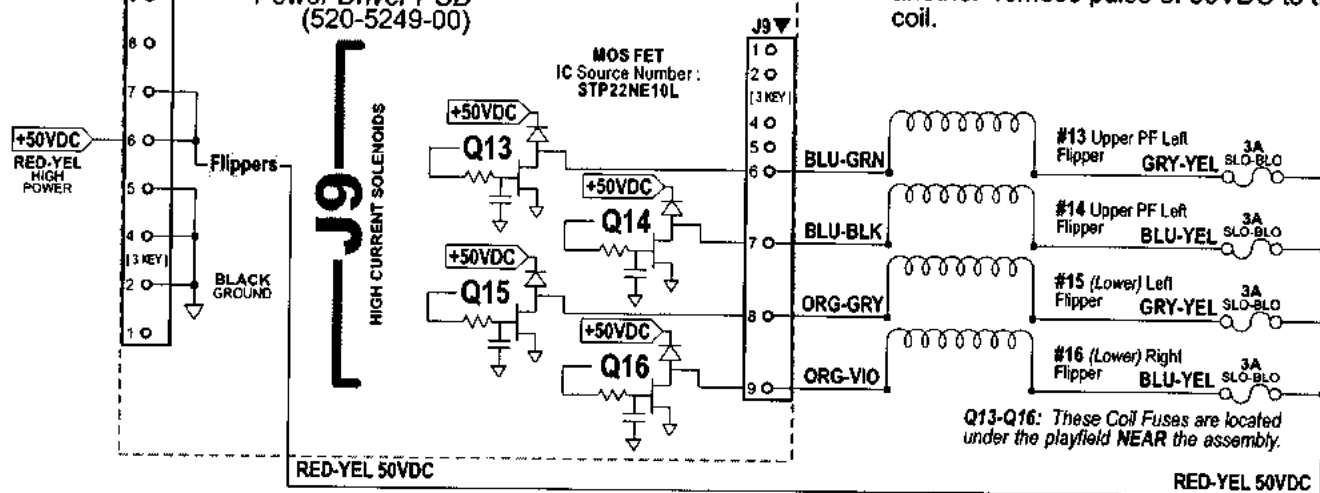


Typical Under-
Playfield Fuses are rated:
3A 250v SLO-BLO
Do Not Over-Fuse


Playfield
Wiring

NOTE:
Coil Diodes (1N4004) are integrated on the I/O Power Driver PCB. See Coils Detailed Wiring Diagram for actual number of flippers used on this game.

Coin Door Wiring Diagram

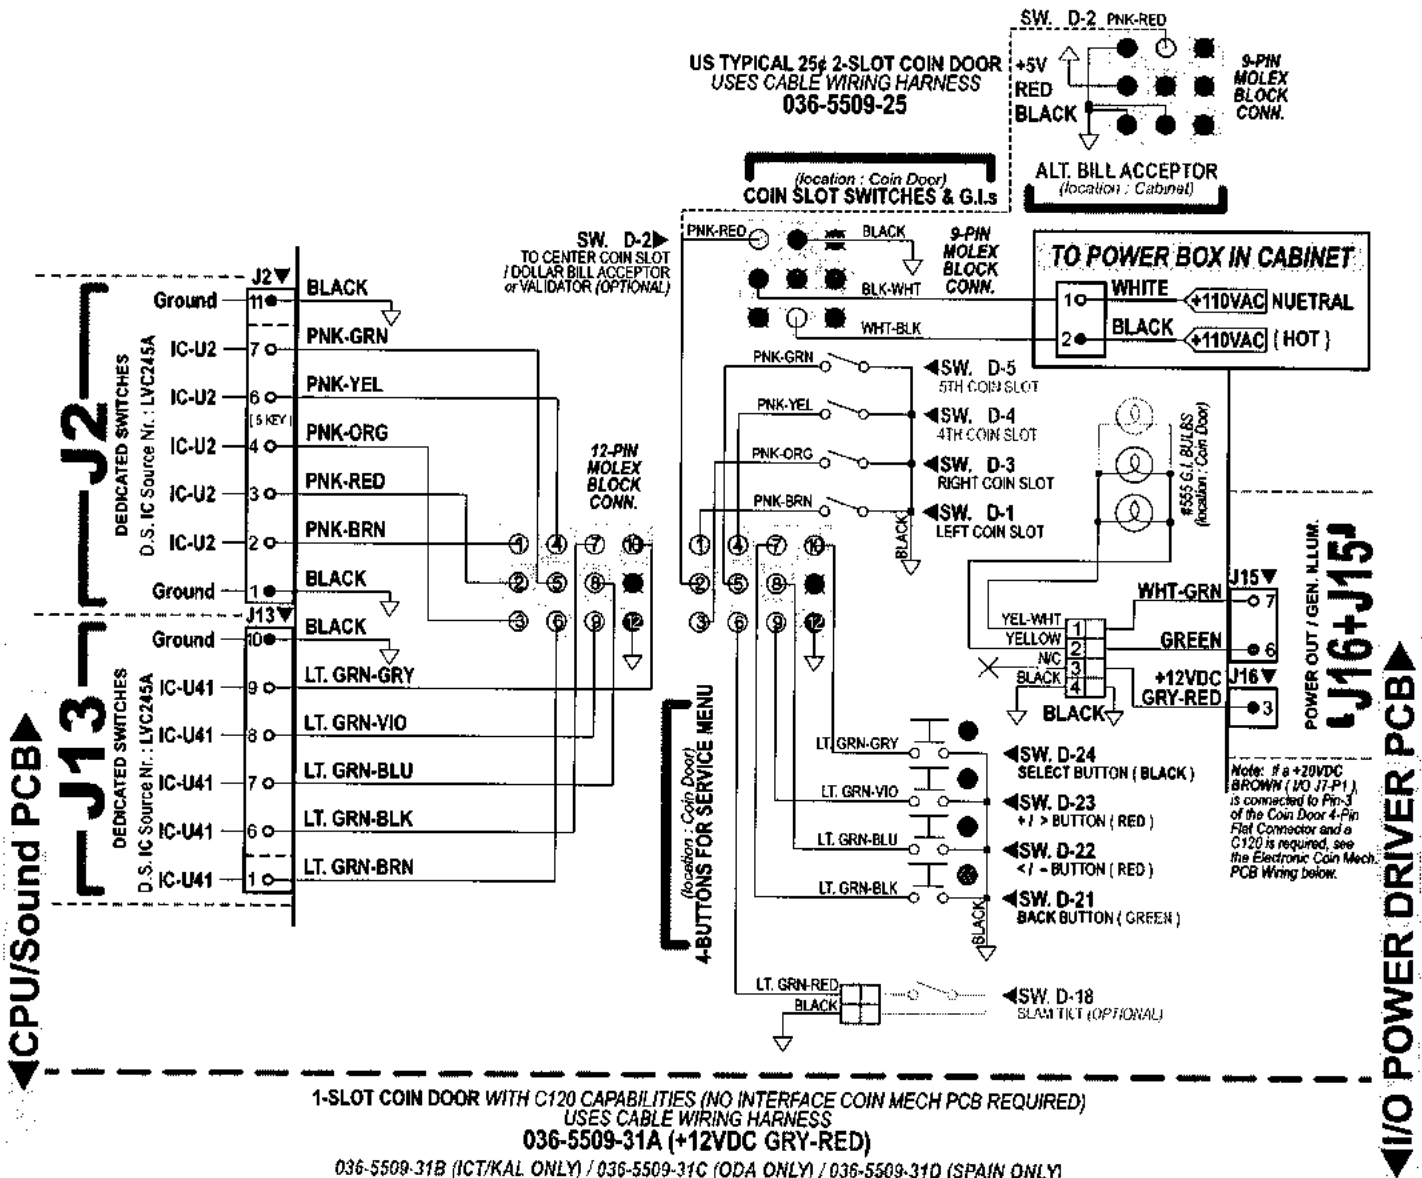

IF YOUR GAME HAS AN ELECTRONIC COIN MECH. INTERFACE PC BOARD (520-5193-00):
1-SLOT COIN DOOR USE WITH C120 CAPABILITIES REQUIRING PCB 520-5193-00
USES CABLE WIRING HARNESS
036-5509-31 (S.A.M. SYSTEM)


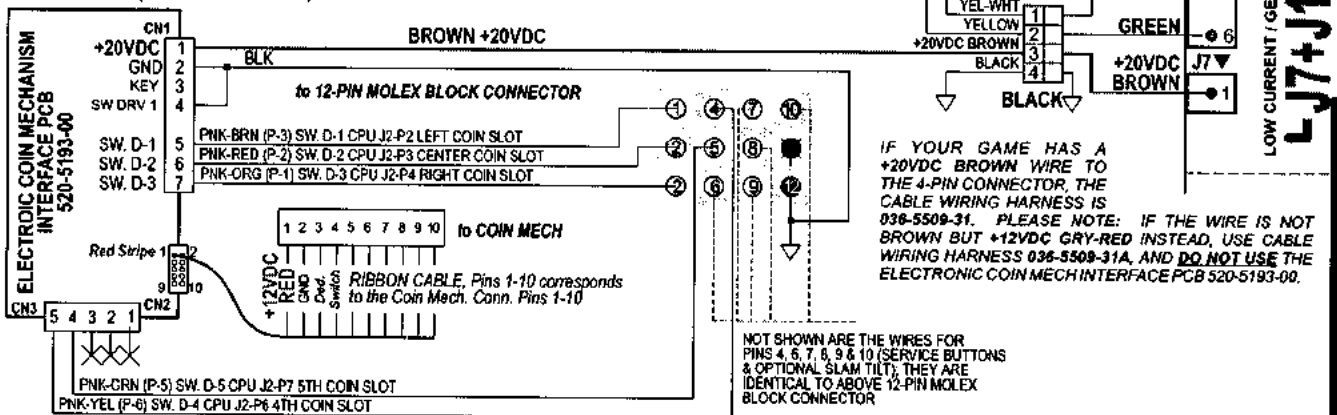


- WIRING CONFIGURATION WILL VARY ACCORDING TO COUNTRY -

Cabinet and Coin Door Wiring

Cabinet Universal Voltage Jumper Plugs (for use with Universal AC Cable, 036-5530-00 ONLY)

JUMPER PLUG ▼
(SPI PART #036-5530-120)
110+VAC
N. AMERICA
LINE VOLTAGE

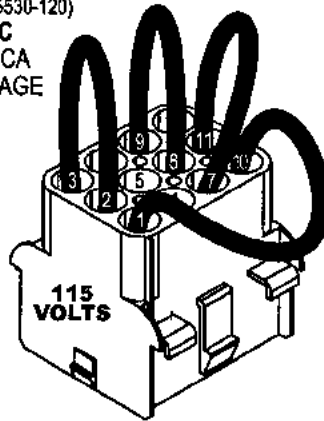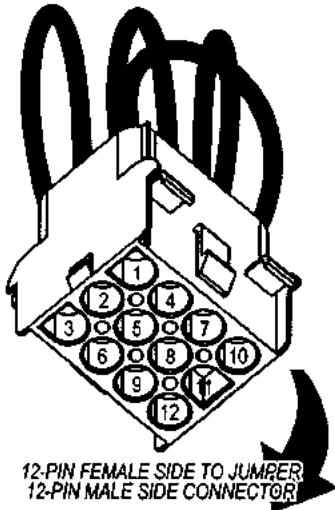


12-PIN FEMALE SIDE TO JUMPER
12-PIN MALE SIDE CONNECTOR

9-PIN MALE SIDE TO TRANSFORMER
9-PIN FEMALE SIDE CONN.

- 1 BLK
- 2 BLK
- 3 WHT-BLK
- 4 WHT-BRN
- 5 WHT-BRN
- 6 BRN (or YEL-WHT)
- 7 WHT-ORG
- 8 WHT-ORG
- 9 ORG
- 10 BLK
- 11 WHT
- 12 N/U

12-PIN F/M CONN.
BACK VIEW ▲


9-PIN F/M CONN.
▲ BACK VIEW

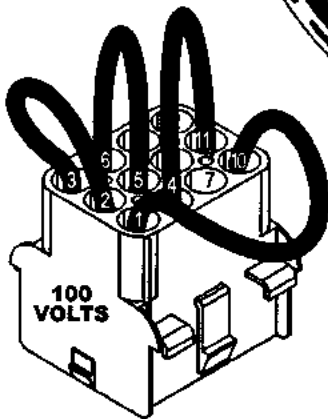


◀ JUMPER PLUG
(SPI PART #036-5530-100)
98VAC - 109VAC
JAPAN or
N. AMERICA LOW
LINE VOLTAGE

Black & White wires from
the POWER BOX, cabinet bottom
to 12-Pin Conn., Pins 10 & 11..


JUMPER PLUG ▼
(SPI PART #036-5530-206)
200VAC - 211VAC
EUROPE and
MID. EAST LOW
LINE VOLTAGE

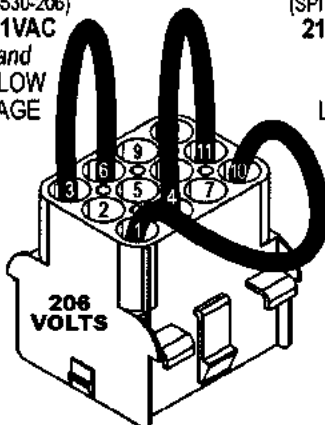

JUMPER PLUG ▼
(SPI PART #036-5530-220)
212VAC - 224VAC
EUROPE and
MID. EAST
LINE VOLTAGE




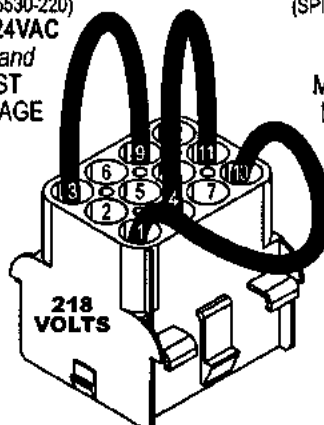


JUMPER PLUG ▼
(SPI PART #036-5530-230)
225+VAC
EUROPE and
MID. EAST HIGH
LINE VOLTAGE

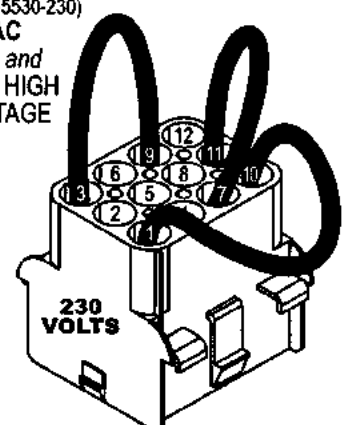

Cabinet and Coin
Door Wiring

Transformer Power Wiring Diagram

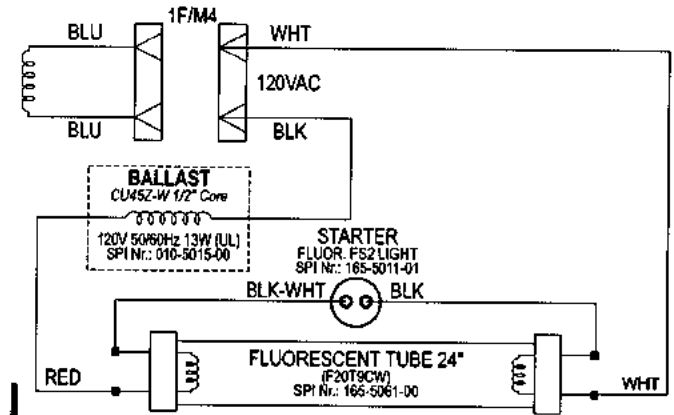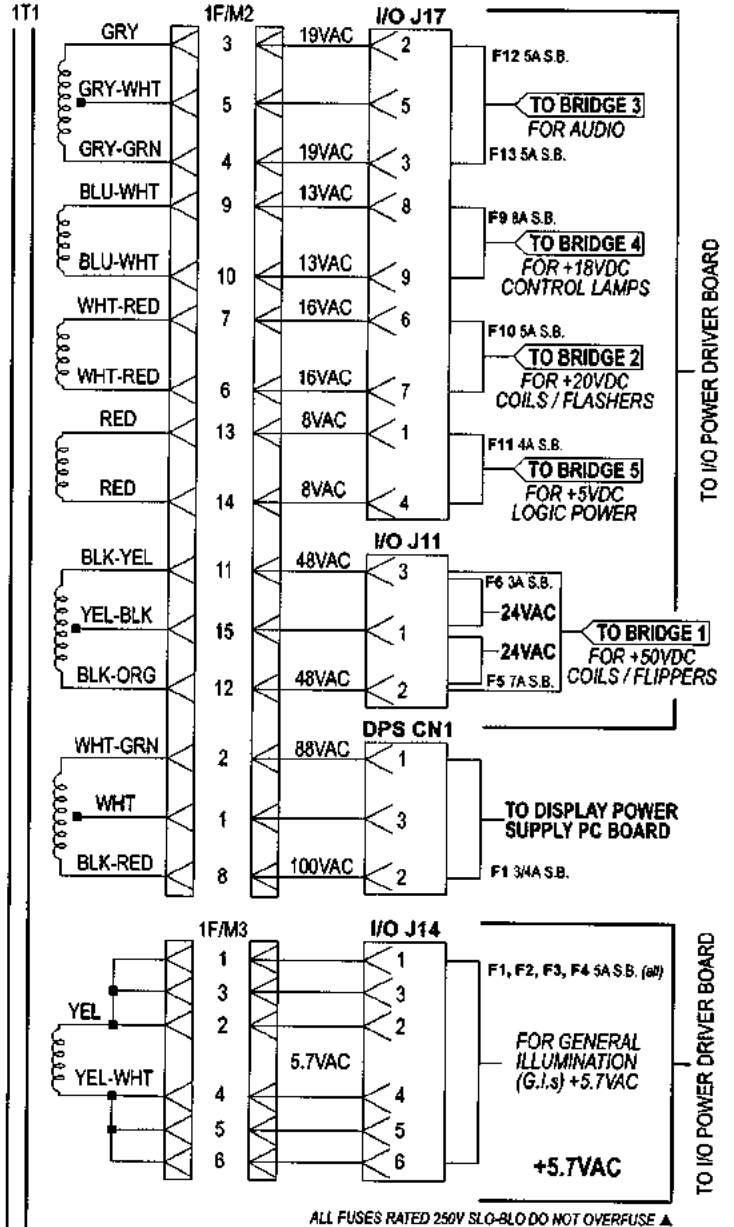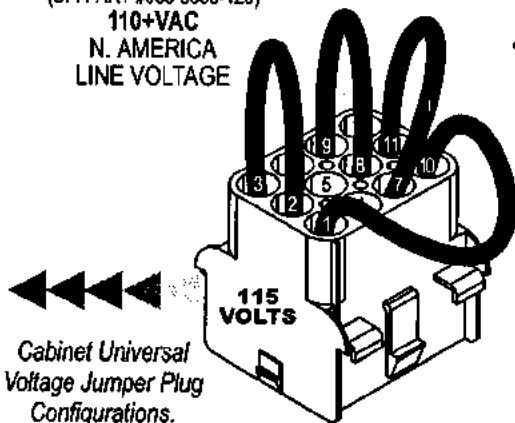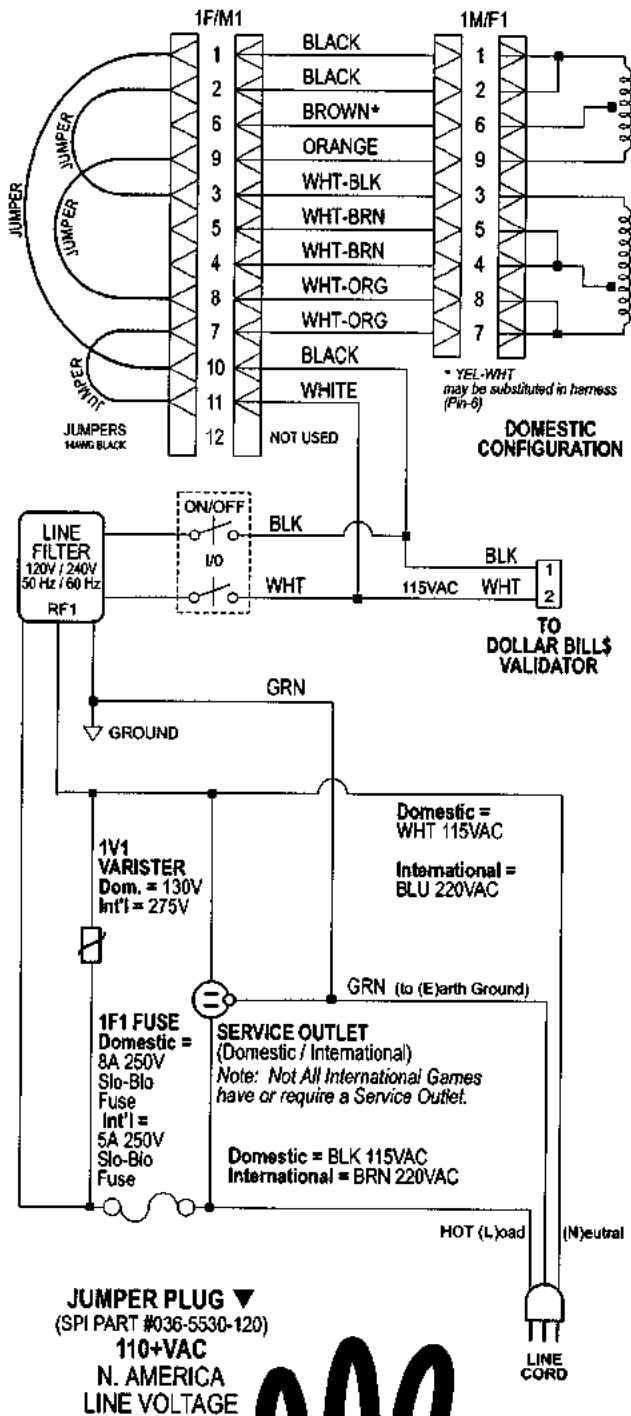

FLUORESCENT TUBE, STARTER & BALLAST LOCATED IN THE BACKBOX

Playfield Terminal Strips




Explanation:

All Switches, Lamps & Coils require diodes. Coil diodes are located on the I/O Power Driver PCB (in Backbox). Some diodes from switches or lamps are moved onto Terminal Strips (*located under the playfield*). This is done where space constraints or excessive vibrations are present. The Switch & Lamp Matrix Grids also note which Switch or Lamp has a diode on a Terminal Strip, noted by **DOTS** (Diode On Terminal Strip).

Note: Some wires 'appear' to be doubled on the lugs. The switches and lamps are in a series, so you may see 1 or 2 wires depending where the switch or lamp is in the string.

Typical Switch Wiring & Schematic

... with Switch Diode on a Terminal Strip (DOTS)

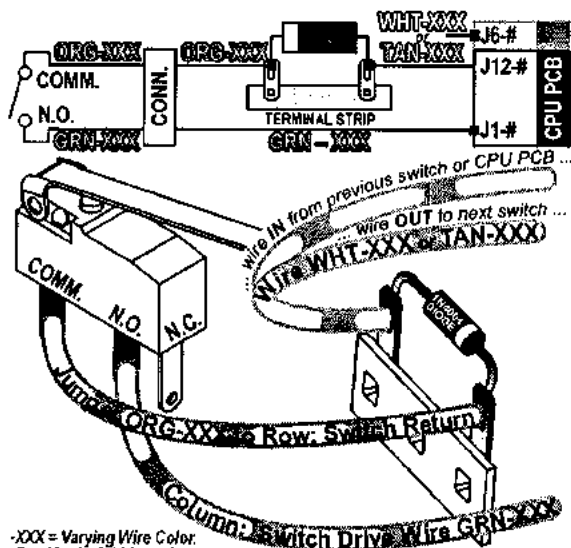


XXX = Varying Wire Color.
See Matrix Grid for color.

Typical Lamp Wiring & Schematic

... with Lamp Diode on a Terminal Strip (DOTS)

Usually when a #555 Bulb is used as a Controlled Lamp for a Spot Light.

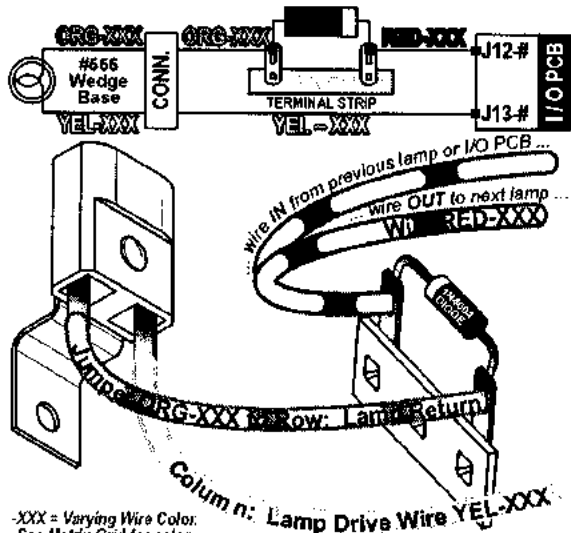


XXX = Varying Wire Color.
See Matrix Grid for color.

Typical Lamp Wiring & Schematic

... with Lamp Diode on a Terminal Strip (DOTS)

Usually when an LED Module is used as a Controlled Lamp for a Pop Bumper.

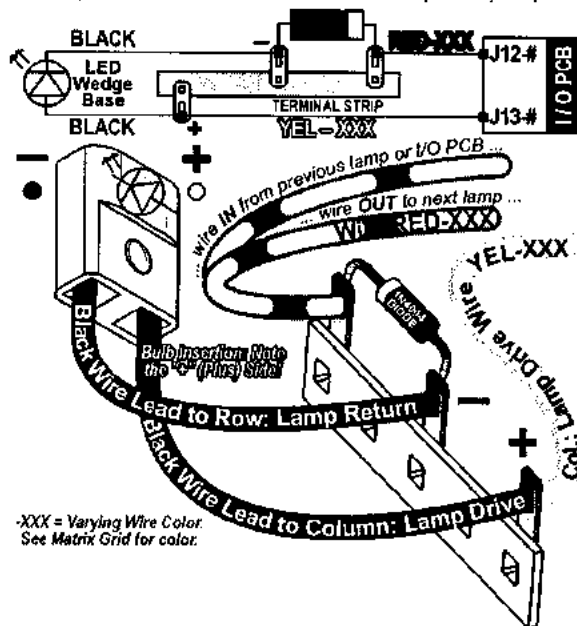


XXX = Varying Wire Color.
See Matrix Grid for color.

TRON

June 29, 2011


MOTORS & RELAYS WIRING

Relay Cable 036-5570-06-B9

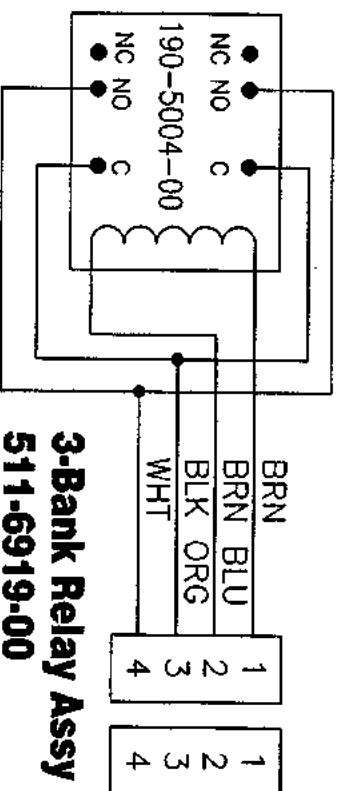


**3-Bank Relay Assy
511-6919-00**


**Motor and Cable
Assy 511-5063-00**

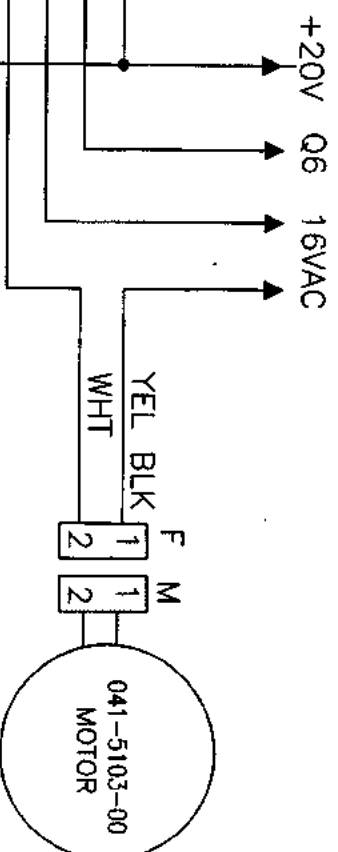

Relay Cable 036-5570-08-B9

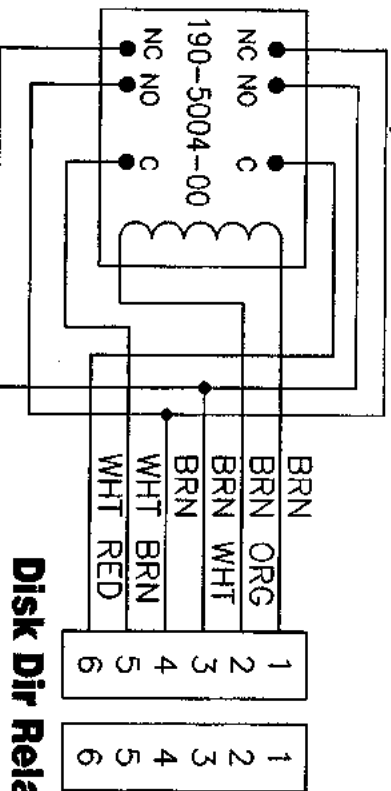


**Disk Dir Relay Assy
511-6919-02**

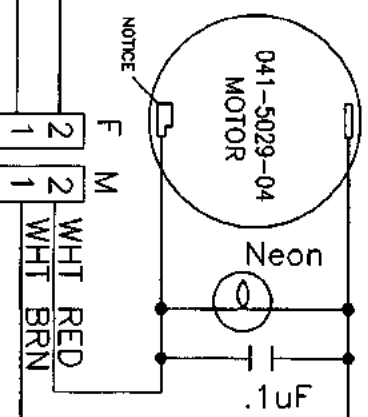


**Motor and Cable
Assy 511-5190-00**

Relay Cable 036-5570-07-B9

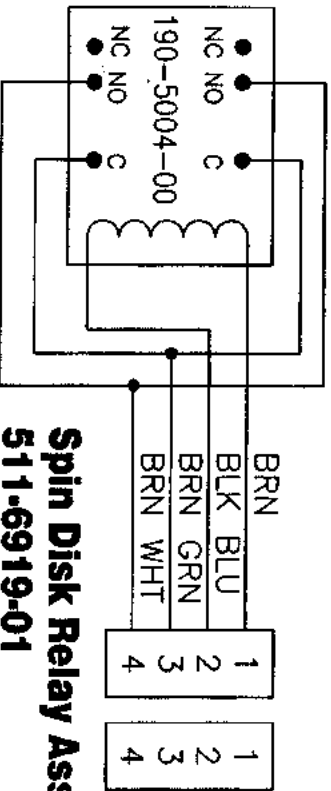

**Spin Disk Relay Assy
511-6919-01**

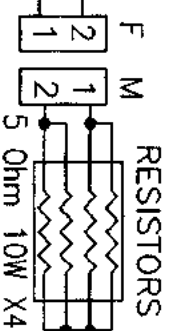


**Resistor Assy
511-5200-00**

TRON PREMIUM


MOTORS & RELAYS WIRING

AUGUST 11, 2011

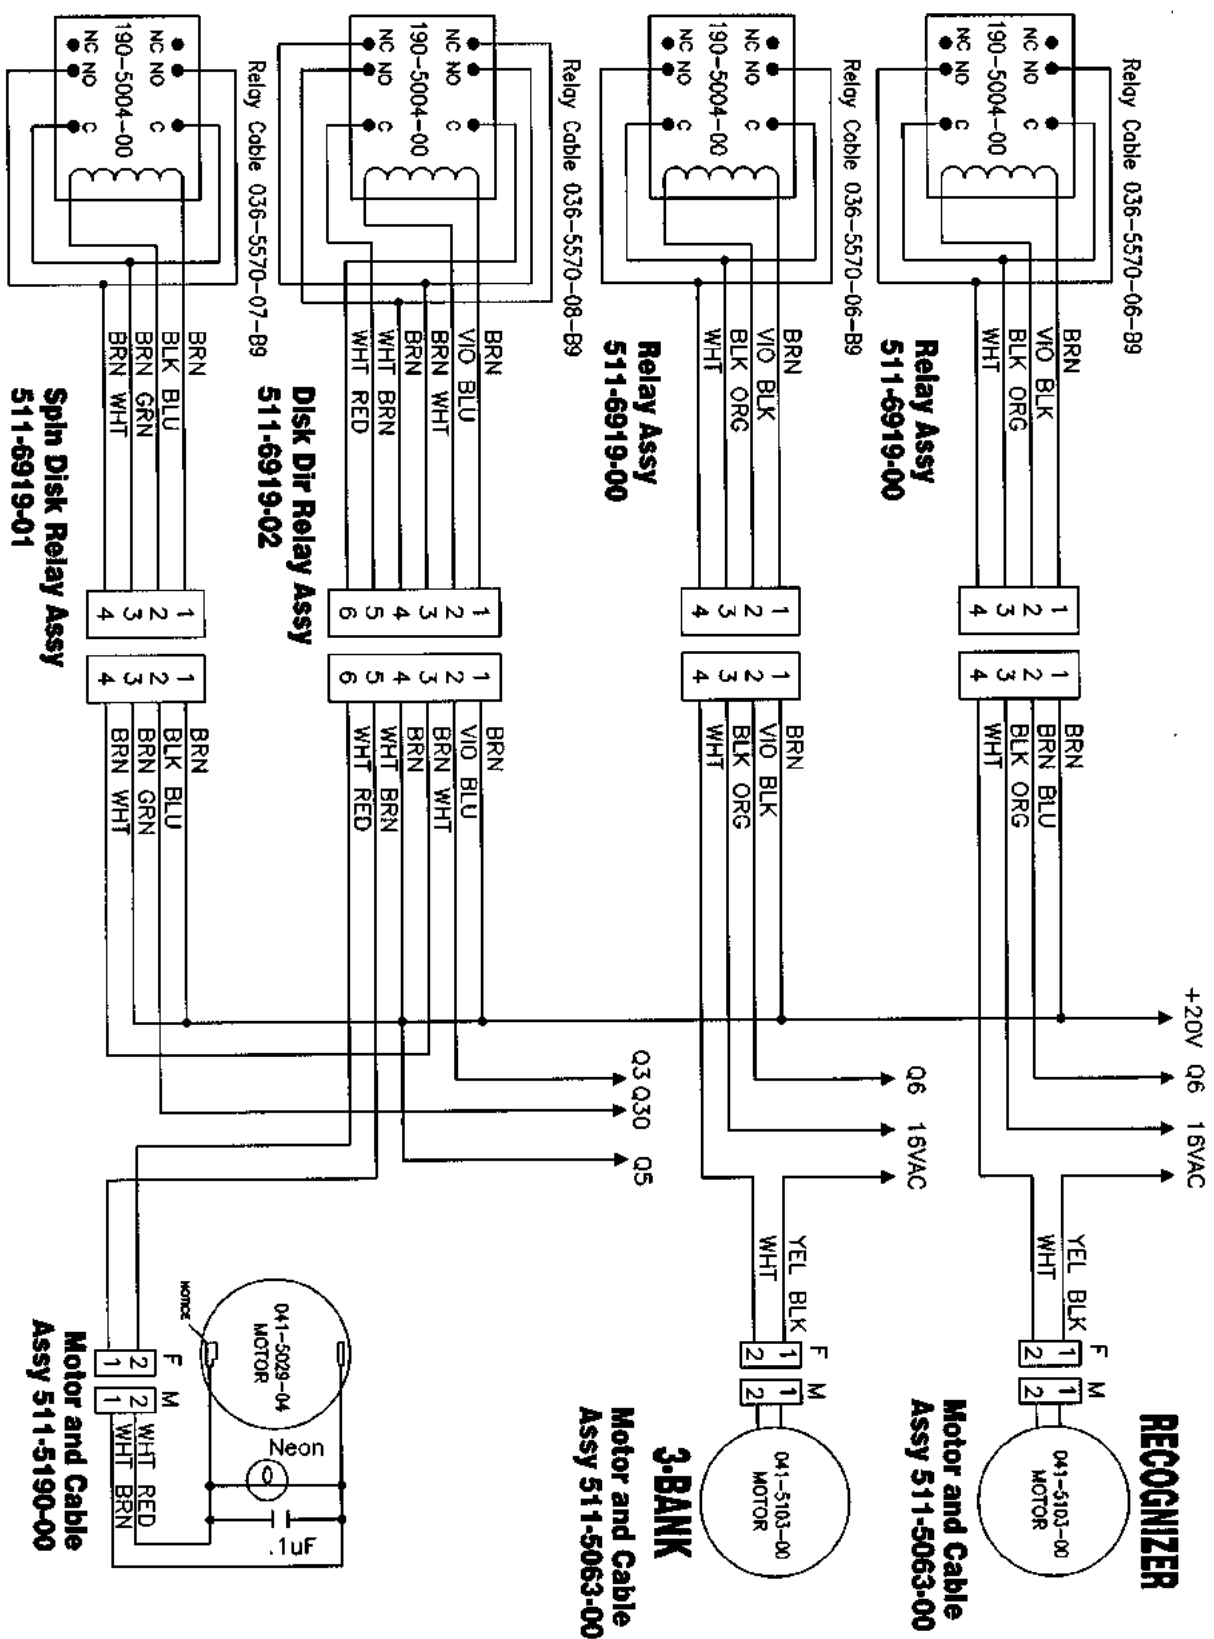


TRON PREMIUM

MAY 27, 2011

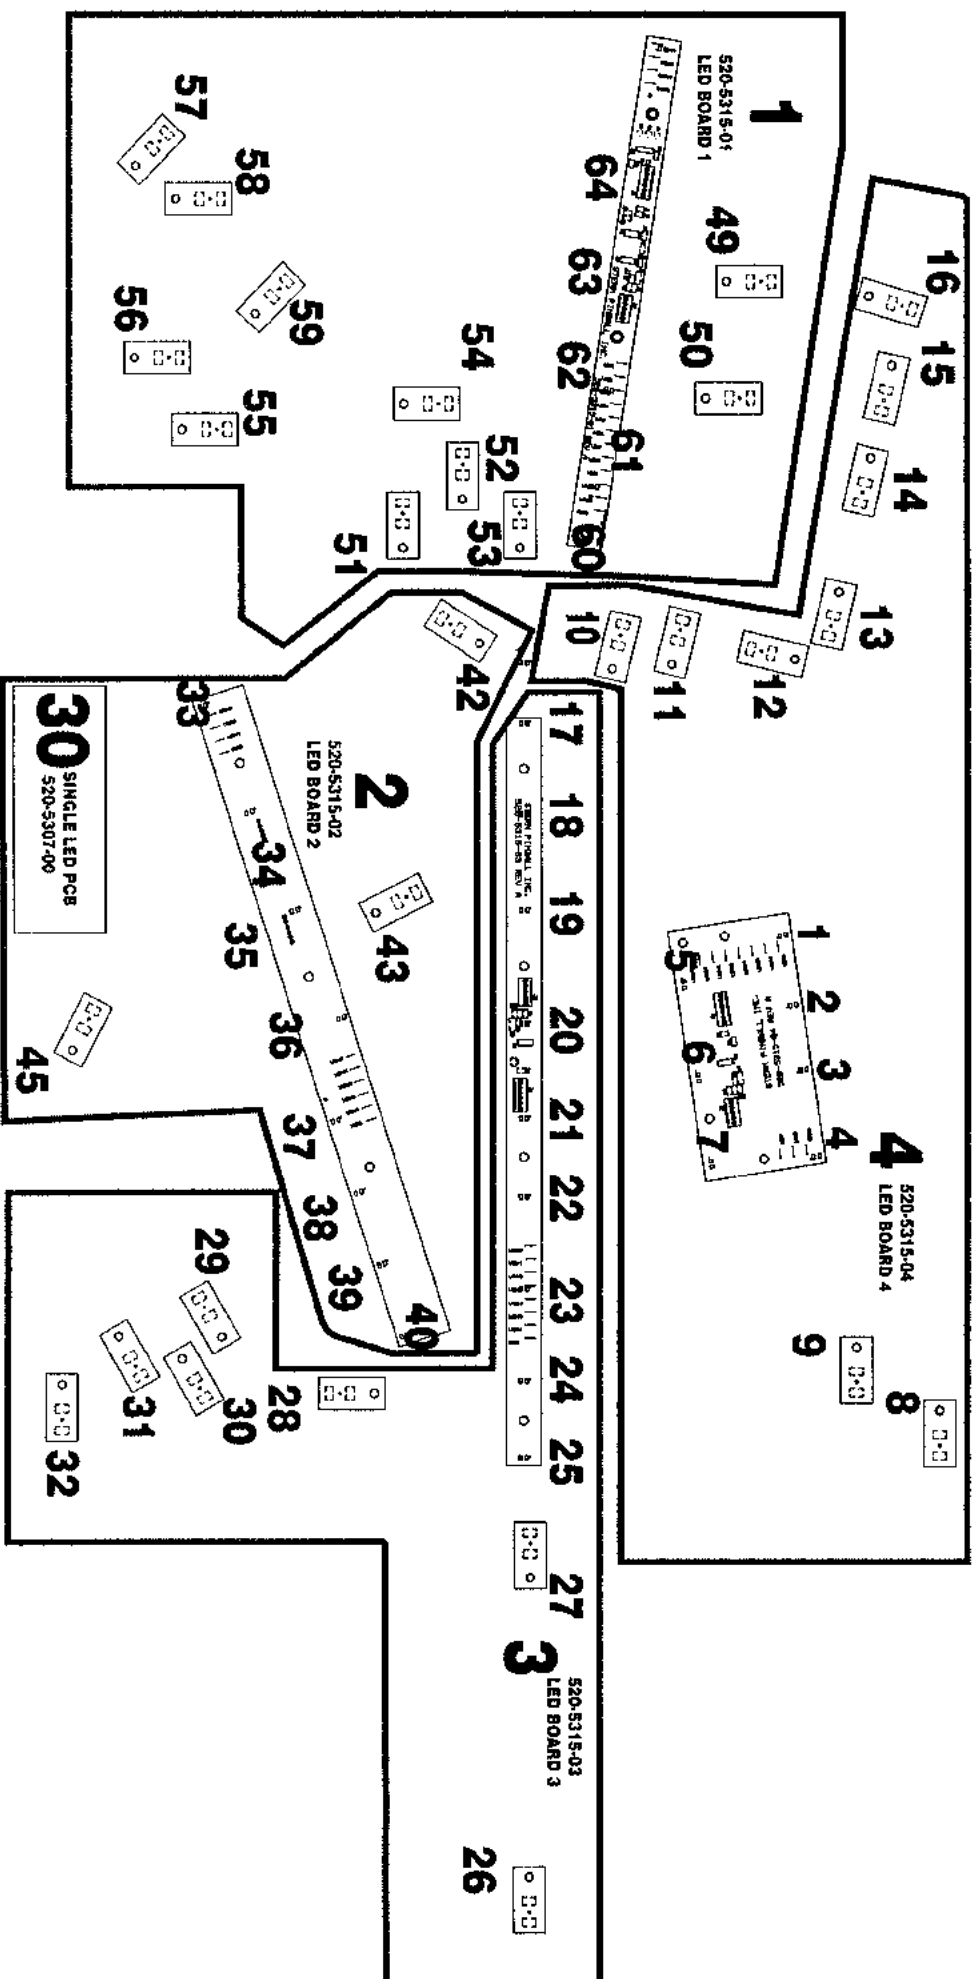

ITEM #	QTY	PART #	DESCRIPTION
1	1	535-0454-01	ALUMINUM HOUSING - TRI-COLOR LED
2	1	520-6312-01	DUAL TRI-COLOR LED BOARD
3	2	232-6201-00	SCREW, 6-32 X 3/8" PPH MS SEMS
4	2	237-6183-00	SET SCREW, #4-40 X .5 LG CUP PT. SKT BL OXIDE
5	2	242-6082-00	11/64" ID X 3/8" OD X .031 FIBER WASHER

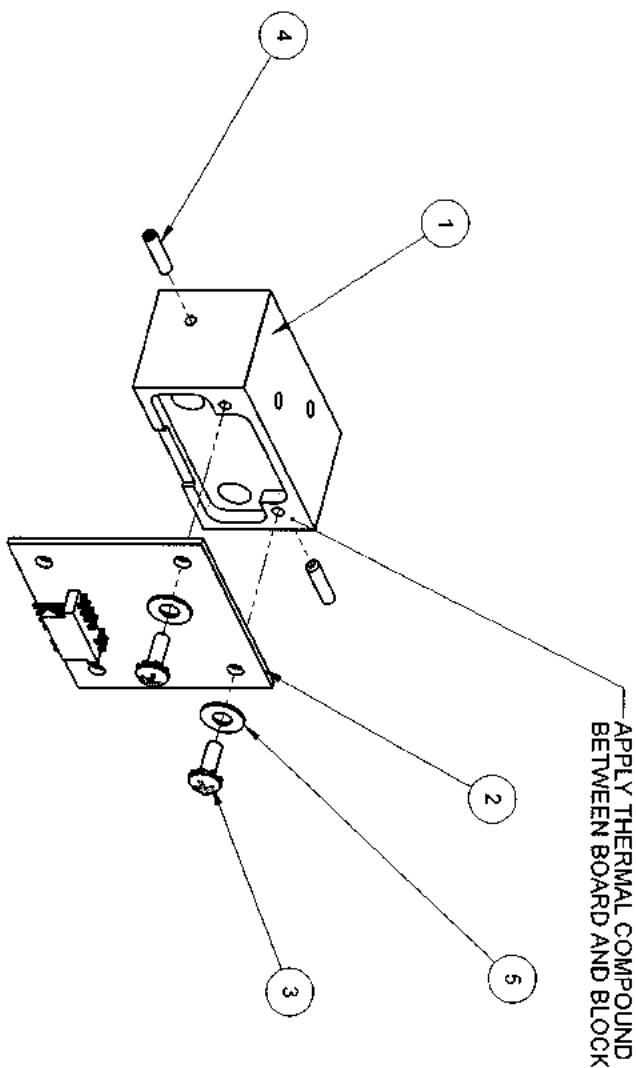


DUAL TRI-COLOR LED BOARD ASSEMBLY

511-6927-01


TRON PREMIUM (C2)

Fiber Optic LED wiring

June 1, 2011

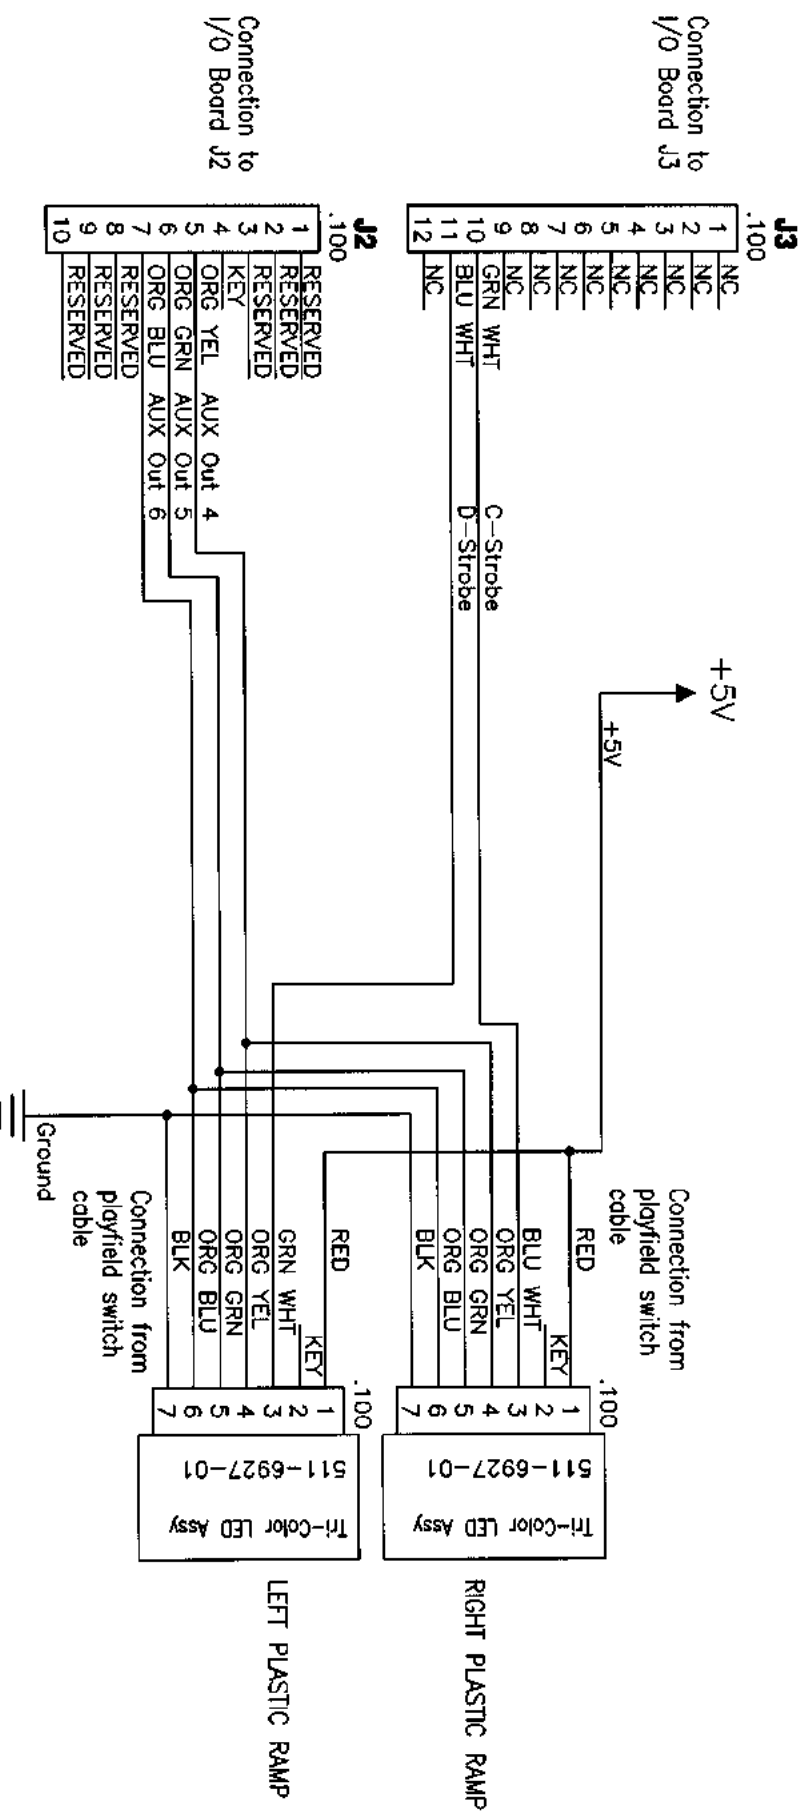

I/O POWER DRIVER PCB S.A.M. System (520-5249-00) Component Layout

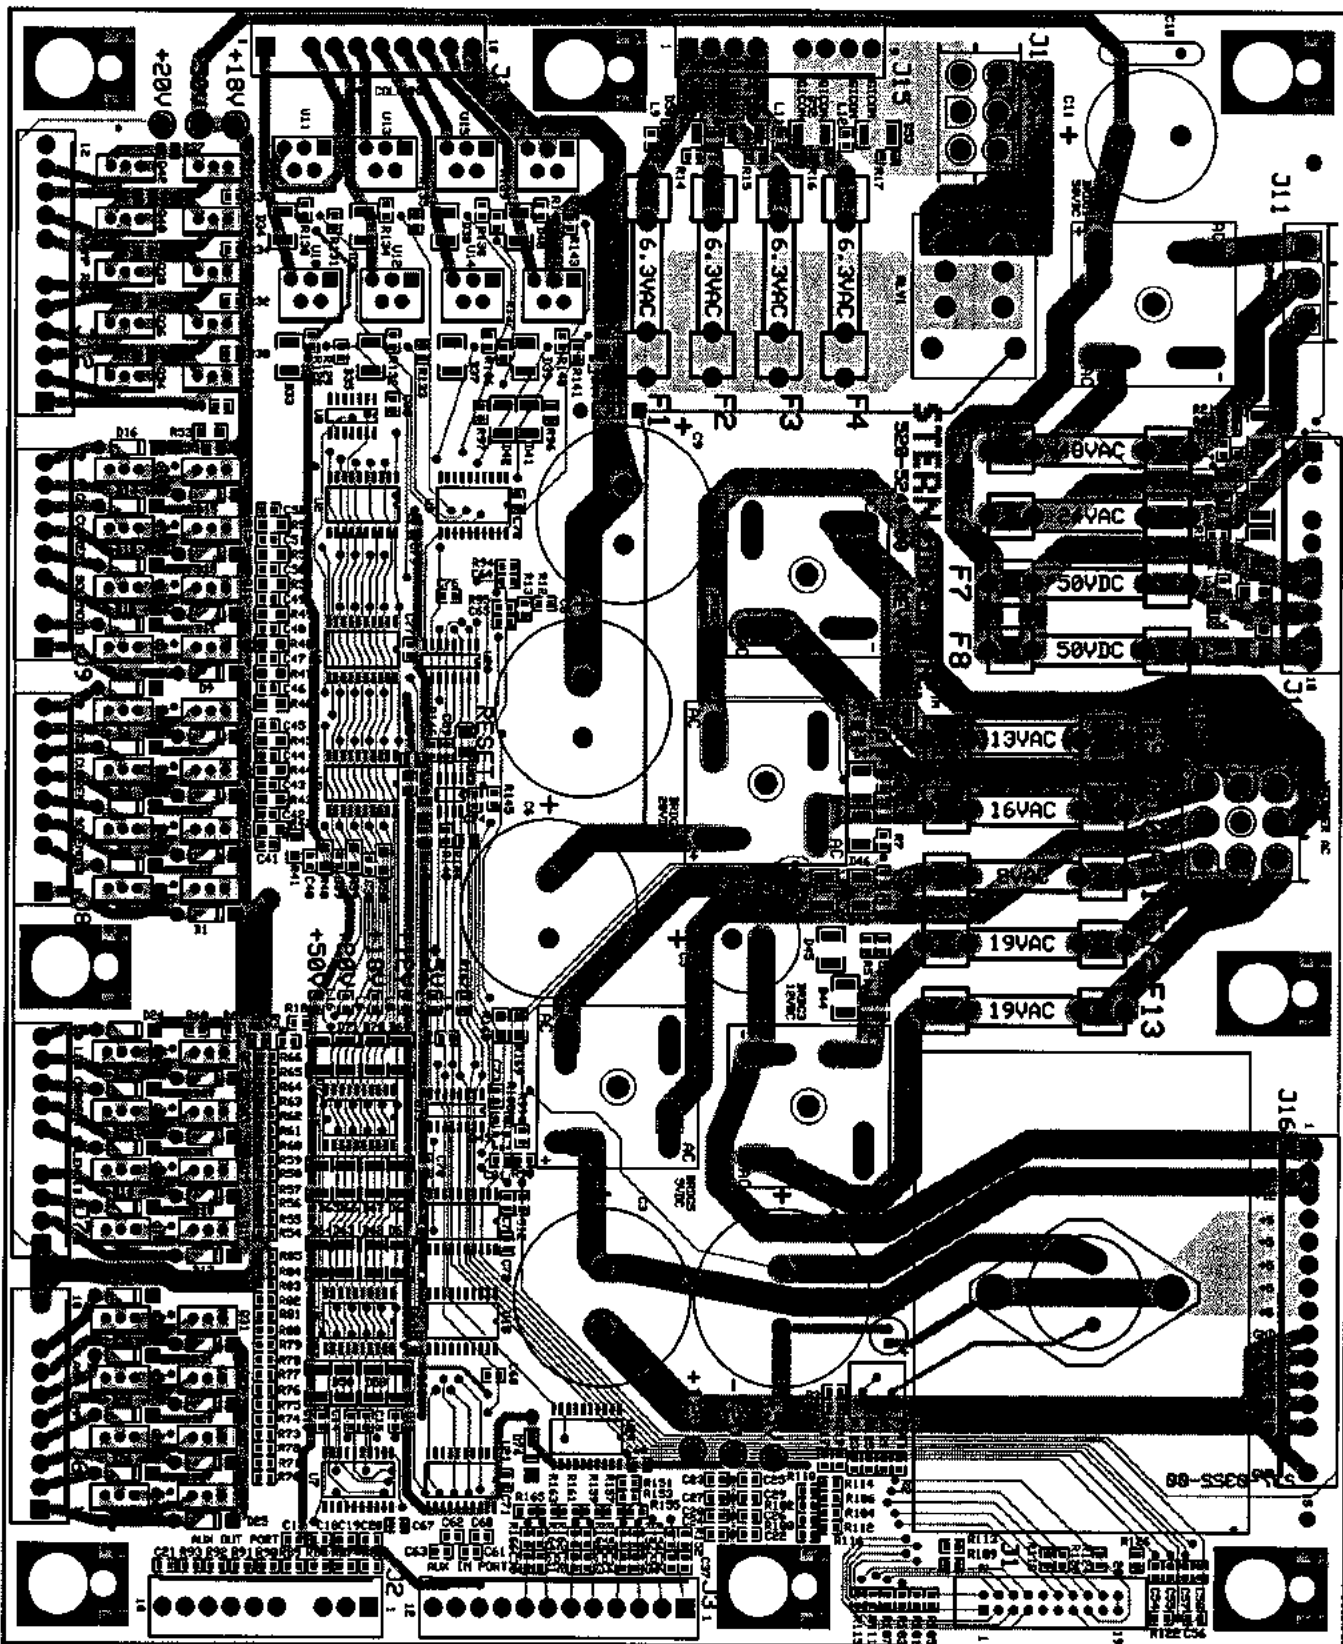


I/O POWER DRIVER PCB S.A.M. System (520-5249-00) Parts

ITEM	QTY.	SPI PART NUMBER	(MFG. P.N.)	REF-DESIGNATOR	DESCRIPTION (SM = Surface Mount)
1	1	520-5249-00		I/O Power Driver PCB (S.A.M. System), Rev. A	(includes Items 1-57)
1	1	121-6001-00	(101-0001807)	R9	Resistor SM 0805 Film 1.5KΩ 1/10W 5%
2	22	121-6002-00	(101-0001820)	R86, R87, R88, R89, R90, R91, R92, R93, R102, R104, R106, R108, R110, R112, R114, R116, R118, R120, R122, R124, R126, R146	Resistor SM 0805 Film 100Ω 1/10W 5%
3	12	121-6020-00	(101-0001827)	R21, R94, R95, R101, R103, R105, R107, R109, R111, R113, R115, R144	Resistor SM 0805 Film 10KΩ 1/10W 5%
4	1	121-6003-00	(101-0001845)	R2	Resistor SM 0805 Film 120Ω 1/10W 5%
5	20	121-6022-00	(101-0001905)	R7, R8, R10, R11, R12, R13, R18, R19, R98, R100, R150, R152, R154, R156, R158, R160, R162, R164, R166, R167	Resistor SM 0805 Film 1KΩ 1/10W 5%
6	2	121-6004-00	(101-0001943)	R6, R145	Resistor SM 0805 Film 220Ω 1/10W 5%
7	16	121-6005-00	(101-0001849)	R55, R57, R59, R61, R63, R65, R67, R69, R71, R73, R75, R77, R79, R81, R83, R85	Resistor SM 0805 Film 22KΩ 1/10W 5%
8	2	121-6006-00	(101-0002012)	R3, R149	Resistor SM 0805 Film 330Ω 1/10W 5%
9	3	121-6007-00	(101-0002031)	R1, R4, R5	Resistor SM 0805 Film 390Ω 1/10W 5%
10	8	121-6013-00	(101-0002035)	R151, R153, R155, R157, R159, R161, R163, R165	Resistor SM 0805 Film 39KΩ 1/10W 5%
11	9	121-6008-00	(101-0002046)	R96, R97, R99, R117, R119, R121, R123, R125, R148	Resistor SM 0805 Film 4.7KΩ 1/10W 5%
12	8	121-6014-00	(101-0002065)	R129, R131, R133, R135, R137, R139, R141, R143	Resistor SM 0805 Film 47Ω 1/10W 5%
13	1	121-6015-00	(101-0002071)	R20	Resistor SM 0805 Film 47KΩ 1/10W 5%
14	8	121-6009-00	(101-0002108)	R128, R130, R132, R134, R136, R138, R140, R142	Resistor SM 0805 Film 6.8KΩ 1/10W 5%
15	16	121-6010-00	(101-0002118)	R54, R56, R58, R60, R62, R64, R66, R68, R70, R72, R74, R76, R78, R80, R82, R84	Resistor SM 0805 Film 620Ω 1/10W 5%
16	4	121-6016-00	(101-0002128)	R14, R15, R16, R17	Resistor SM 0805 Film 680Ω 1/10W 5%
17	10	121-6011-00	(101-0002296)	R28, R29, R30, R31, R32, R33, R34, R35, R36, R37	Resistor SM 1206 Film 22KΩ 1/10W 5%
18	8	121-6012-00	(101-0002473)	R22, R23, R24, R25, R26, R27, R168, R169	Resistor SM 1206 Film 8.2KΩ 1/10W 5%
19	16	121-6013-01	(101-0002378)	R38, R39, R40, R41, R42, R43, R44, R45, R46, R47, R48, R49, R50, R51, R52, R53	Resistor SM 1206 Film 39KΩ 1/10W 5%
20	16	125-6001-00	(121-0000056)	C2, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C76, C77, C78, C79, C80	Capacitor SM 0805 Cer. .1UF 50V 10% X7R
21	25	125-6002-00	(121-0000096)	C13, C14, C15, C16, C17, C18, C19, C20, C21, C30, C31, C32, C33, C34, C35, C36, C37, C59, C80, C81, C82, C83, C84, C85, C81	Capacitor SM 0805 Cer. 470PF 50V 5% NPO
22	18	125-6003-00	(121-0004236)	C7, C12, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53	Capacitor SM 0805 Cer. .01UF 50V 10% X7R
23	13	125-6004-00	(121-0005318)	C22, C23, C24, C25, C26, C27, C28, C29, C54, C55, C56, C57, C58	Capacitor SM 0805 Cer. 22PF 100V 5% NPO
24	1	125-5032-00	(131-0003773)	C1	Capacitor Tht. Radial Alum. 100UF 25V 20%
25	1	125-5034-00	(131-0003864)	C5	Capacitor Tht. Radial Alum. 4700UF 35V 20%
26	1	125-5029-01	(133-0003741)	C10	Capacitor Tht. Disc Cer. .1UF 500V 20%
27	1	125-6022-00	(134-0003846)	C11	Capacitor Tht. Radial Alum. 330UF 160V 20%
28	5	125-5036-01	(134-0004000)	C3, C4, C6, C8, C9	Cap. Tht. Rad. Al. 15000UF 35V 20% Snap-In
29	34	112-6001-01	(183-0004374)	D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, D16, D17, D18, D19, D20, D21, D22, D23, D24, D25, D26, D27, D28, D29, D30, D31, D32, D49, D74	Diode Tht. DO-41 1N4004 400V 1A
30	5	112-5000-00	(187-0004700)	BRDG1, BRDG2, BRDG3, BRDG4, BRDG5	Bridge Tht. Fullwave 100V 35A MB-35
31	10	110-0088-01	(203-0003591)	Q33, Q34, Q35, Q36, Q37, Q38, Q39, Q40, Q41, Q42	Fet Tht. TO-220 STP20NE06L NFet 60V 20A
32	16	110-0106-00	(203-0003592)	Q1, Q2, Q3, Q4, Q5, Q6, Q7, Q8, Q9, Q10, Q11, Q12, Q13, Q14, Q15, Q16	Fet Tht. TO-220 20N10L NFet 100V 20A
33	8	110-0089-00	(203-0003597)	U10, U11, U12, U13, U14, U15, U16, U17	Fet Tht. PENTAWAT VN02N NFet HighSide 26V 6A
34	2	110-0089-01	(211-0003589)	Q44, Q45	Trans. SM SOT-23 MMST3904 NPN 40V 0.2A
35	16	110-0067-00	(213-0003565)	Q17, Q18, Q19, Q20, Q21, Q22, Q23, Q24, Q25, Q26, Q27, Q28, Q29, Q30, Q31, Q32	Transistor Tht. TO-220 TIP122 NPN 100V 5A
36	3	100-6003-00	(221-0000972)	U18, U22, U24	I.C. SM SOIC 74HC245 Oct. Bus. Xcvt.
37	1	100-6000-00	(221-0011253)	U23	I.C. SM SOIC DS1832S, SO-8
38	8	100-5056-00	(221-0001287)	U2, U3, U4, U5, U6, U7, U9, U21	I.C. SM SOIC 74HCT273 Oct. D F-F
39	2	100-6001-00	(221-0003728)	U19, U20	I.C. SM SO 74LS138D Hex Inverter; 3-8 DC/DMX
40	1	100-6002-00	(221-0011135)	U8	I.C. SM SOIC 74LS74AD SOIC-14
41	1	100-0356-00	(225-0003582)	U1	I.C. Tht. TO-3 LM338 5A Adjust. Voltage Reg.
42	5	045-	(315-0003427)	J2, J6, J7, J10, J13	Con. Tht. Hdr. 10 Pin, 1 Row, 156"
43	1	045-	(315-0006910)	J1	Con. Tht. Hdr. 20 Pin, 2 Row, 1"
44	2	045-	(315-0003430)	J3, J12	Con. Tht. Hdr. 12 Pin, 1 Row, 156"
45	1	045-	(315-0003432)	J18	Con. Tht. Hdr. 15 Pin, 1 Row, 156"
46	1	045-	(315-0003503)	J11	Con. Tht. Pwr. 3 Pin, 1 Row, 25"
47	1	045-	(315-0003504)	J14	Con. Tht. Pwr. 6 Pin, 2 Row, 25"
48	1	045-	(315-0003505)	J17	Con. Tht. Pwr. 9 Pin, 3 Row, 25"
49	3	045-	(315-0003821)	J8, J9, J15	Con. Tht. Hdr. 9 Pin, 1 Row, 156"
50	2	200-5000-08	(407-0003117)	F6, F8	Fuse 3 Amp 250V Slo-Blo (Glass, Tht. 3AG)
51	2	200-5000-06	(407-0003118)	F7, F11	Fuse 4 Amp 250V Slo-Blo (Glass, Tht. 3AG)
52	7	200-5000-01	(407-0003119)	F1, F2, F3, F4, F10, F12, F13	Fuse 5 Amp 250V Slo-Blo (Glass, Tht. 3AG)
53	1	200-5000-03	(407-0003121)	F5	Fuse 7 Amp 250V Slo-Blo (Glass, Tht. 3AG)
54	1	200-5000-05	(407-0003122)	F9	Fuse 8 Amp 250V Slo-Blo (Glass, Tht. 3AG)
55	1	121-5039-00	(415-0004788)	POT1	Potentiometer THT 50K Single Turn Adjust. Trimr.
56	1	165-6000-00	(425-0006913)	L18	LED SM Yellow 0805 LED
57	5	165-6001-00	(425-0007753)	L4, L6, L8, L16, L19	LED SM Green Ultrabright Top
58	13	165-6002-00	(425-0007755)	L1, L2, L3, L5, L7, L9, L10, L11, L12, L15, L17	LED SM Red Ultrabright Top 0805 LED
59	1	190-5002-00	(448-0004778)	RLY1	Relay Tht. GW DPDT10A DC24 2400VA PC MNT
60	1	127-5001-00	(461-0003520)	for BRDG 4, BRDG 5	Heatsink, Sq. Finned Ba TO-220 Avid 531102
61	1	127-5001-02	(461-0003534)	for U1	Heatsink, Sq. Finned Ba TO-220 Avid 531102
62	1	127-5001-04	(579103B000000G)	for U1 on TO-3 LM338 5A Adj. Volt. Reg.	Heatsink, Circular Finned (Mfg. Aavid)
63	4	240-5008-00	(503-0004469)	2 pcs. for U1 1 pc. each for BRDG 4 & 5	#6-32 Keps Nut
64	26	205-0004-00	(503-0004667)	2 pcs. each for F1 - F13	Fuseclip with End Stops (+ Ears)
65	4	237-5504-00	(504-0004610)	2 pcs. for U1 1 pc. each for BRDG 4 & 5	#6-32 X 3/4" FPH MS (Zinc) Screw
66	2	254-5007-02	(507-0004544)	for BRDG 4 & 5 (Mfg. .169" I.D. X .932" O.D. X 1/4")	1/4" Sif. Rtn. Spacer White
67	5	254-5007-05	(507-0004547)	for BRDG1, 2 & 3 and for Mounting Holes (Mfg. .169" I.D. X .932" O.D. X 5/16")	5/16" Sif. Rtn. Spacer White

Printed Circuit Boards

CPU / SOUND PCB S.A.M. System (520-5246-00) Component Layout

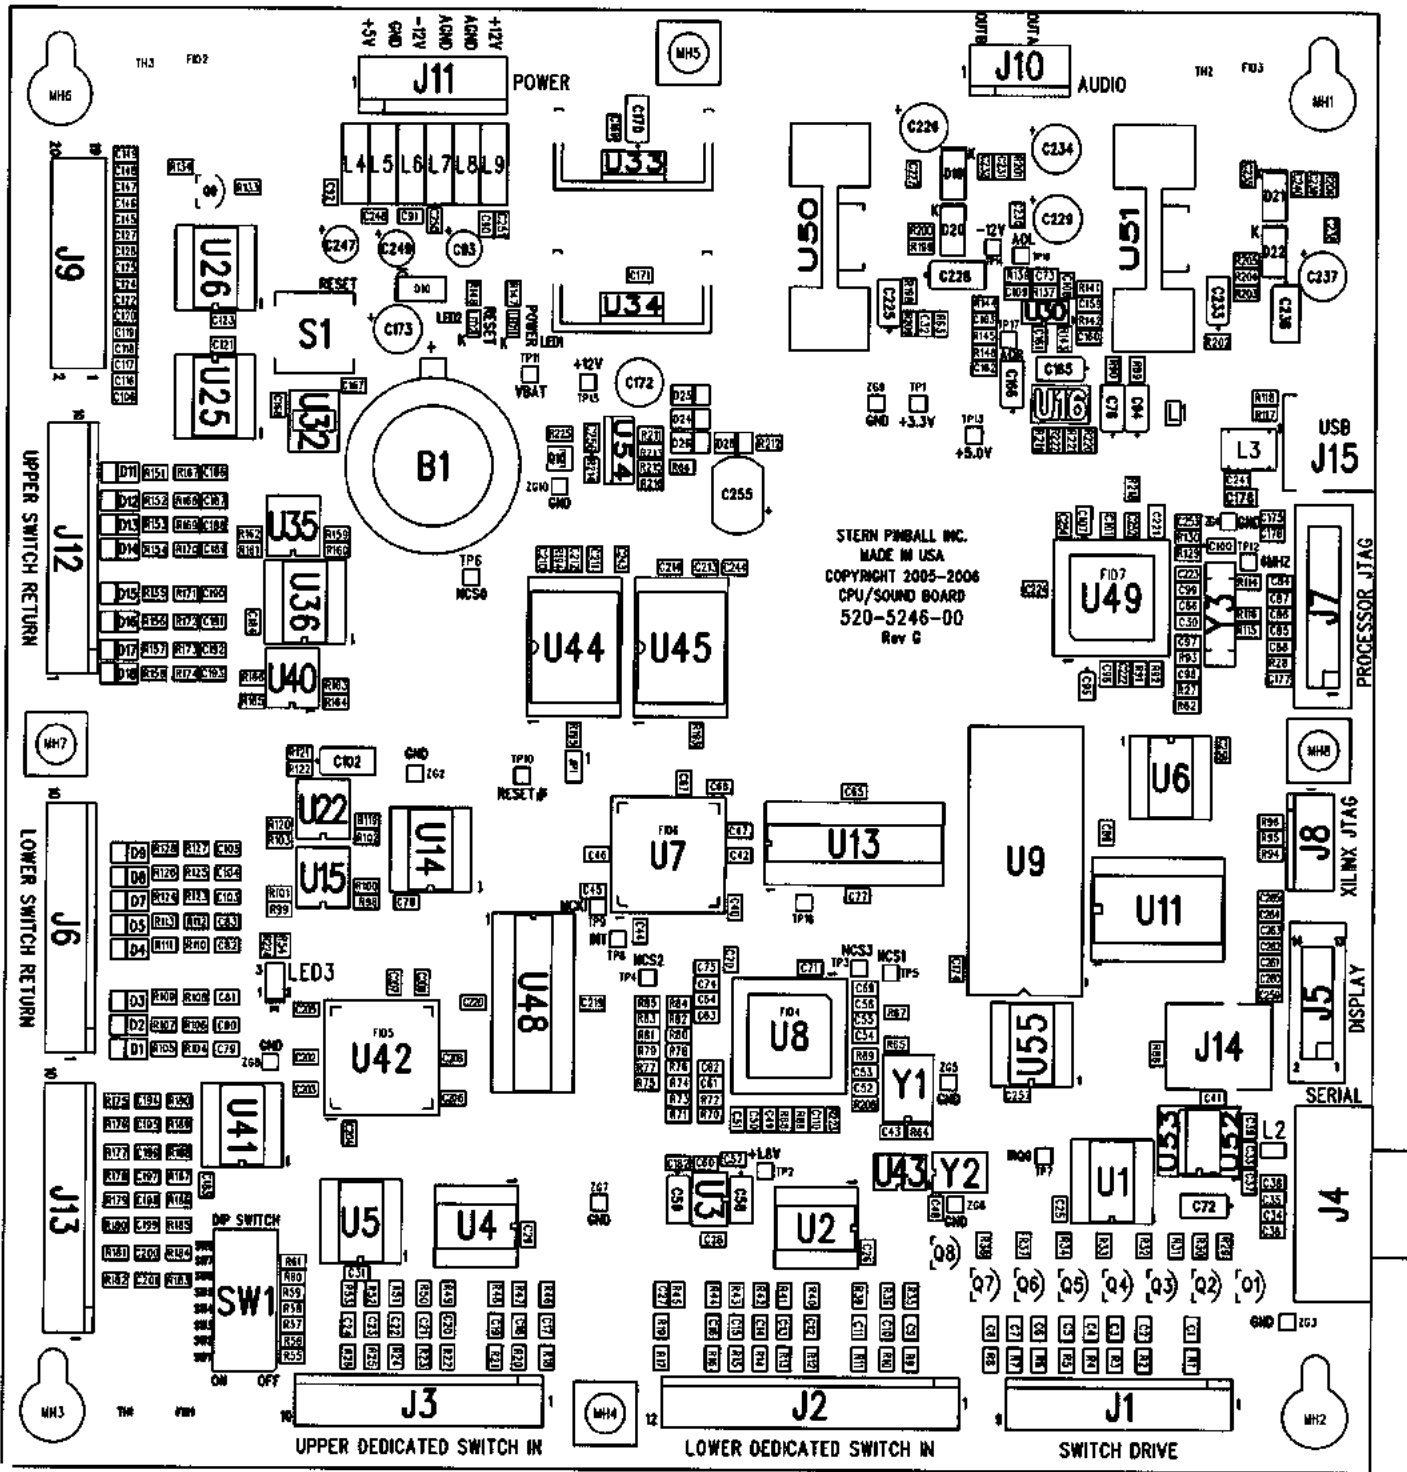

CPU / SOUND PCB S.A.M. System (520-5246-00) Component Parts

ITEM	QTY.	SPI PART NUMBER	(MFG. P.N.)	REF-DESIGNATOR	DESCRIPTION (SM = Surface Mount)
1	1	520-5246-00		CPU/Sound PCB (S.A.M. System), Rev. G	(includes Items 1-90)
2	3	121-6017-00	(101-0001790)	R27, R202, R212	Resistor SM 0805 0.0Ω 1/10W 5%
1	2	121-6108-00	(101-0001792)	R201, R206	Resistor SM 0805 1.0Ω 1/10W 5%
3	24	121-6001-00	(101-0001807)	R9, R10, R11, R12, R13, R14, R15, R16, R18, R20, R21, R22, R23, R24, R25, R26, R175, R176, R177, R178, R179, R180, R181, R182, R147, R148, R211	Resistor SM 0805 1.5KΩ 1/10W 5%
4	3	121-6002-00	(101-0001820)		Resistor SM 0805 Film 100Ω 1/10W 5%
5	24	121-6019-00	(101-0001823)	R64, R66, R67, R68, R70, R71, R72, R73, R74, R75, R76, R77, R78, R79, R80, R81, R82, R83, R84, R85, R89, R90, R92, R208	Resistor SM 0805 100KΩ 1/10W 5%
6	33	121-6020-00	(101-0001827)	R28, R65, R91, R98, R99, R100, R101, R102, R103, R119, R120, R134, R137, R139, R141, R142, R143, R144, R145, R146, R159, R160, R161, R162, R163, R164, R165, R166, R193, R194, R195, R223, R225, R117, R118	Resistor SM 0805 Film 10KΩ 1/10W 5%
7	2	121-6021-00	(101-0001880)		Resistor SM 0805 15KΩ 1/10W 5%

Parts List Continued Next Page.

Printed Circuit Boards (PCBs)

